




# BILLET MAIN GRILLE MAIN GRILLE - #6211270 / #6211271 2016-2017 CHEVROLET SILVERADO

## **PARTS INCLUDED**

(1) Billet Grille - Main Polished - Part #21127 OR Black - Part #21127B

## HARDWARE INCLUDED

- (1) #8 x 2.5" Flat Head Phillips Sheet Metal Screws - Stainless Steel
- (6) #8 x 2" Flat Head Phillips Sheet Metal Screws - Stainless Steel
- (7) #8 U Nut
- (7) Bracket Mounts
  - \* Image of Hardware

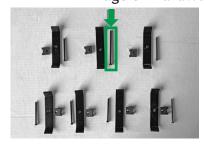

## **TOOLS REQUIRED**

- Drill
- 1/8" Drill Bit
- Screwdriver set (Phillips)
- Needle Nose Pliers
- Socket Set
- Ratchet Tool
- 1/2" Plastic Spatula

# **GRILLE REMOVAL & GRILLE INSTALLATION GUIDE**

**START HERE** 

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers off er varied models to each vehicle and occasionally manufacture more than one body style of the same model.

\* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS. \* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR GRILL.

## FRONT BUMPER REMOVAL

1) Turn off engine and chalk tires with stop block. Open Hood. Disconnect Battery.

Before you begin, use "3M Painters Tape" to apply a protective guard around the work areas Attend to the fender and bumper valance. This will



#### STEP 2

2) Begin by assembling your provided hardware. Mate the Flat Nut Plates to the Bracket Mounts.

#### **NOTE**

Use the (1) long screw in the top middle center mounting location.

Insert the remaining screws into each remaining mounting point.



## PAGE 1

## **GRILLE INSTALL - CONTINUED**

# BILLET MAIN GRILLE MAIN GRILLE - #21127 / #21127B 2016-2017 CHEVROLET SILVERADO



SEE FIGURES 2 - 4

SEE FIGURES 5 & 6

#### STEP 3

3) Pay attention to the orientation of the mounts so that it appears like in the images. (Fig 2-4)



4) At this point, you are now ready to install the billet overlay. With both hands, position the overlay grille piece over the opening, and fit it into place. Once you are satisfied with the gaps and alignment, and then press the screw / bracket assembly so that the brackets slide through the factory grille mesh openings.

#### STEP 5

5) Looking through the grille overlay, rotate the brackets so they are vertical and than screw down and tighten till overlay is secure.











## PAGE 2

## DILLE INCTALL CONTINUED MAIN COLLE #9

# BILLET MAIN GRILLE MAIN GRILLE - #21127 / #21127B 2016-2017 CHEVROLET SILVERADO

## **GRILLE INSTALL - CONTINUED**





#### STEP 6

SEE FIGURES 9 & 10

6) For the second piece of the billet grille overlay, repeat steps Four and Five.




## STEP 7

SEE FIGURES 9 & 10

7) With both hands, overlay the grille and fit it into place.





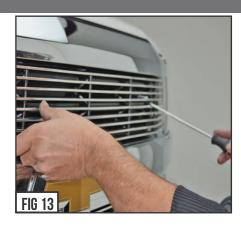

#### STEP 8

SEE FIGURES 11 - 13

8) Once you are satisfied with the gaps and alignment, press the screw / bracket assembly so that the brackets slide through the factory grille mesh openings.

## STEP 9

SEE FIGURES 11 - 13

9) Looking through the grille overlay, rotate the brackets so they are vertical and than screw down and tighten till overlay is secure.

## STEPS 10 - PRO TIP

**SEE FIGURES 14** 

10) If you having trouble aligning the bracket to rotate vertically and grab the factory grille opening mesh design, stick a second screwdriver through to help position the bracket into place while tightening down.

**GRILLE SHELL DISASSEMBLY PROCESS CONTINUED** 

## INSTALLER'S PRO TIP





PAGE 3

## **GRILLE INSTALL - CONTINUED**

BILLET MAIN GRILLE
MAIN GRILLE - #21127 / #21127B
2016-2017 CHEVROLET SILVERADO



STEP 11 SEE FIGURES 16 & 17

11) At this point you want to look over your work and examine the gap alignments around all edges and in between the new is needed, you can loosen & remove the hardware mounts and shift side to side or up & down to achieve proper look.

## **GRILLE INSTALL - COMPLETE**

