


INSTALLATION INSTRUCTIONS

MAKE: HONDA
MODEL: CIVIC Si Coupe/Sedan
YEAR: 2006-2011
ENGINE: L4-2.0L

Axle Back
304 Stainless Steel
49-36606

aFe recommends professional installation on our products.

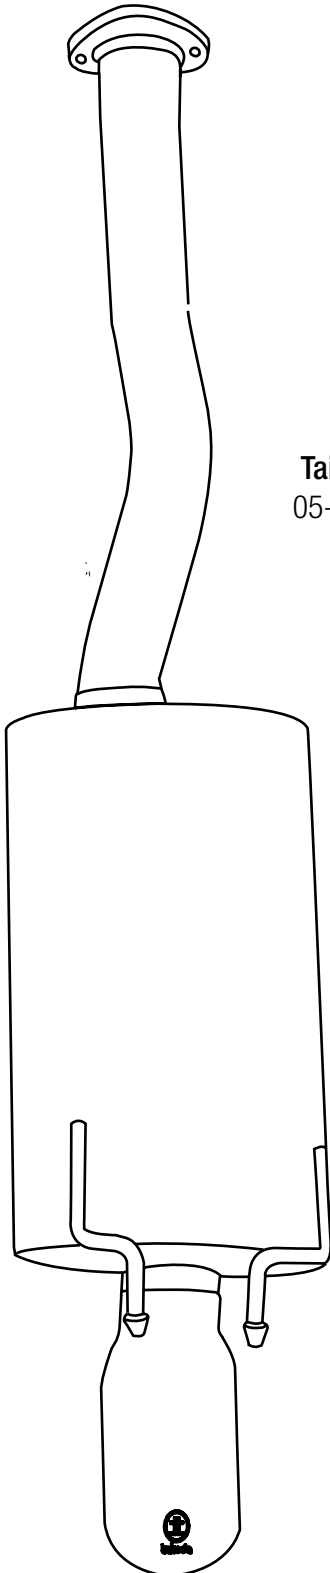

Tail Pipe
05-45817

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. [Exhaust systems](#) reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Step 1: (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).

Step 2: Remove the (x2) spring bolts securing the stock muffler to the mid pipe.

Step 3: Remove the muffler rubber hanger mount off the chassis and remove the OE muffler section.

Step 4: Transfer the rubber hanger mount off the OE muffler and install onto the takeda axle back exhaust.

Step 5: Using the original gasket (Replace if necessary), install the takeda axle back exhaust by sliding the rubber hanger mount onto the chassis and using the (x2) spring bolts removed from step 2 and tighten.

Step 6: Re-check all your work.

Step 7: Remove vehicle off of jack stands.

Note: It is normal for your exhaust system to emit smoke for the first few minutes upon initial start-up.