




INSTALLATION INSTRUCTIONS

MAKE: HONDA
MODEL: ACCORD EX-L Coupe
YEAR: 2013-2014
ENGINE: V6-3.5L

Axle Back
304 Stainless Steel
49-36607

aFe recommends professional installation on our products.

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. [Exhaust systems](#) reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

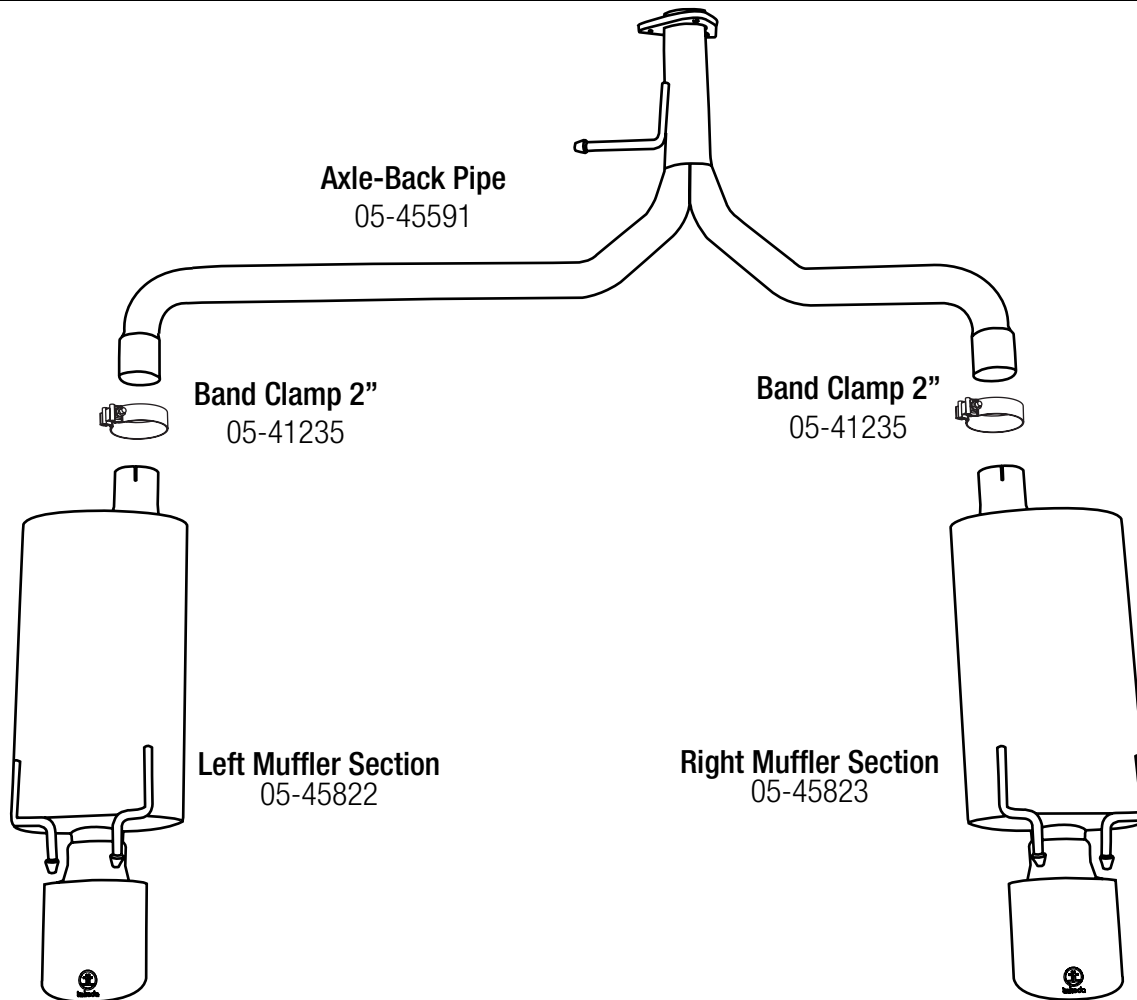

-
- Step 1:** (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).
- Step 2:** Remove the (x3) nuts securing the stock mufflers to the mid pipe.
- Step 3:** Remove the muffler rubber hanger mounts off the chassis and remove the stock muffler section.
- Step 4:** Remove the O-ring crush gasket off the OE muffler section and transfer onto the takeda axle back pipe section (Replace gasket if necessary).
- Step 5:** Remove the rubber mounts off the OE muffler section and transfer onto the takeda axle back exhaust.
- Step 6:** Install the takeda axle back pipe section using the original (x3) nuts and slide the rubber hanger onto the chassis and tighten the (x3) nuts.
- Step 7:** Using the (x1) supplied 2.0" aFe band clamp, install the takeda left side muffler section and slide the rubber hanger mount onto the chassis. Do not tighten the band clamp.
- Step 8:** Using the (x1) supplied 2.0" aFe band clamp, install the takeda right side muffler section and slide the rubber hanger mount onto the chassis. Do not tighten the band clamp.
- Step 9:** Align the left and right side takeda mufflers and then tighten all the band clamps.
- Step 10:** Re-check all your work.
- Note: It is normal for your exhaust system to emit smoke for the first few minutes upon initial start-up.**
-