

Installation Instructions

T-One® T-Connector



Buick Envision

⚠️ WARNING






ALWAYS read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

DO NOT exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

ALWAYS read, understand and follow all warnings and instructions printed on tow vehicle's battery.

ALWAYS wear safety glasses and use all safety precautions during installation.

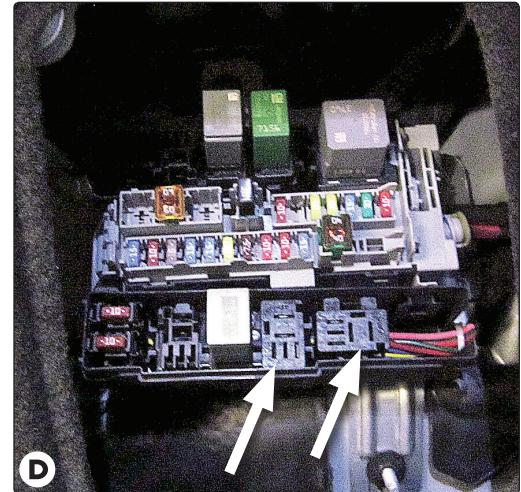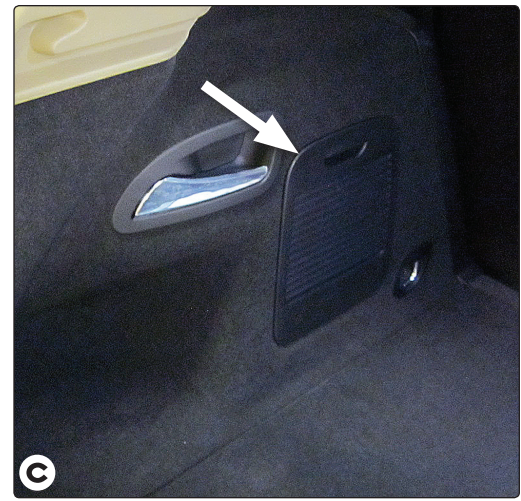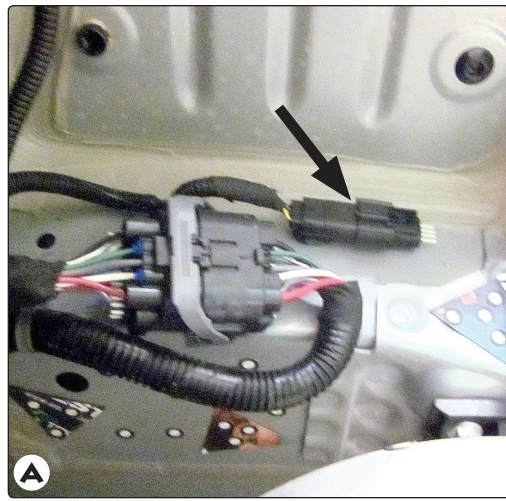

TOOLS REQUIRED:

Trim Panel Puller, Test-probe

1. Locate tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the rear bumper, on the driver's side of the vehicle (A).
2. Remove protective cap from connector. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary. Insert the 4-Pin Tow-Plug Adapter and lock into place. Ensure that the connectors are fully inserted with locking tabs in place.
3. Secure the remainder of the T-One® T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire.
4. Mount the 4-Flat end in an accessible location with a bracket or electrical box (not included).
5. Open rear hatch. Locate and open the storage compartment on the driver's side of the cargo area. Insert relays as shown.

⚠️ WARNING

Only replace relays with the same terminal layout as the relays included with the kit (B C D).

⚠️ WARNING

All connections must be complete for the T-One® T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.



⚠️ WARNING

Overloading circuits can cause fires. DO NOT exceed stated product ratings. Read vehicle's owner's manual & instruction sheet for additional information.