


Installation Instructions

T-One® T-Connector



Honda CRV

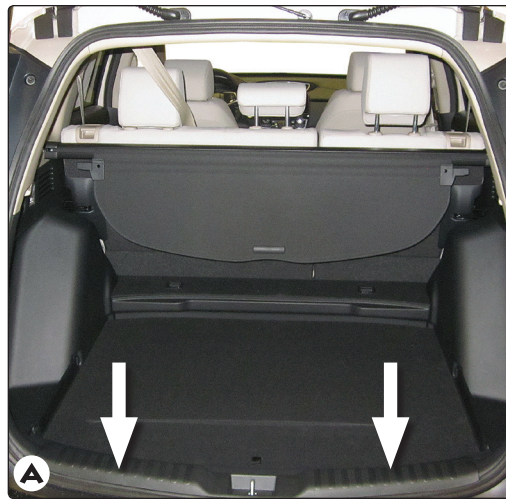

⚠ WARNING




ALWAYS read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

DO NOT exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

ALWAYS read, understand and follow all warnings and instructions printed on tow vehicle's battery.

ALWAYS wear safety glasses and use all safety precautions during installation.

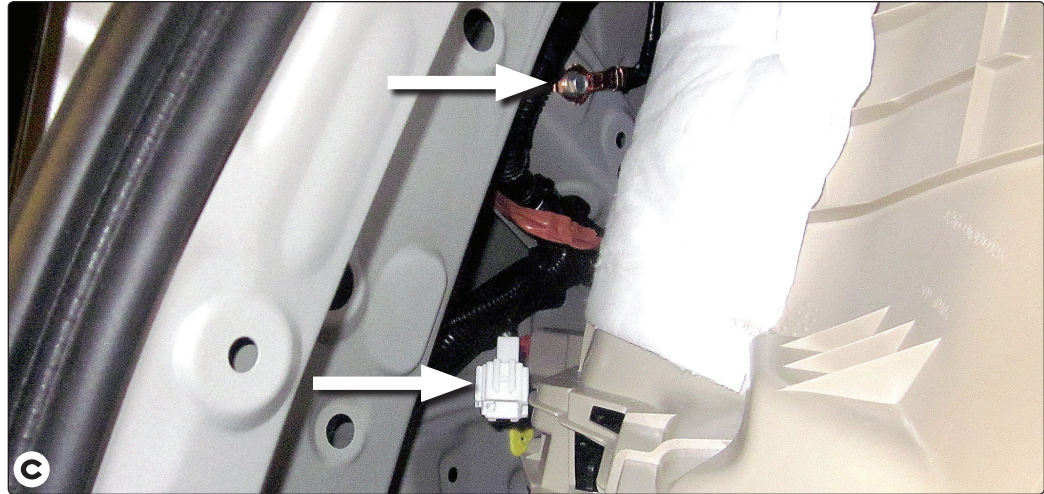

TOOLS REQUIRED:

Trim Panel Remover, 10mm Socket & Ratchet or 10mm Wrench, Wire Crimpers, Wire Cutters, Phillips Head Screwdriver, Test-probe

1. Open the Hatch of the vehicle and temporarily remove the rear threshold, cargo net and cargo cover to allow access of the rear interior trim panel on the driver's side **A**.

NOTE

It may be helpful to fold rear seat forward.

2. Carefully remove the lower cargo hook by pushing in on white plastic clip **B**. Using a Trim Panel Remover Tool, carefully pull back the upper and lower trim panels on the driver's side.
3. Gently pull back the upper trim panel to reveal the vehicles white 6-pin connector. Connect the T-One® T-Connector harness in vehicles white 6-pin housing and lock in place **C**.
4. On the driver's side, locate existing ground stud. Loosen bolt, place screw eyelet on stud and retighten bolt **C**.

NOTE

Make sure all existing ground connections are still attached.

5. Locate a flat surface in an out of the way place and mount the T-One® T-Connector's black box-module, to prevent damage or rattling.

6. Locate fuse compartment under the driver side dash. Open fuse compartment and place 15 amp fuse provided in location 37 if required.



⚠ WARNING

Overloading circuits can cause fires. **DO NOT** exceed stated product ratings. Read vehicle's owner's manual & instruction sheet for additional information.

7. **⚠ WARNING**

Read and follow all warnings and cautions printed on the tow vehicle's battery. All connections must be complete for the T-One® T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.

8. Secure the remainder of the T-One® T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire.
9. Reinstall the plastic trim panels, threshold, storage covers, floor covering and other items that may have been removed during installation, being careful not to pinch or cut the wires

NOTE

Store 4-Flat connector in rear cargo area when not in use.