

Installation Instructions

T-Connector

Honda Passport



⚠ WARNING





ALWAYS read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

DO NOT exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

ALWAYS read, understand and follow all warnings and instructions printed on tow vehicle's battery.

ALWAYS wear safety glasses and use all safety precautions during installation.

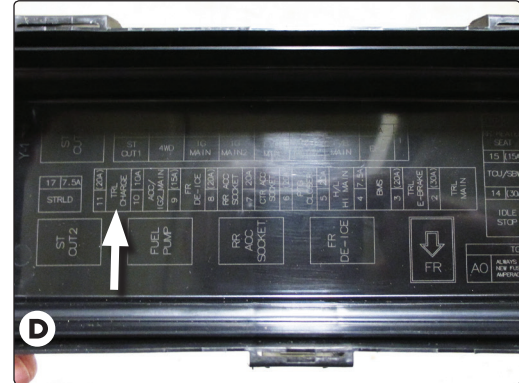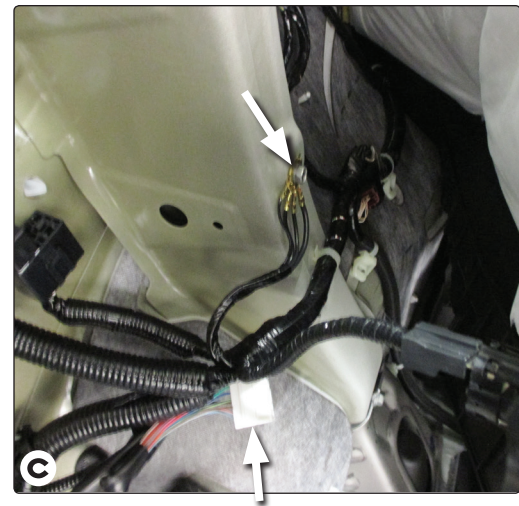

TOOLS REQUIRED:

Trim Panel Remover, 10 & 8mm Socket & Ratchet or 10 & 8mm Wrench, Drill (3/32" Drill Bit), Wire Crimpers, Wire Cutters, Philips Head Screwdriver, Test-probe

1. Open the vehicle's rear tailgate.
2. Inside the vehicle's rear cargo area, temporarily remove all floor coverings and cargo trays. **A**
3. On the Driver's side, locate mating tow plug connector by removing cargo bin and cargo hooks using 8mm socket and philips screw driver and side panel. **B**
4. Insert the T-One® Connector harness into the vehicle's Tow-Plug harness and lock into place. **C**
⚠ WARNING
All connector surfaces should be clean and free of dirt. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
5. Locate a suitable grounding point near the connector such as an existing ground stud or drill a 3/32" hole and secure the white wire using the eyelet and screw provided. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area. **D**

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

6. Locate a flat surface in an out of the way place and mount the T-One® Connector's black box-module, to prevent damage or rattling.

7. Secure the remainder of the T-One® Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire.
8. Route the 4-Flat from below the driver's side trim panel into rear storage compartment.
9. Open vehicle hood, and locate the fuse box on the driver side near the rear of the fire wall vehicle. Unlatch the fuse door to access the fuse area. Locate position #11 labeled (20A) Trl Charge. Insert the 20 amp fuse included with the T-One® Connector package in this position and latch the fuse box. **D**
10. Reinstall the plastic trim panels, threshold, storage covers, floor covering and other items that may have been removed during installation, being careful not to pinch or cut the wires.

NOTE

Route the 4-Flat through the driver's side trim panel into storage compartment on the threshold and store there when not in use.



⚠ WARNING

Overloading circuits can cause fires. **DO NOT** exceed stated product ratings. Read vehicle's owner's manual & instruction sheet for additional information.