

## Installation Instructions

### Electric Trailer Brake Control Wiring Adapter



Mercedes Sprinter

#### **⚠ WARNING**




**ALWAYS** read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

**DO NOT** exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

**ALWAYS** read, understand and follow all warnings and instructions printed on tow vehicle's battery.

**ALWAYS** wear safety glasses and use all safety precautions during installation.

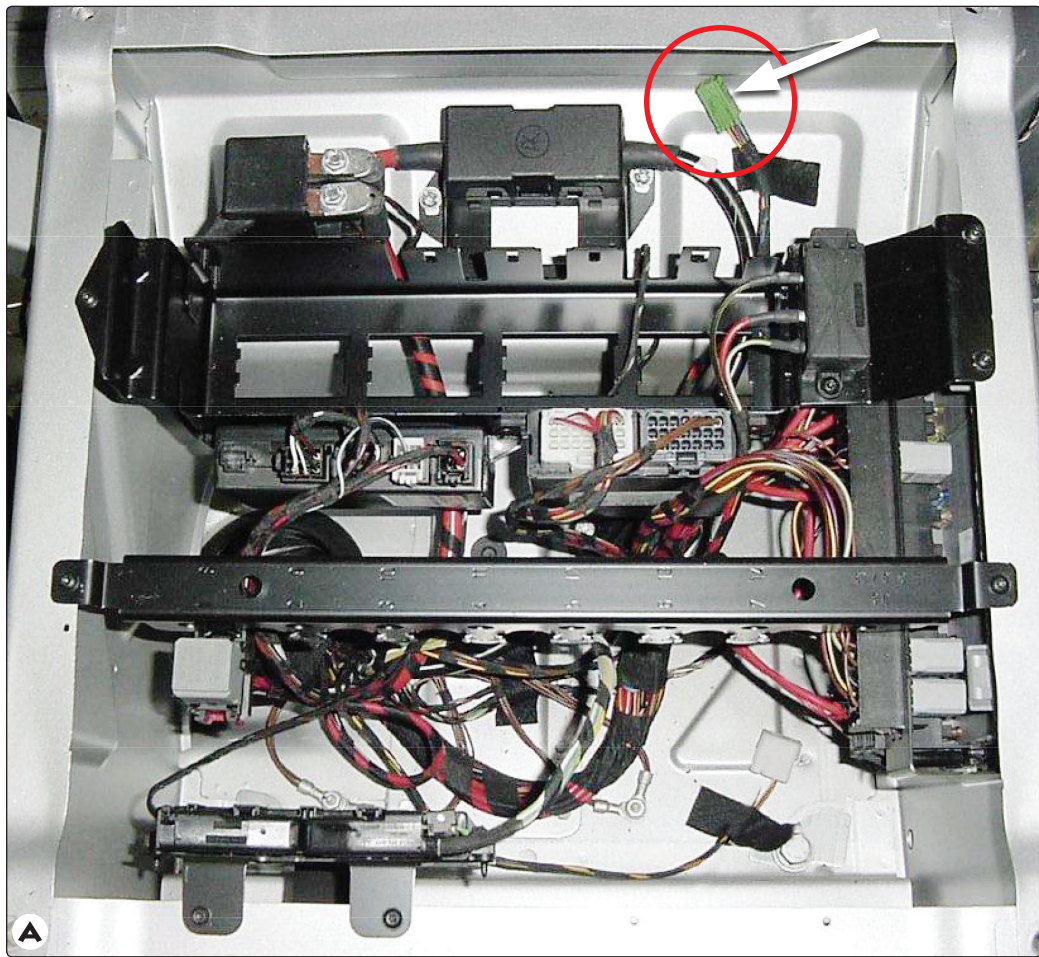

## ENGLISH

### TOOLS REQUIRED:

Trim Panel Remover, Philips Screwdriver, Wire Cutters

1. Make sure the vehicle is off with the keys removed from the ignition.
2. Locate the green 4 pin connector located under the driver side seat. This connector will mate with the one on the adapter.

#### **NOTE**

Removal of driver's side seat may be required to access the connector **A**.

3. Plug the brake control adapter into the vehicle's electric brake control harness connector. Follow all brake control manufacturer's installation instructions.
4. Locate a routing path for the adapter to exit the bottom of dash.

#### **⚠ WARNING**

Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.

5. Replace all parts removed during installation. Ensure all fasteners removed are installed back into original positions.

#### **NOTE**

Vehicles not equipped with OEM trailer tow package will not have the 4-Pin Green connector present.



#### **⚠ WARNING**

Overloading circuit can cause fires. **DO NOT** exceed lower of towing manufacturer rating or:  
• Max. 4 AXLES: 8 BRAKES (24 amps)  
Read vehicle's owners manual & instruction sheet for additional information.