

### JK Stock Brake Light Extension Bracket

Part #4997120



**Important Notes:**

*Prior to beginning this or any installation read these instructions to familiarize yourself with the required steps and evaluate if you are experienced and capable to personally perform these modifications.*

*Refer to the parts list to ensure that all necessary components and hardware has been included.*

**Kit Contents:**

Item ID (config)	Description (config)	Qty
74	Bolt 1/4"-20 UNC x 3/4" Long, Hex Zinc (ESS Sensor)	4
88	Nut 1/4"-20 UNC Lock Stainless	4
458	Washer 1/4" Flat Zinc Plated	8
997120	JK Brake Light Bracket Adapter	1

**Tools needed:**


- Drill
- 1/4" drill bit
- Cut-off wheel
- Tape measure
- 13mm socket
- Masking tape
- 13/16" socket
- 7/16" socket
- 7/16" wrench
- T20 torx driver
- Sharpie
- File

## Installation:

1. Remove the spare tire.
2. Open the tailgate, and remove the four t20 screws that secure the brake light to its housing. Disconnect the electrical connector from the brake light, and remove the brake light.




3. Remove the factory tire mount from the vehicle by unthreading the eight bolts that secure it.

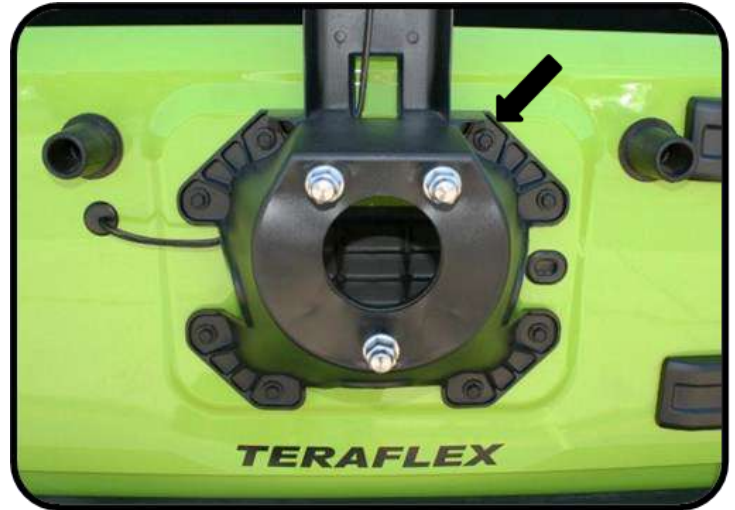

4. With the mount removed, grind off the small bump on the back of the mount.



5. Use the factory screws to position the extension bracket as pictured. Use the holes closest to the middle of the extension bracket.

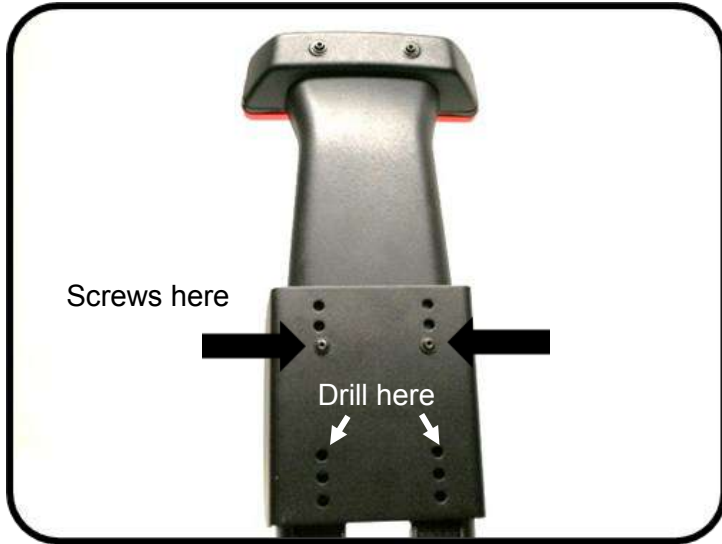

6. Using the extension bracket as a template, drill two 1/4" holes in the tire mount. Use the holes closest to the center of the extension bracket.

7. When finished drilling, remove the extension bracket from the tire mount.

8. Measure three inches up from the edge of the middle pocket of the tire mount as shown. Make a mark using a Sharpie, and apply masking tape across the mark to provide a straight edge along which to cut.



9. Cut along the lower edge of the masking tape using a cut-off wheel.

10. De-burr and clean the cut edges.

11. Adjust the length of the brake light housing by selecting the appropriate set of holes in the extension bracket for your tire size. Install the factory screws into the top of the bracket, and the supplied bolts, nuts, and washers through the newly-drilled holes.



12. Re-install the tire mount onto the tailgate.

13. Re-install the 3rd brake light.

14. Install the spare tire

**Installation is complete.**