


North American English

PARTS INCLUDED

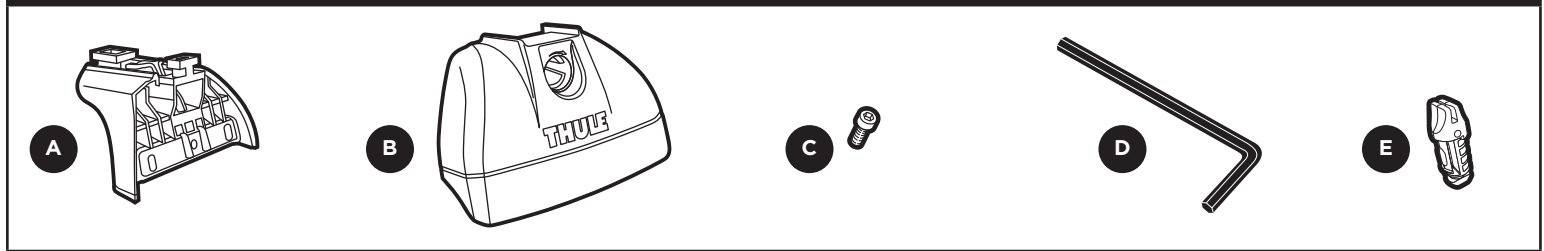

part	description	part number	qty.
A	460R Podium rapid foot	7520873001	4
B	460R Podium rapid foot cover	8522382001	4
C	hex bolt M6 x 16	919061654	8
D	hex key M5	8530930	1
E	lock plug	8536395	4





EN

WARNINGS / LIMITATIONS:


- The load you are carrying plus the weight of the roof rack must not exceed the maximum roof weight specified by the vehicle's manufacturer.
- Long loads such as, but not limited to, paddleboards, kayaks, surfboards, canoes, lumber, mattresses, and construction materials must be securely tied down at minimum to the roof rack and to the front of the vehicle.




Overloading the vehicle roof and/or failing to secure the load properly may result in loss of the load or the rack system, damage to the vehicle, and/or damage to other persons or property.

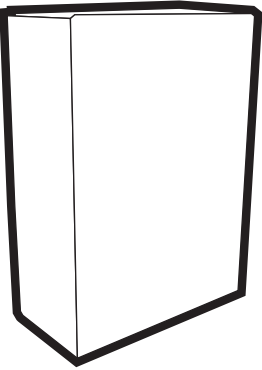PARTS NOT INCLUDED			
AEROBLADE LOAD BARS	RAPID AERO LOAD BARS	FIT KIT	THULE ONE KEY SYSTEM
x2  x2  x2  x2  x2  x4 	x2  x2  x4 		  512  544  596  588 
ARB43(B), ARB47(B), ARB53(B), ARB60(B)	RB43, RB47, RB53, RB60		
Complete your Load Carrier with the recommended Fit Kit and Load Bar for your vehicle.			

1

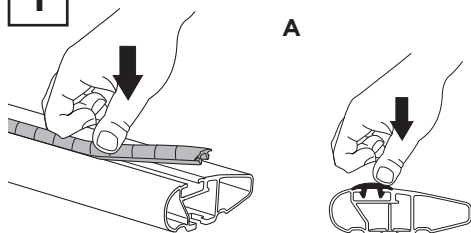


- A. Press top rubber strips into t-slots on top of bars.

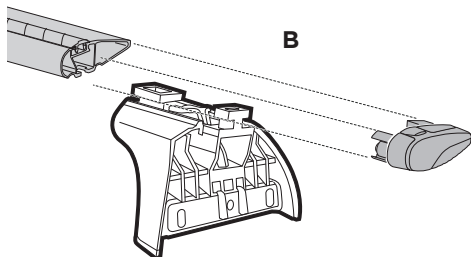

- B. Slide Feet (A) into slots on underside of load bars. Press endcaps into ends of bars.

2

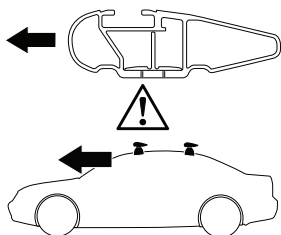


- FOR AEROBLADE
- NOTE: Rounded edge of bar faces forward on vehicle.

i


ATTACHMENT TO VEHICLE

- The 460R Rapid Podium foot requires a Thule Fit Kit to attach to vehicles. Check your vehicle's Fit Kit instructions for detail on attaching the Fit Kit to your feet, and the feet to your vehicle. Your unique Fit Kit will also instruct you whether to use the two included M6 x 16mm hex bolts (C) or other fasteners included with the Fit Kit.
- CAUTION: On some vehicles there will be two sets of fasteners to tighten. Always tighten to the vehicle first, and then to the foot. Tightening to the foot first may result in damage to the foot, to the vehicle or to both.


3

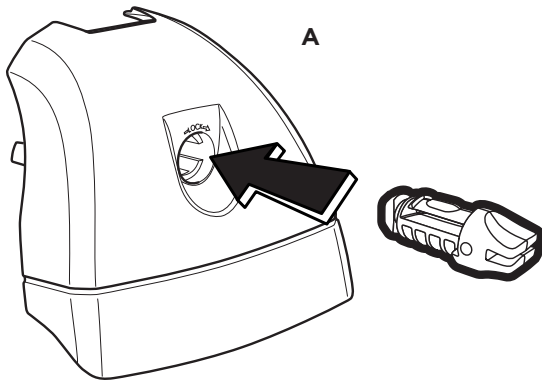

- A. Insert lock cover plug (E) into foot cover (B), or use Thule One-Key locks (see Locks information later in instructions). Press firmly to insert completely.



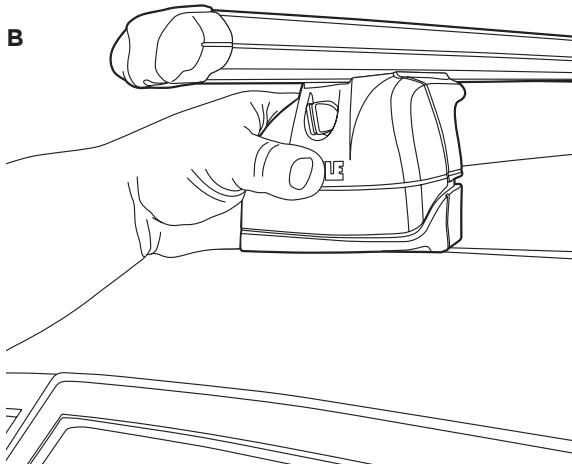


- B. Press cover firmly against foot to ensure proper attachment.

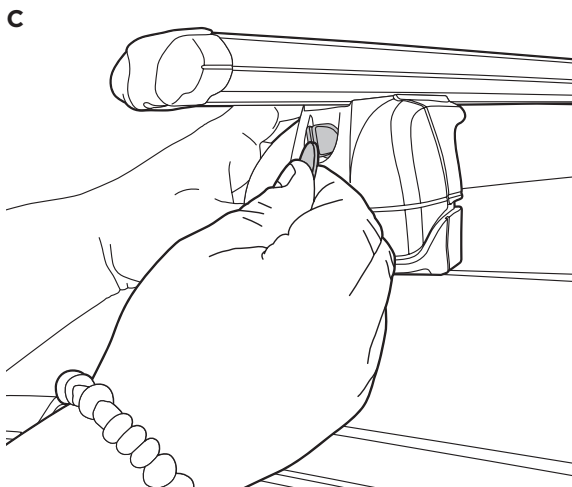


- C. Using a coin or flathead screwdriver, turn the lock cover plug to hold the cover in place. Test to make sure it's attached securely by pulling on the foot cover with both hands.

4

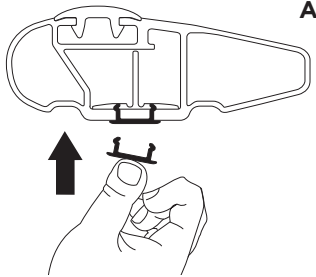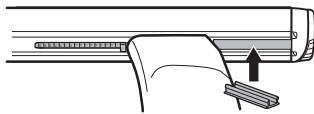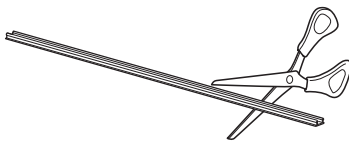



A

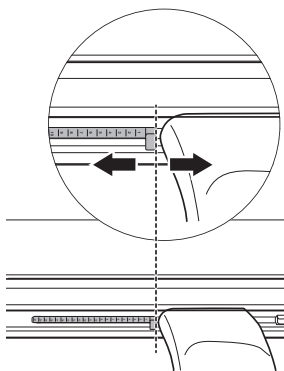

B

- FOR AEROBLADE:
A. Cut under bar cover strips to fit between outside of foot and inside of endcap. Strips should cover endcap retention tab. Press carefully into place.
- B. Slide tab on SmartSlides up against feet.

i

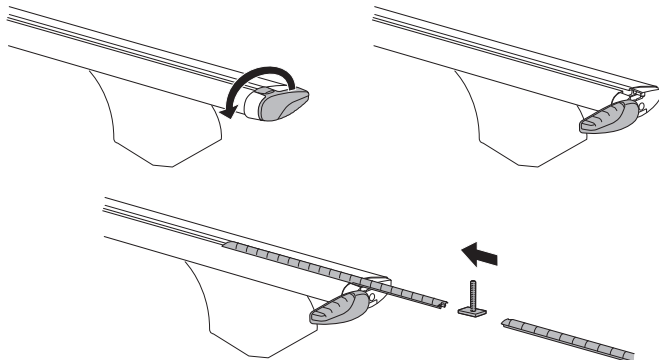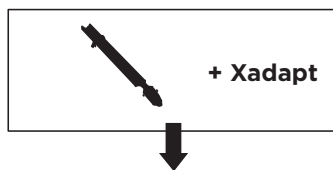


- INSTALLING CARRIERS DIRECTLY TO AEROBLADE T-TRACK




INSTALLING LOCKS IF PURCHASED

- A. Insert square key into cylinder.

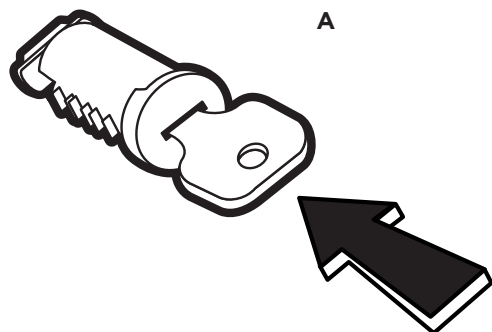

- B. Insert cylinder fully into foot cover. Hold cylinder in place with finger or screwdriver and remove square key.

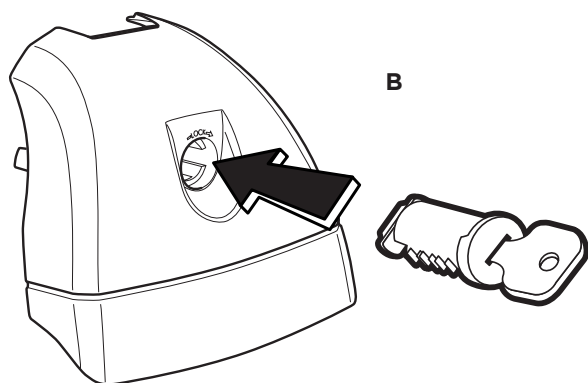

- C. Insert round key into lock cylinder and press cover firmly against foot. Turn the key clockwise to lock the cover to the foot. Test to make sure it's attached securely by pulling on the foot cover with both hands.

