

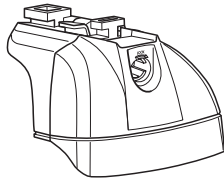


# instructions


# Kit 3101

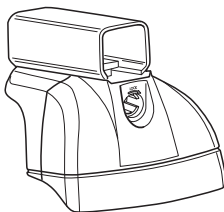

460R








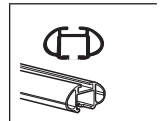


460

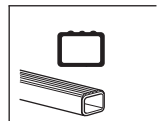


ROOF RACKS



**THULE**<sup>®</sup>  
SWEDEN

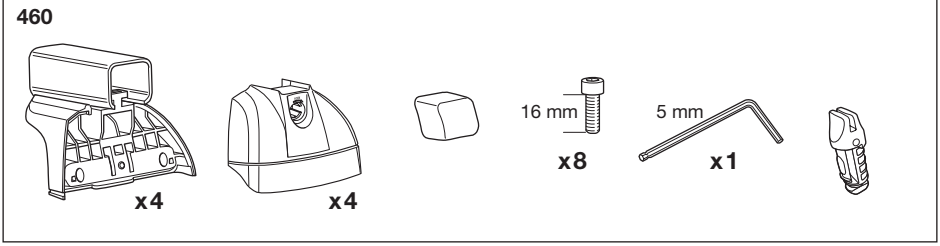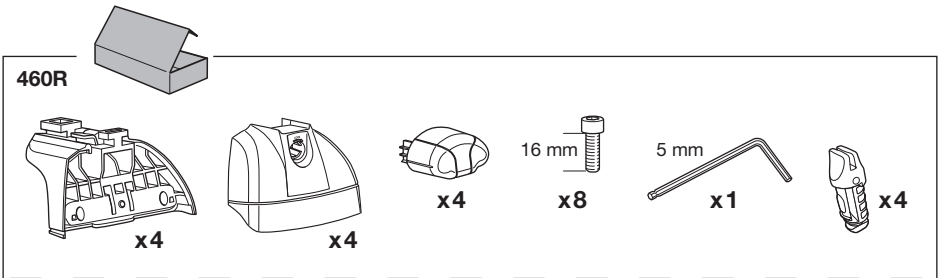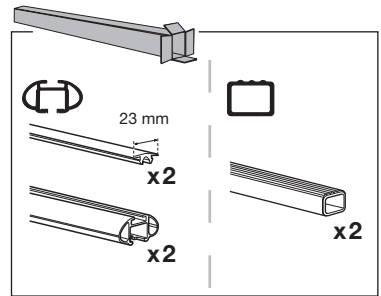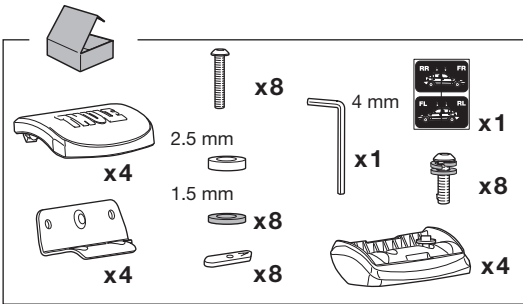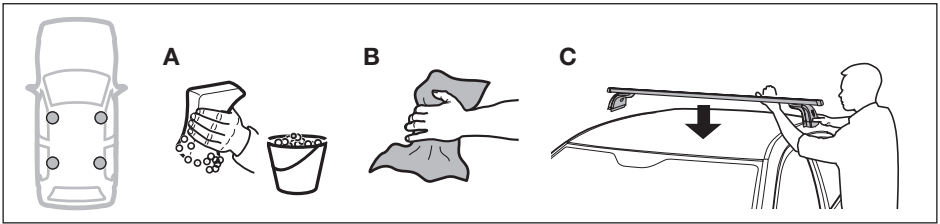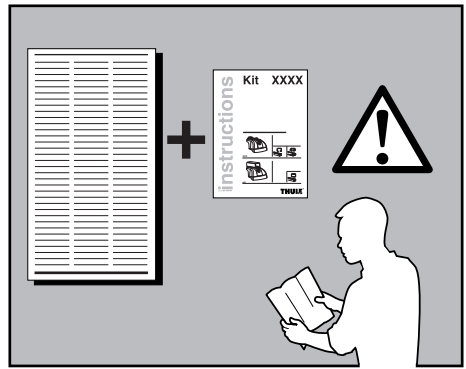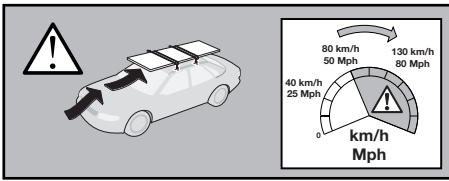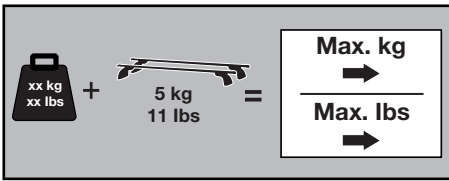






1

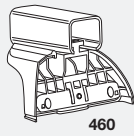

+

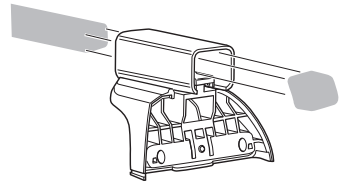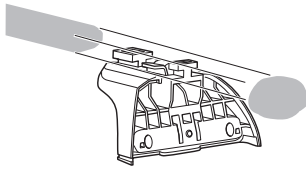



10 mm

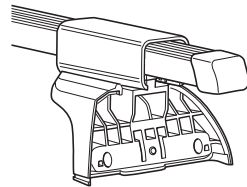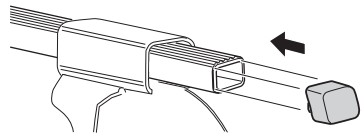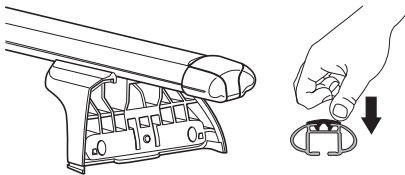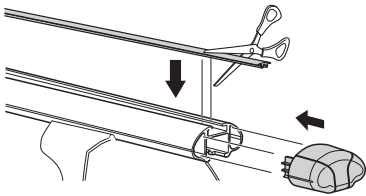

2




x4

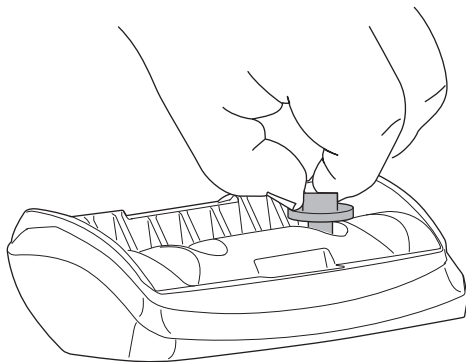





**6**

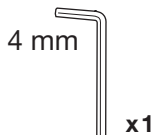



24" - 28" / 610 - 711 mm

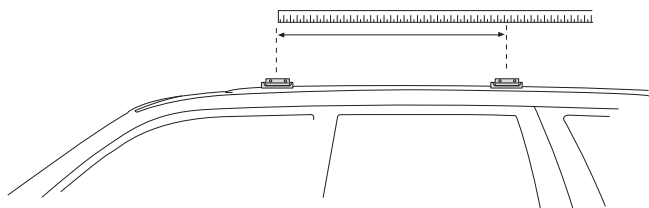


**B**

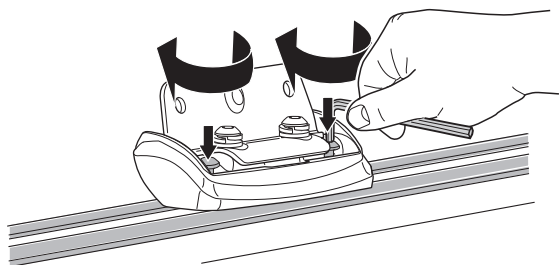

**7**

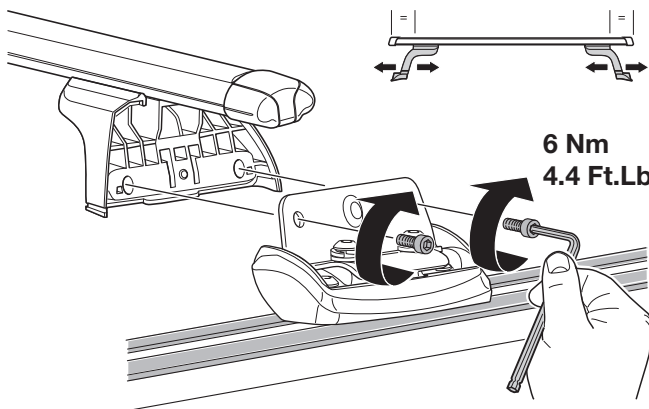


**B**

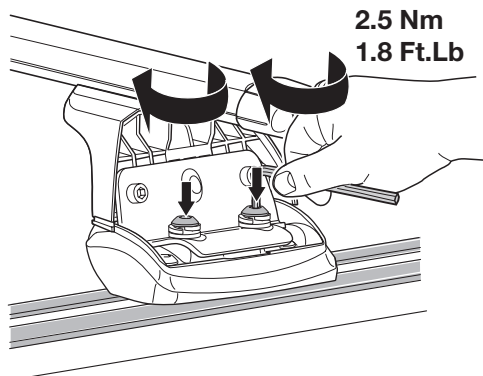

8




x1

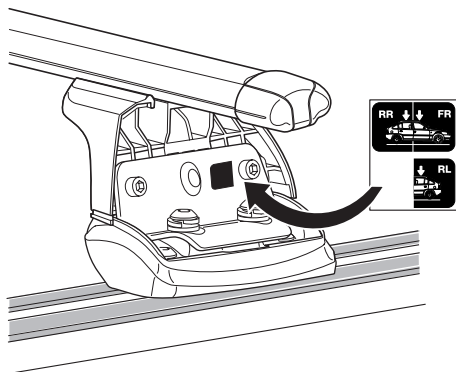



9






x4


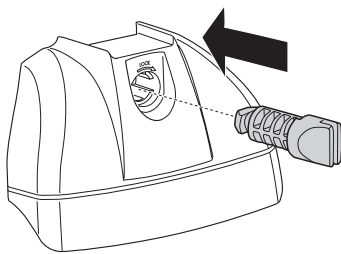


10

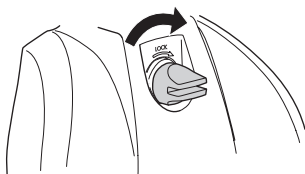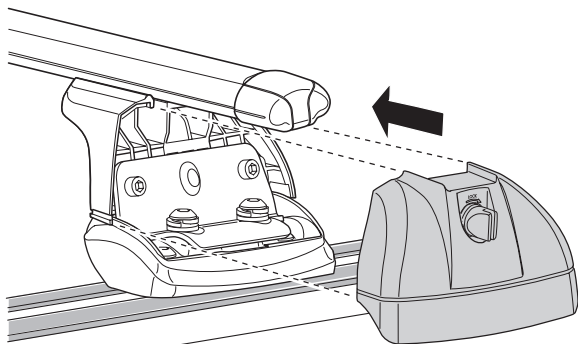

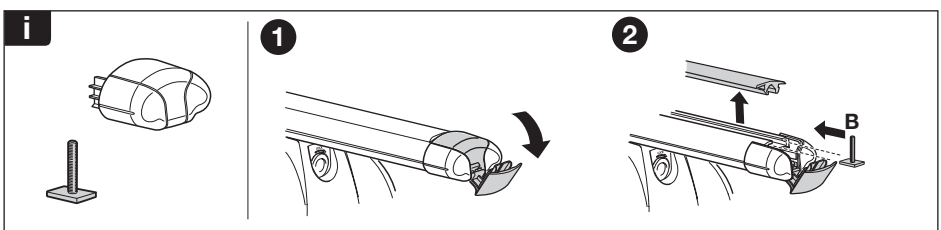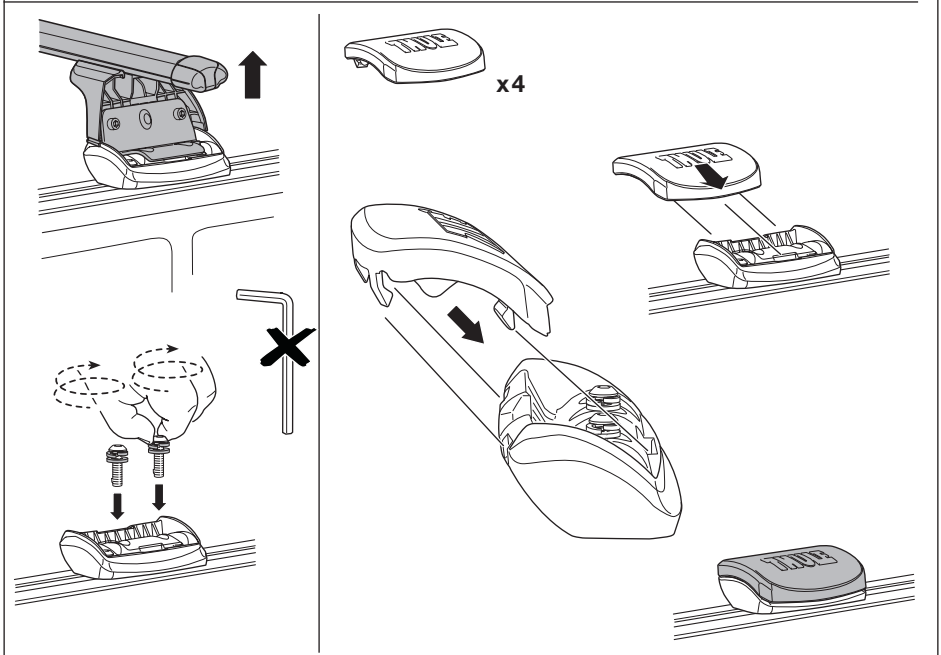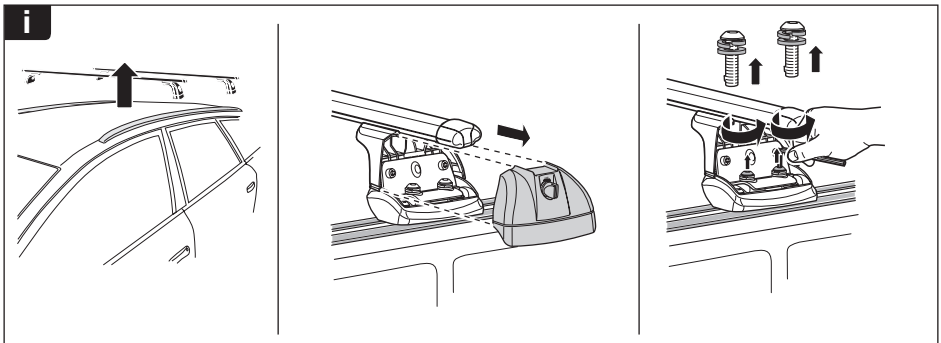

**THULE**<sup>®</sup>  
SWEDEN  
**ONE  
KEY  
SYSTEM**

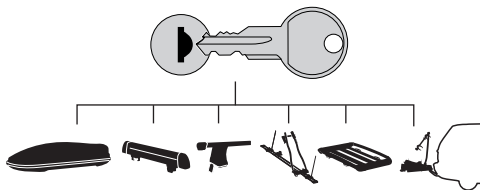

**512**  (x2)

**544**  (x4)

**596**  (x6)

**588**  (x8)