


THULE[®] SWEDEN 854 WATERSLIDE™

1

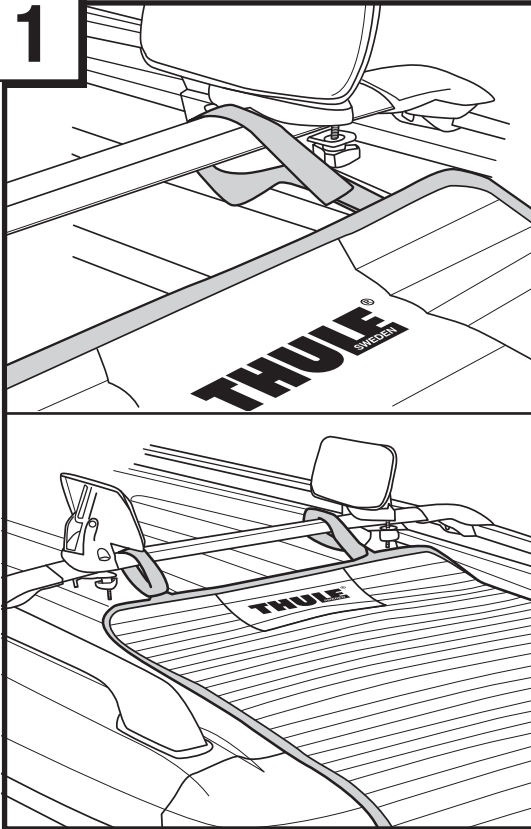


- Place mat on rear edge of vehicle roof immediately behind boat carrier.
- Mat should be placed with the rubber side down and the fabric side up. The edge with the straps and Thule label should be placed closest to the load bar or factory crossbars.
- The hook and closure straps should be looped around the load bar or factory crossbar and attached onto itself.

HINT

For tall vehicles, it may be easier to loop and hook the straps from the side of the vehicle. The center strap may be looped first and slid across the bar.

2

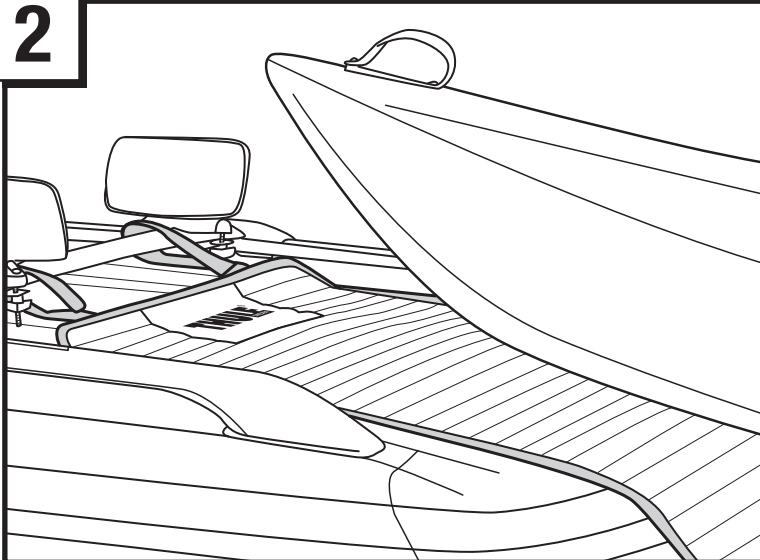

- The kayak/canoe may rest on the Waterslide mat and be slid across the mat during loading and unloading. The mat's fabric surface will help the boat glide into the carrier and prevent damage to the vehicle.

WARNINGS AND LIMITATIONS

- The mat will not prevent damage to vehicle spoilers/fins or vehicle antennae that would normally occur during loading and unloading kayaks/canoes. Many spoilers are not sturdy enough to support the weight of a boat.
- Remember to take the Waterslide mat off the vehicle before driving away.
- After each use, shake or brush the mat off to remove sand, grit or dirt to prevent scratches to the vehicle or kayak hull.