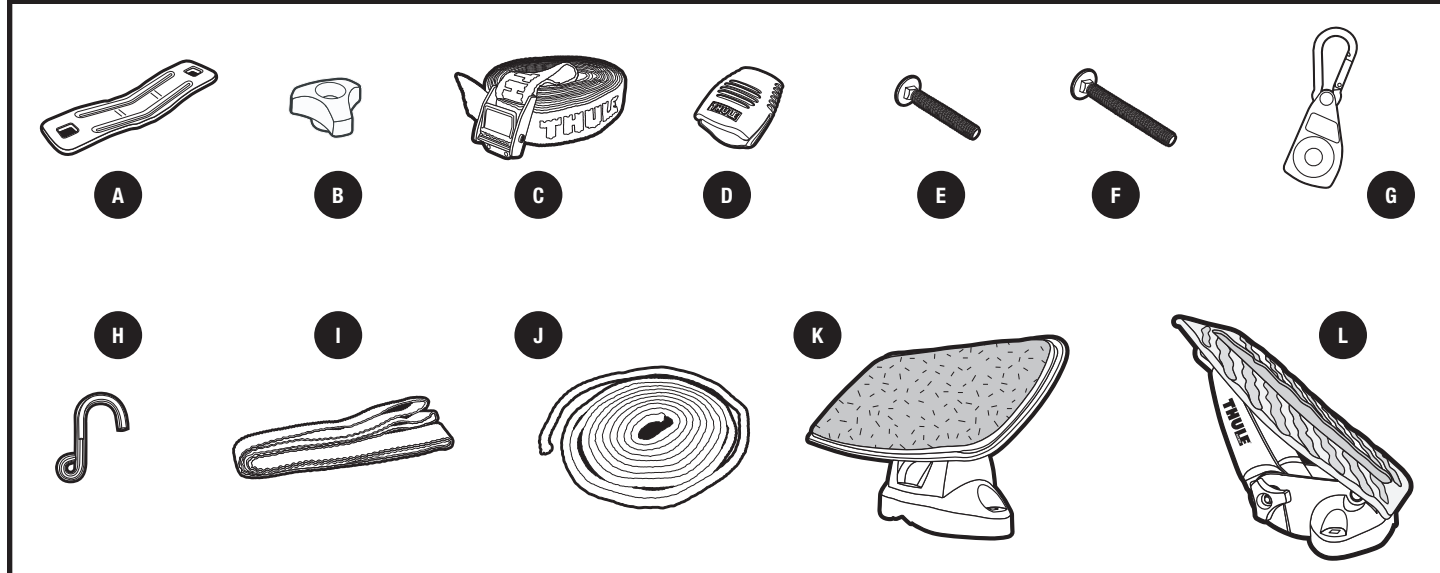


PARTS INCLUDED


part	description	part number	qty.
A	metal bracket /	853-5513	4
B	knob M6 low /	753-0783	8
C	strap /	753-2030-02	2
D	buckle bumper /	853-5593	2
E	carriage bolt M6 x 50 mm /	915-0650-31	8
F	carriage bolt M6 x 60mm /	915-0660-31	8
G	ratchet with carabineer hook /	8522883001	2
H	hook /	853-5465	2
I	attachment strap /	853-5467	2
J	1/4" rope /	753-3258	2
K	Hydro-Glide Assembly /	753-3258	2
L	saddle /	753-3136	2


WARNINGS / LIMITATIONS

- Load bars must be at least 24" (610mm) apart for safe use.
- Ensure that boat does not contact vehicle while loading or unloading; otherwise, damage to vehicle or boat could occur.
- For extra protection to vehicle place towel on edge of roof when loading and unloading.
- Ensure bottom of hull is clean before loading to avoid damaging boat surface or Hydro-Glide XT.
- Always tie down bow and stern of boat to vehicle bumpers or tow hooks.
- Do not exceed weight limitation of racks or factory installed bars.
- Ensure load carrier or factory crossbars are properly installed and tight to vehicle.
- Failure to follow above guidelines voids warranty.

FRONT BAR SADDLE (STEPS 1–3) /


1

FOR USE ON AFTERMARKET ROOF RACKS

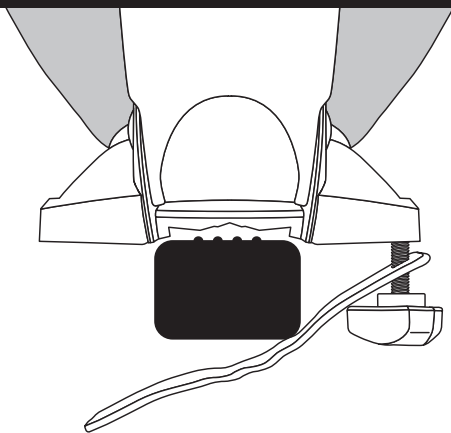

- Thule square load bar, Xsporter and Yakima round load bar.
- Loosely attach 60mm carriage bolt and knob as shown.


FOR USE ON VEHICLES WITH FACTORY RACKS

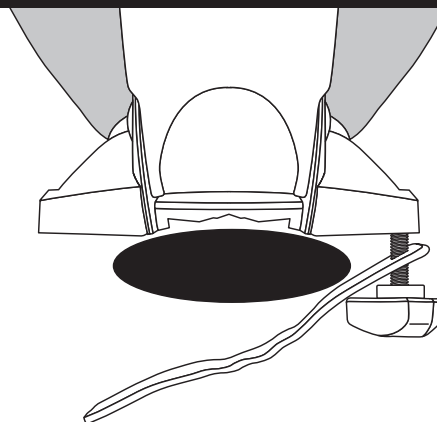

OR


- Look up your vehicle in the included Hardware Fit Guide. Identify the proper bolt length for your vehicle.
- Loosely attach carriage bolt and knob as shown.

2

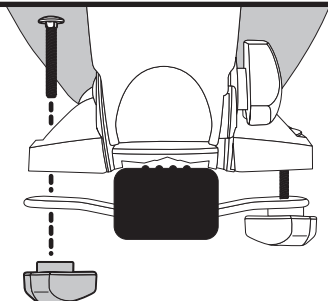

- Place kayak saddles on bars and loosely attach bolt and knob as shown.

3

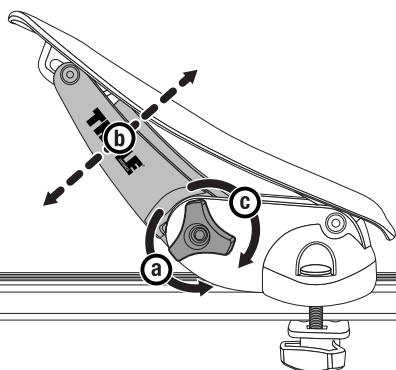


- a. Loosen knob and lower or raise saddle.
- b. Adjust saddle angle for maximum hull contact.
- c. Retighten knobs.

REAR BAR HYDRO-GLIDE SADDLE (STEPS 4–9)


4

FOR USE ON AFTERMARKET ROOF RACKS

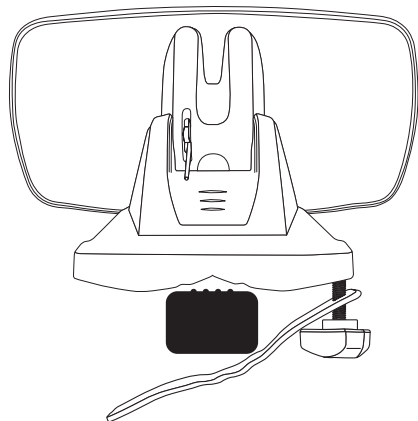

- Thule square load bar, Xsporter and Yakima round load bar.
- Loosely attach 60mm carriage bolt and knob as shown.


FOR USE ON VEHICLES WITH FACTORY RACKS

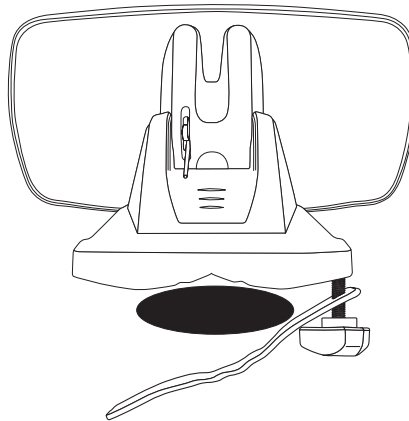

OR
OU
O

- Look up your vehicle in the included Hardware Fit Guide. Identify the proper bolt length for your vehicle.
- Loosely attach carriage bolt and knob as shown.

5

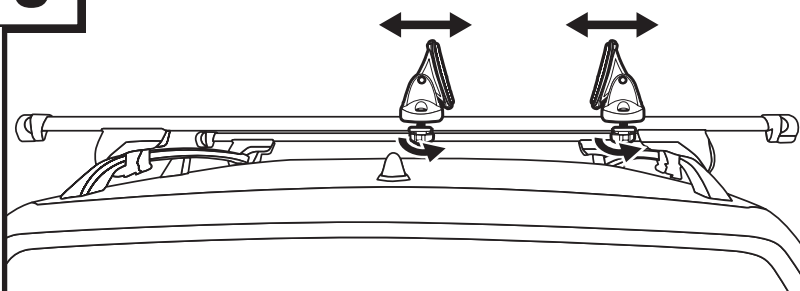

- Position saddles for the approximate width of your boat. Ensure that there is clearance between load bars & hull. Tighten knobs.

6





- Wipe bottom of hull prior to mounting. Rest front of boat on Hydro-Glide. Standing behind or next to boat, lift up back end of boat and push boat forward on vehicle, sliding on Hydro-Glides. Make sure kayak reaches front load bar before lowering.


7

- Slide boat onto vehicle completely. It may be necessary to readjust the distance between your saddles for a good fit. This occurs when Hydro-Glide pads are close to horizontal with boat installed. Make sure boat is in line with vehicle. Securely tighten knobs.

FRONT /

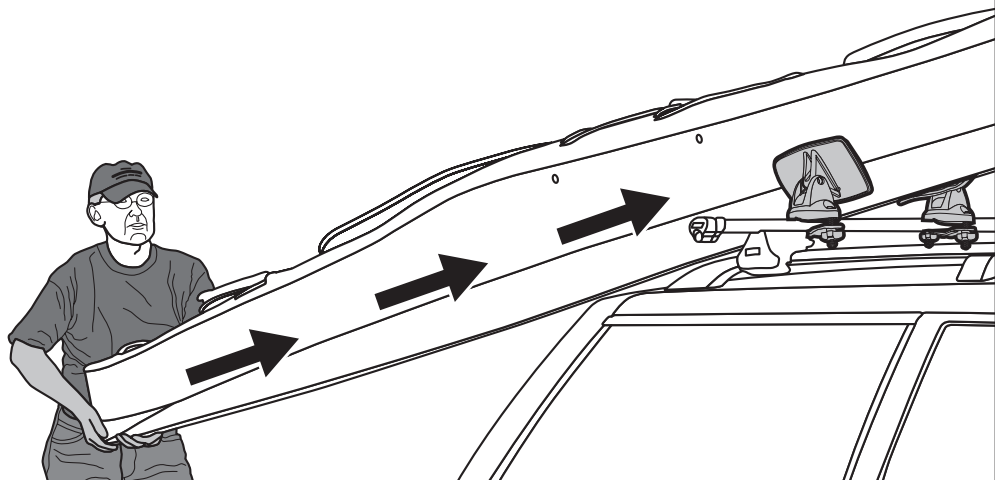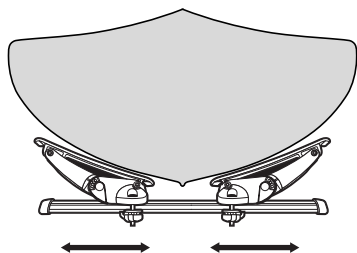


8

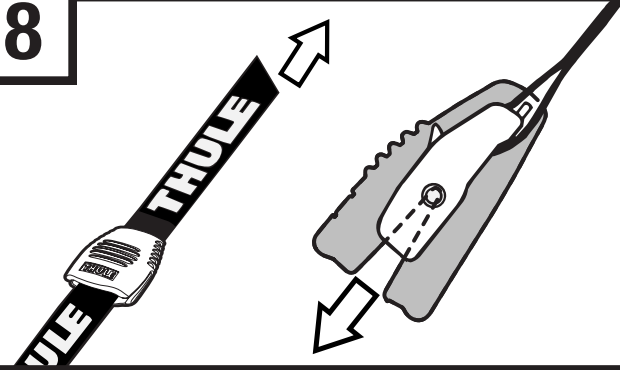


- Route free end of strap, with logo side up, through the Buckle Bumper as shown. Pull Buckle Bumper over buckle to protect boat and vehicle while strapping down boat.

9

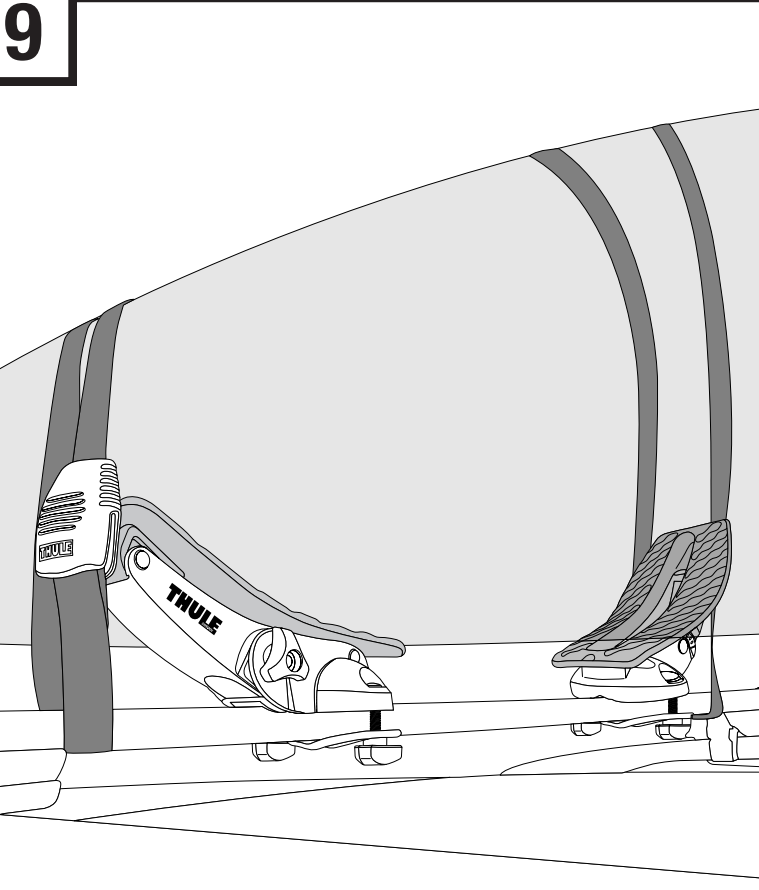

FRONT /

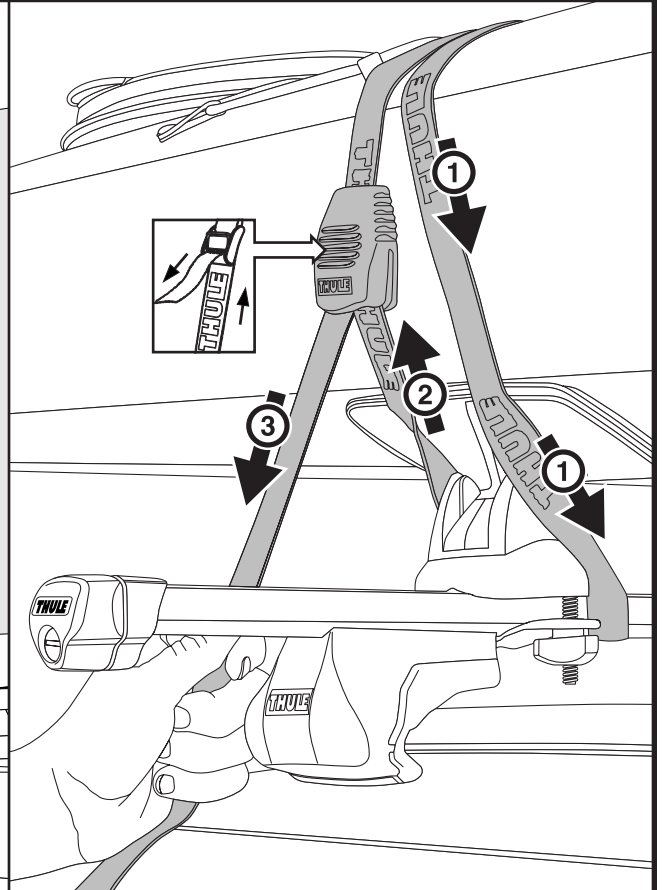

REAR /

- Make sure weight is evenly distributed front to rear. Always route straps under the bar as shown. Slide Buckle Bumper off the buckle. Place strap through the buckle as shown. Tighten strap and reposition Buckle Bumper over buckle.

- Ensure straps do not go over cockpit cowling or other non-load bearing boat details before cinching straps.

10


UNLOADING



- Standing behind vehicle, slide boat off car & lower end to unload.

11


BOW / STERN TIE DOWN

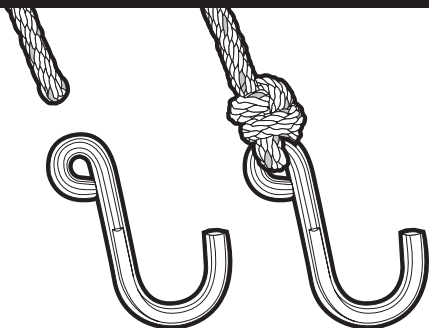


- Carefully attach hook to end of rope.

12



- Feed end of rope up through the bottom while rotating the spool clockwise.

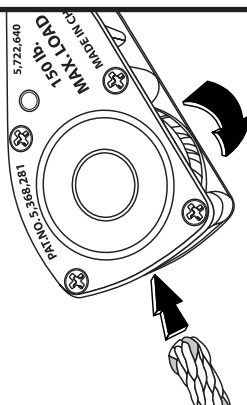

- Keep rotating the spool until rope exits at the bottom.


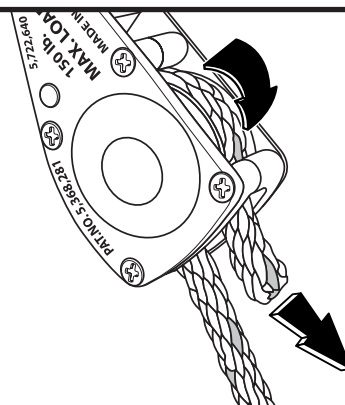


13

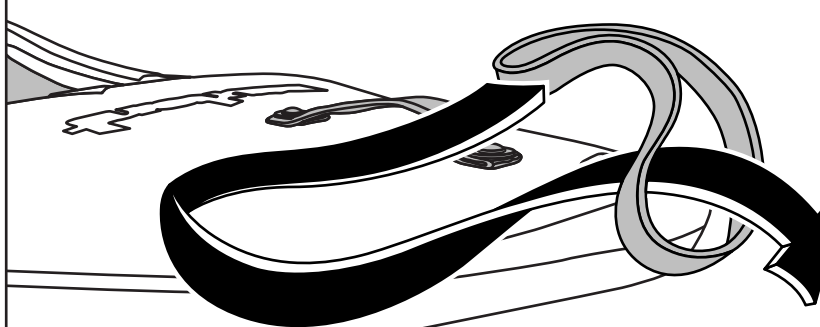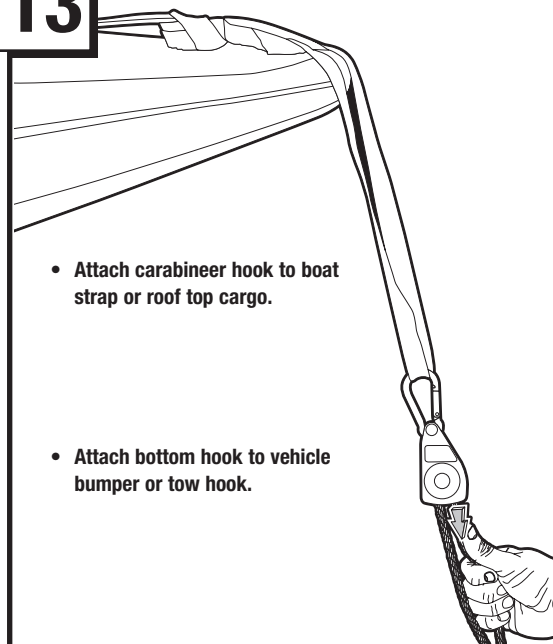

HINT: Hint: Attach strap to boat prior to loading in carrier.


14

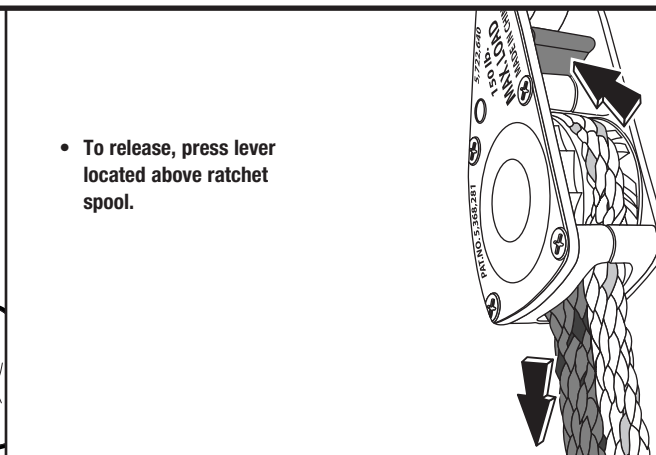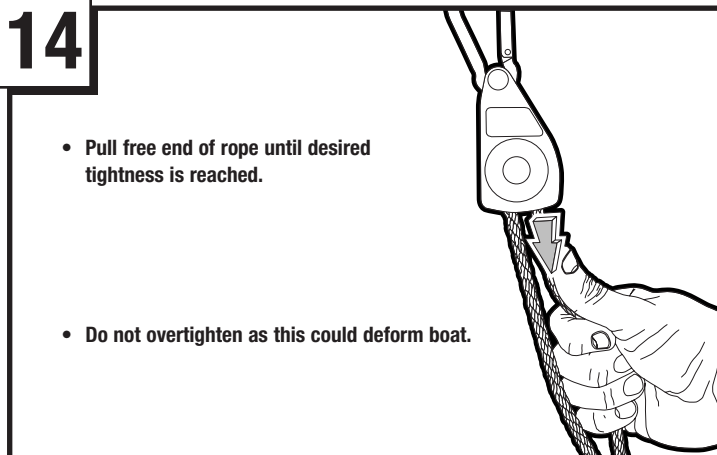

WARNING:

Do not exceed load 150lb. limit of Quick Draw. Inspect rope and ratchet before each use. Do NOT use if damaged. Avoid sharp edges, pinch points, abrasive or hot surfaces.

15

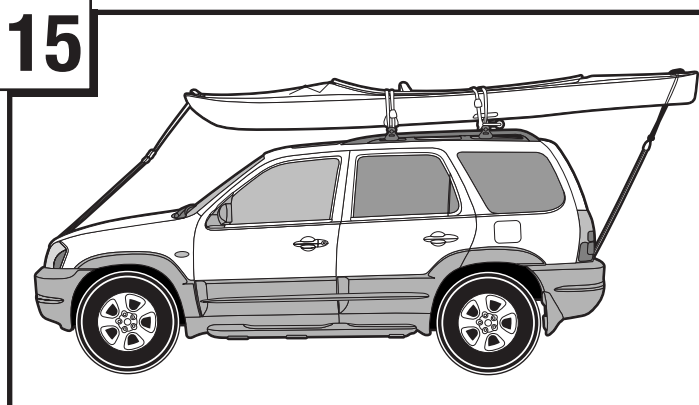

LOAD BARS	RECOMMENDED BOLT SIZE (mm)		
	55	65	80 *

THULE

AEROBLADE (ARB) BARS		✓	
RAPID AERO (RB) BARS		✓	
STEEL (LB) BARS	✓		
422 XSPORTER BARS			✓
500 XSPORTER PRO BARS			✓
PRO BARS			✓

INNO

LOAD BAR	✓		
----------	---	--	--

SPORTTRACK

LOAD BAR	✓		
----------	---	--	--

YAKIMA

ROUND BAR	✓		
WHISPBAR		✓	

VEHICLE MAKE, MODEL, AND YEAR	RECOMMENDED BOLT SIZE (mm)		
	55	65	80 *

ACURA

MDX	'07-14	✓	
RDX	'07-14	✓	
TSX Sport Wagon	'12-14	✓	
ZDX	'10-13	✓	

AUDI

Allroad	'13-14	✓	
A4 (Avant) Wagon	'02-12	✓	
A6 Wagon	'06-11	✓	
Q5	'09-14		✓
Q7	'07-14		✓
S4 Wagon	'01-08	✓	

BMW

X6	'09-14		✓
----	--------	--	---

BUICK

Enclave	'08-14		✓
Encore	'13-14		✓
Ranier	'04-07	✓	
Rendezvous	'02-07		✓

CADILLAC

CTS Sport Wagon 5DR	'10-14	✓	
Escalade / Escalade ESV	'99-15	✓	
Escalade EXT Pickup	'02-15	✓	
SRX (Except "Sport Models")	'04-14	✓	

CHEVROLET

Astro Van (Cargo & Passenger)	'94-05	✓	
Avalanche	'02-13		✓
Blazer	'95-05	✓	
Captiva	'11-14		✓
Equinox	'05-14		✓

VEHICLE MAKE, MODEL, AND YEAR	RECOMMENDED BOLT SIZE (mm)		
	55	65	80 *

CHEVROLET (continued)

HHR	'06-11		✓
Spark 5DR	'13-14	✓	
Suburban / Suburban Z71	'92-15	✓	
Tahoe / Tahoe Z71	'95-15	✓	
Tracker	'02-04		✓
Trax	'13-14	✓	
Traverse	'09-14		✓
Venture	'97-04	✓	

CHRYSLER

Pacifica	'04-08	✓	
PT Cruiser	'01-10		✓
Town & Country	'96-14	✓	
Voyager / Grand Voyager	'01-03	✓	

DODGE

Caliber / SRT4 / SXT	'07-12	✓	
Caravan / Grand Caravan	'96-14	✓	
Durango / Durango Sport	'98-14	✓	
Journey	'08-14	✓	
Nitro	'07-11	✓	

FORD

Edge / Edge Sport	'07-14	✓	
Escape	'01-14	✓	
Escape (Glass Roof)	'13-14	✓	
Expedition / Expedition EL	'97-14		✓
Explorer	'91-14		✓
Explorer Sport	'01-03		✓
Explorer Sport Trac	'01-10		✓
Flex	'08-14	✓	
Freestar	'04-07	✓	
Taurus Wagon	'96-06	✓	
Windstar	'98-03	✓	

GMC

Acadia	'07-14		✓
Denali	'98-06		✓
Denali XL	'00-06		✓
Envoy	'98-01	✓	
Jimmy	'95-01	✓	
Safari Van (Cargo & Passenger)	'90-05	✓	
Suburban	'92-99	✓	
Terrain	'10-14	✓	
Terrain Denali	'12-14	✓	
Yukon / Yukon XL	'92-15	✓	
Yukon Denali / Yukon Denali XL	'07-15	✓	

HONDA

Crosstour	'10-14		✓
CR-V	'02-14		✓
Element / Element SC	'03-11	✓	
Odyssey	'01-14		✓
Passport	'98-02	✓	
Pilot	'03-14	✓	
Ridgeline / Ridgeline Sport	'06-14		✓

VEHICLE MAKE, MODEL, AND YEAR	RECOMMENDED BOLT SIZE (mm)		
	55	65	80 *

HUMMER

H3	'05-10		✓	
H3T	'09-10		✓	

HYUNDAI

Elantra GT 5DR	'13-14		✓	
Entourage	'07-10	✓		
Santa Fe	'01-14	✓		
Santa Fe Sport	'13-14	✓		
Tucson	'05-14			✓

INFINITI

EX 35	'08-12		✓	
EX 37	'13		✓	
FX 35	'03-13		✓	
FX 45	'03-08		✓	
FX 50	'09-13		✓	
QX4	'97-03		✓	
QX50	'14		✓	
QX56	'04-13		✓	
QX60	'14		✓	
QX70	'14		✓	
QX80	'14		✓	

ISUZU

Ascender	'03-10	✓		
Rodeo	'98-04	✓		

JEEP

Cherokee	'14	✓		
Commander (Standard Crossbars)	'06-10		✓	
Compass / Rallye	'07-14	✓		
Grand Cherokee	'93-14	✓		
Liberty	'02-12	✓		
Patriot	'07-14	✓		

KIA

Borrego	'09-12		✓	
Carens	'07-14	✓		
Rondo	'07-14	✓		
Sedona	'02-14	✓		
Sorento	'03-14		✓	
Soul	'10-14		✓	
Sportage	'11-14	✓		

LAND ROVER

Evoque SDR	'12-14			✓
LR2	'07-14		✓	
LR3	'05-09			✓
LR4	'10-14			✓
Range Rover / Range Rover Sport	'98-14			✓

LEXUS

GX	'03-14	✓		
LX	'99-14		✓	
RX	'04-14	✓		

VEHICLE MAKE, MODEL, AND YEAR	RECOMMENDED BOLT SIZE (mm)		
	55	65	80 *

LINCOLN

Aviator	'03-05		✓	
MKX	'07-14		✓	
Navigator	'98-14		✓	

MAZDA

CX-5	'12-14		✓	
CX-9	'07-14		✓	
MPV	'00-06		✓	
Protégé 5 Wagon	'02-03		✓	
Tribute	'01-11		✓	

MERCURY

Mariner	'05-10	✓		
Monterey	'04-07		✓	
Mountaineer	'96-10		✓	
Sable Wagon	'96-05		✓	
Villager	'93-02	✓		

MINI

Clubman	'08-14		✓	
---------	--------	--	---	--

MITSUBISHI

Endeavor	'04-11		✓	
Montero Sport	'97-00		✓	

NISSAN

Armada	'04-14			✓
Frontier 4DR Crew Cab	'00-14		✓	
Murano	'03-14		✓	
Pathfinder	'96-14		✓	
Quest	'99-14		✓	
Rogue	'08-13		✓	
Xterra	'00-14			✓

OLDSMOBILE

Bravada	'91-04	✓		
Silhouette	'97-04	✓		

PONTIAC

Aztek	'01-05	✓		
Montana	'99-05		✓	
Torrent	'06-09	✓		
Trans Sport	'97-98	✓		
Vibe	'03-10	✓		

PORSCHE

Cayman	'06-14		✓	
--------	--------	--	---	--

SATURN

Outlook	'07-10		✓	
Vue	'02-05		✓	

VEHICLE MAKE, MODEL, AND YEAR	RECOMMENDED BOLT SIZE (mm)		
	55	65	80 *

SUBARU

Baja 4DR	'03-07	✓		
Forester	'98-14		✓	
Impreza 5DR	'12-14		✓	
Impreza WRX / WRX STI 4DR	'02-14		✓	
Impreza WRX / WRX STI 5DR	'02-14		✓	
Legacy Wagon	'95-99		✓	
Outback Sport	'02-11	✓		
Outback Sport / WRX / STI Wagon	'02-11		✓	
Outback Wagon	'00-14		✓	
Tribeca	'06-14		✓	
XV Crosstrek	'12-14		✓	

SUBARU

Baja 4DR	'03-07	✓		
Forester	'98-14		✓	
Impreza 5DR	'12-14		✓	
Impreza WRX / WRX STI 4DR	'02-14		✓	
Impreza WRX / WRX STI 5DR	'02-14		✓	
Legacy Wagon	'95-99		✓	
Outback Sport	'02-11	✓		
Outback Sport / WRX / STI Wagon	'02-11		✓	
Outback Wagon	'00-14		✓	
Tribeca	'06-14		✓	
XV Crosstrek	'12-14		✓	

SUZUKI

Grand Vitara	'06-13	✓		
XL-7	'07-09	✓		

TOYOTA

4Runner	'90-14	✓		
FJ Cruiser	'07-14		✓	
Highlander	'01-14		✓	
Land Cruiser	'98-14		✓	
Matrix	'03-14	✓		
RAV4	'01-14		✓	
Sequoia	'01-14		✓	
Sienna	'98-14	✓		
Tacoma 4DR Quad Cab	'05-14	✓		
Venza	'09-14	✓		

VOLVO

V50	'05-11		✓	
V70	'98-10		✓	
V70 XC	'98-10		✓	
XC60	'09-14		✓	
XC70	'01-14		✓	
XC90	'03-14		✓	