



➤ Instructions


Thule Rapid Gutter Footpack 300101, 387101, 953101

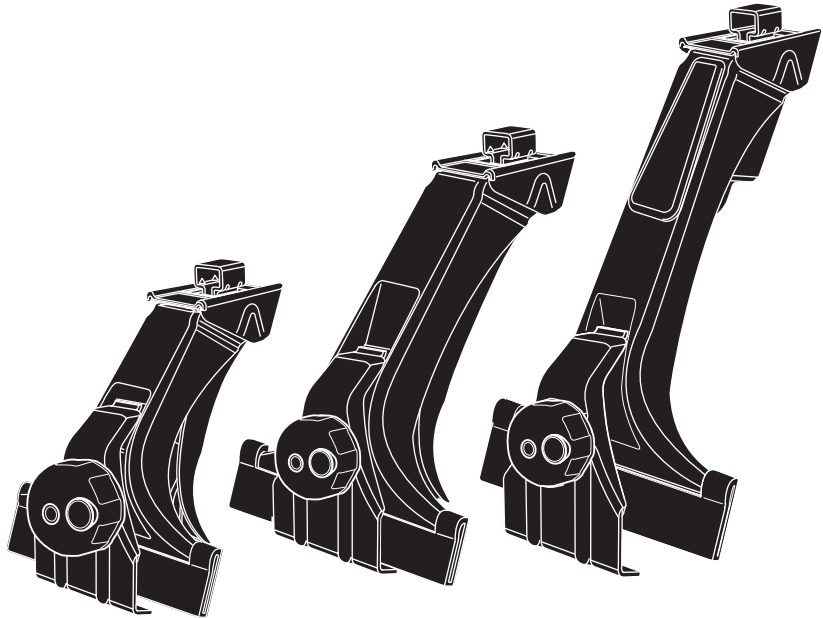


EN Roof mounted load carrier

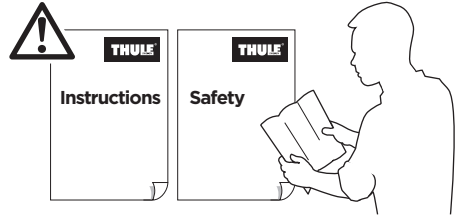


300101

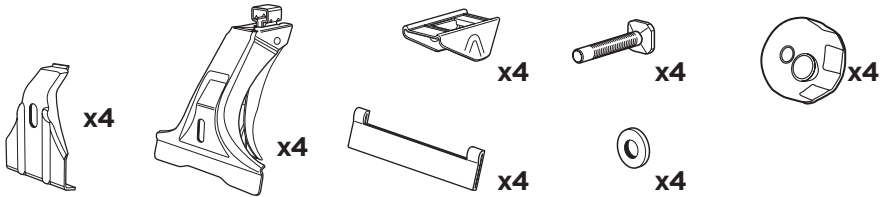



387101

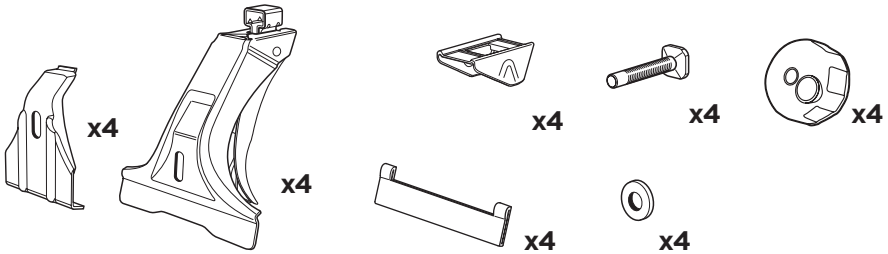

953101







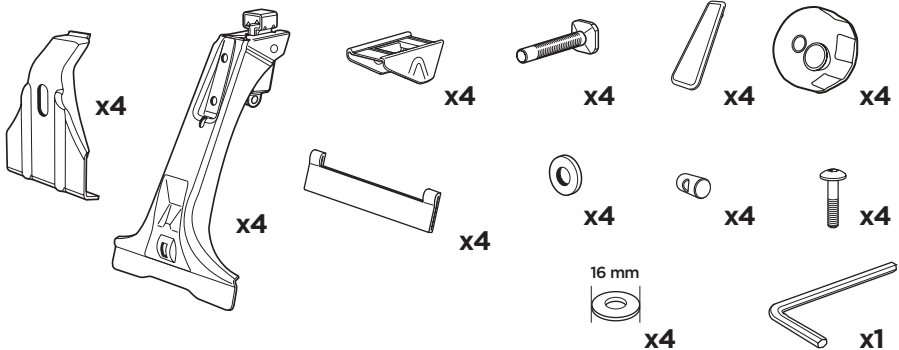


i

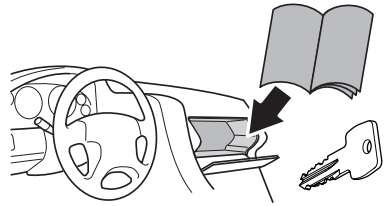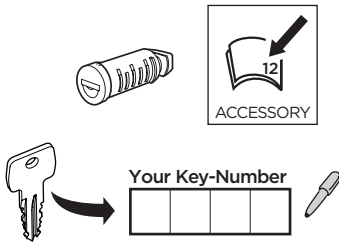

i

- 300101  5.3 lbs
- 387101  7.7 lbs
- 953101  7 lbs

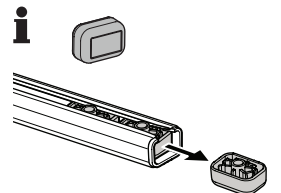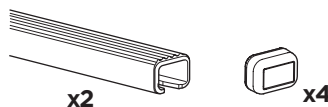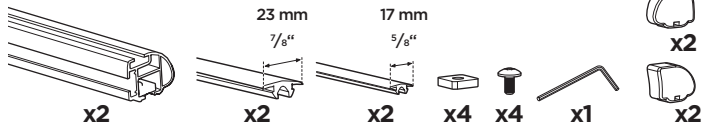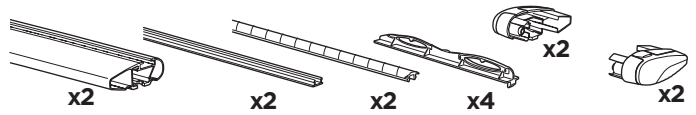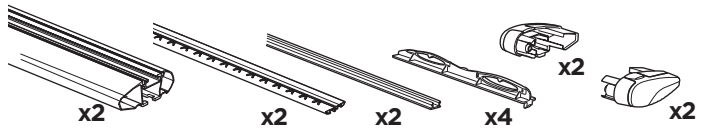
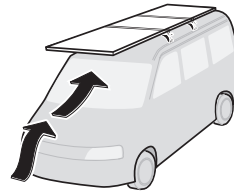
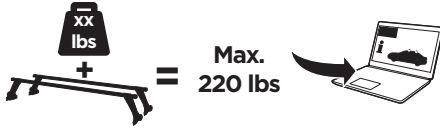


1


300101

387101

953101

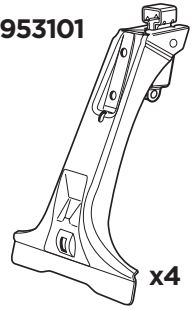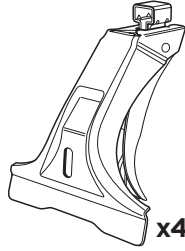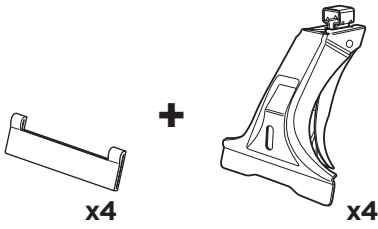


A

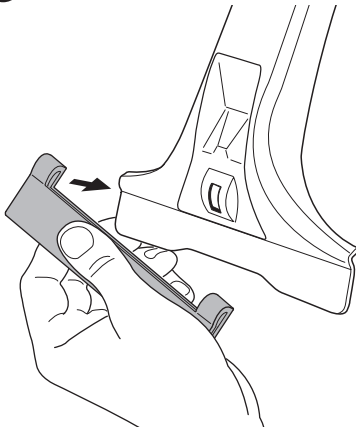

ok



+

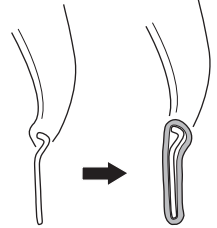


→



Not ok





+

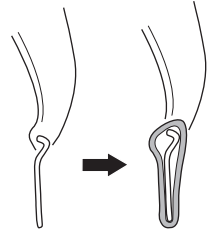

→






B

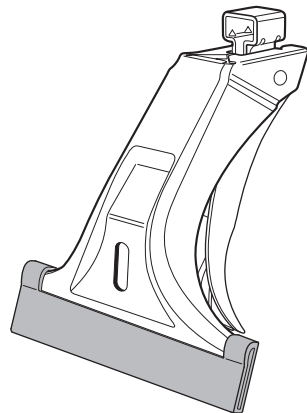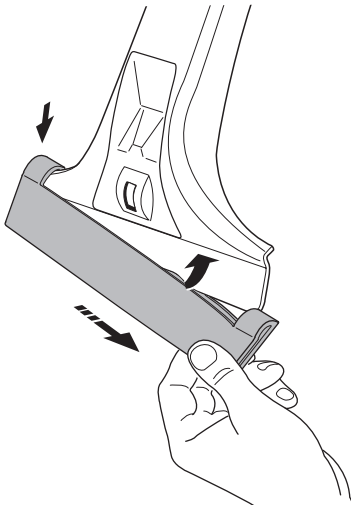


2



300101, 387101

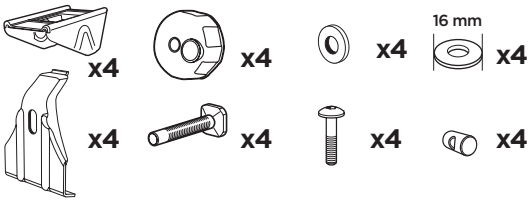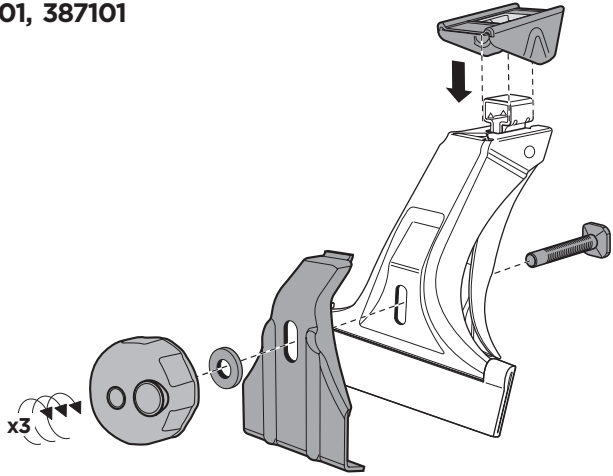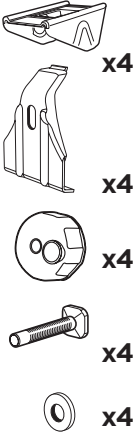


953101

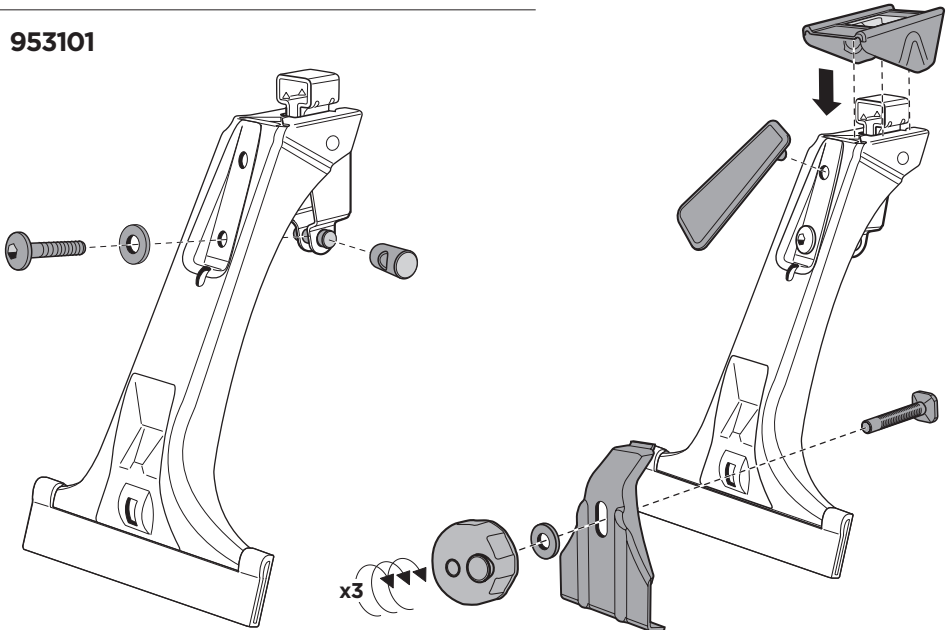


3

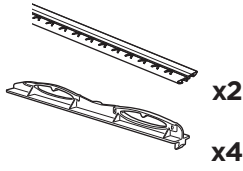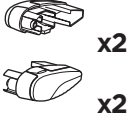


A

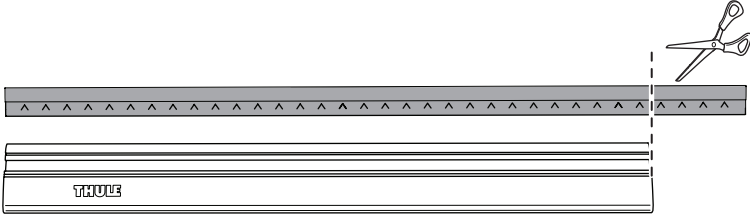


B

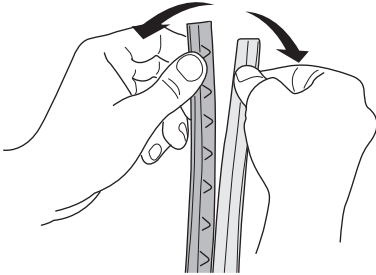


C





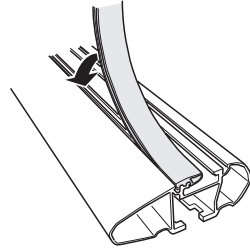





D

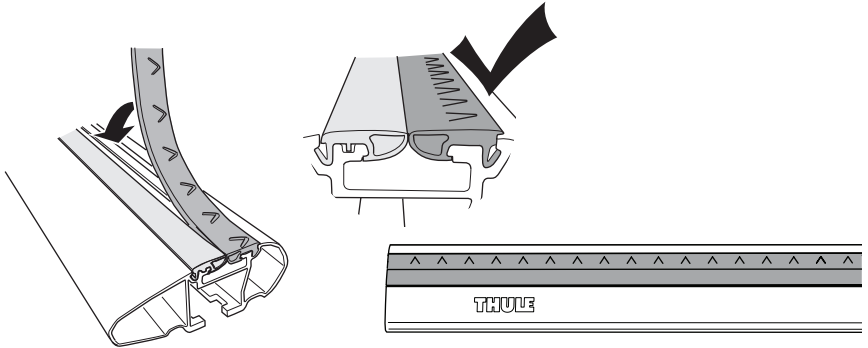



E



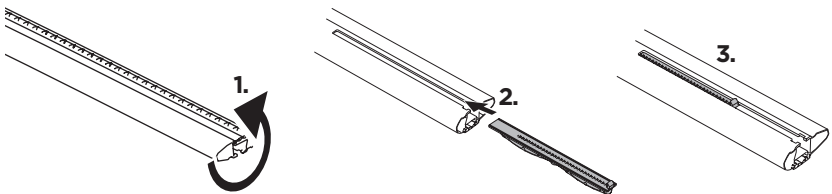


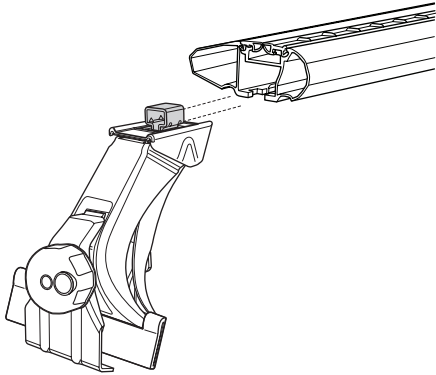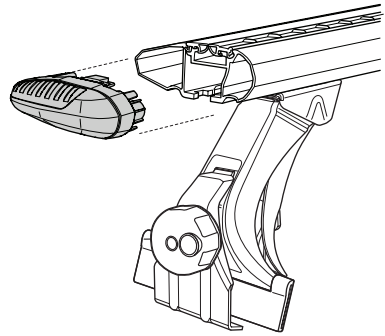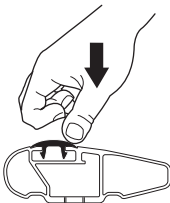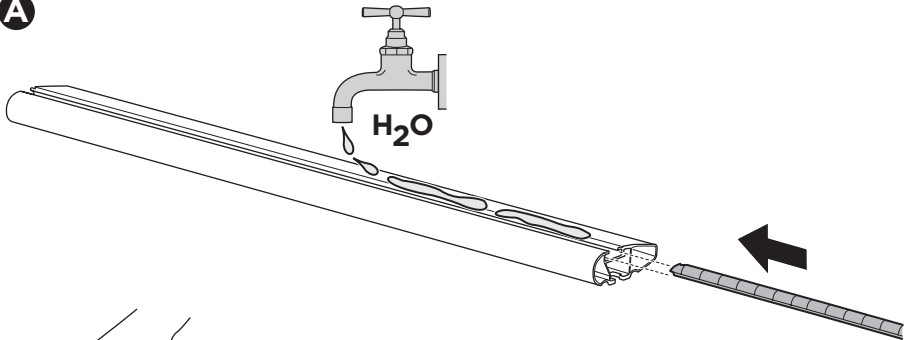F**G****4****x2****x2****x2****x4****A**

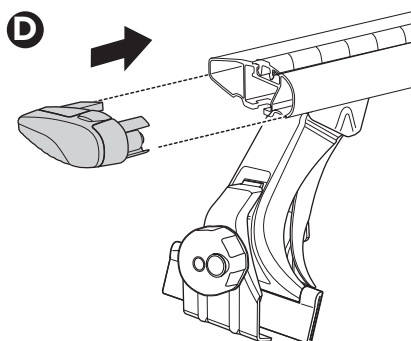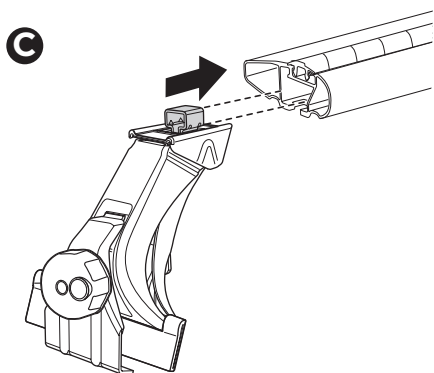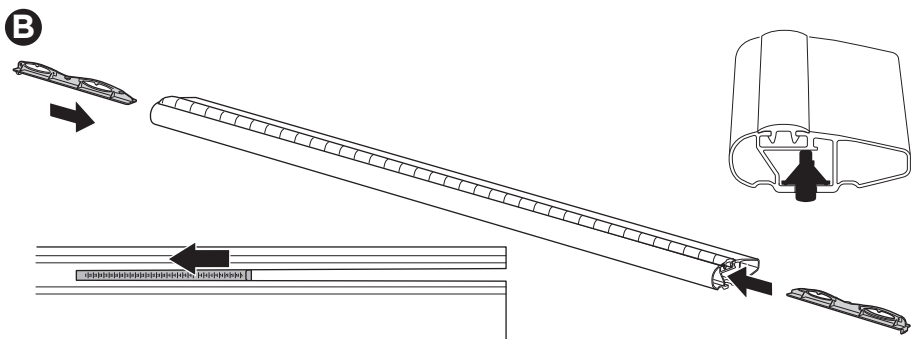


5

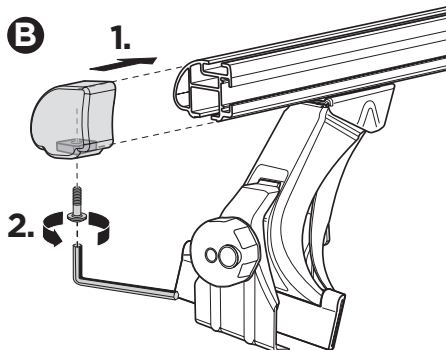
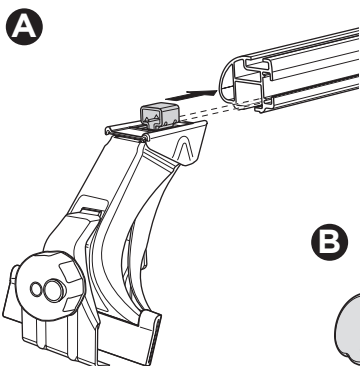


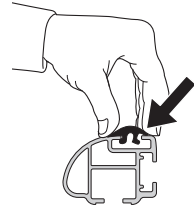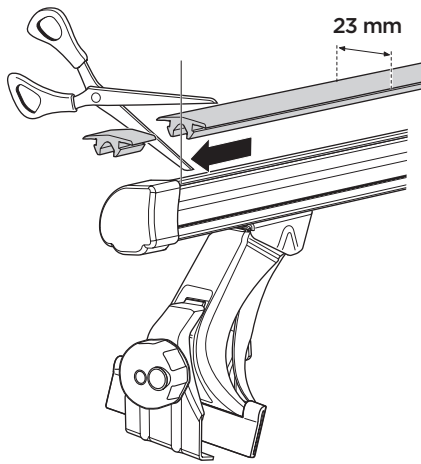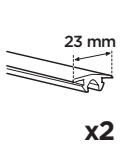



6




A

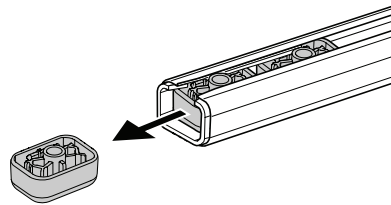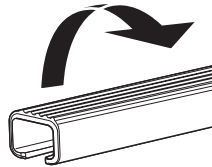



B

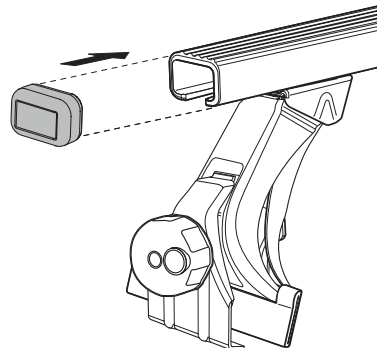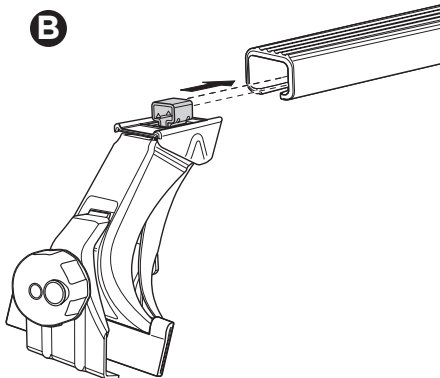


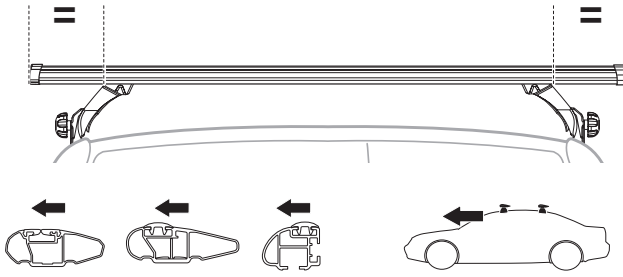



7

300101, 387101







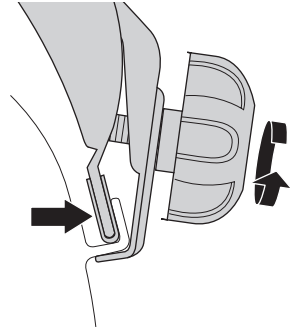
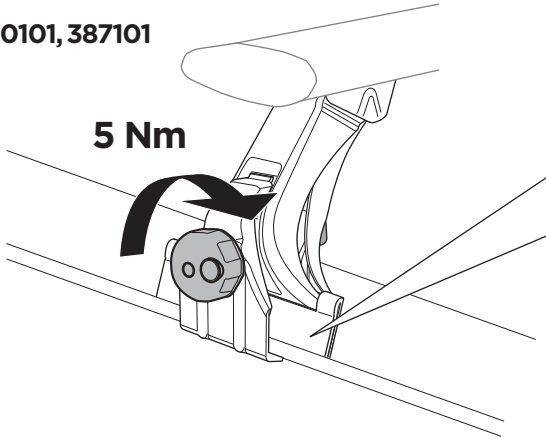









953101

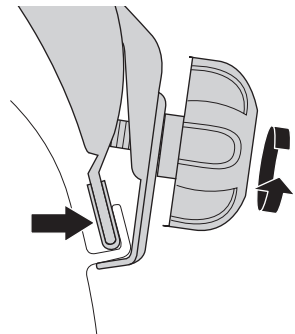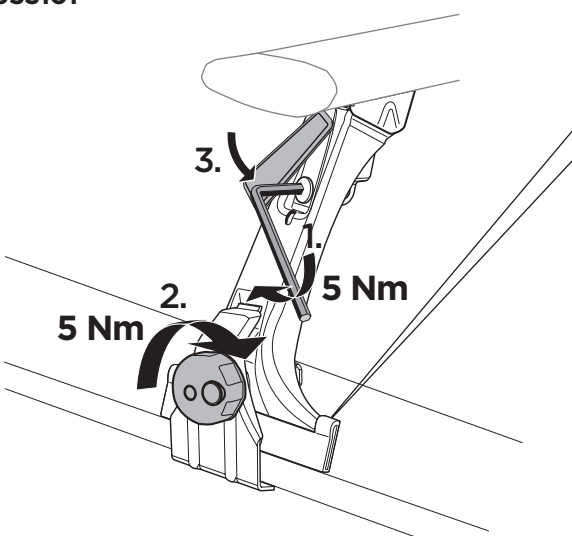

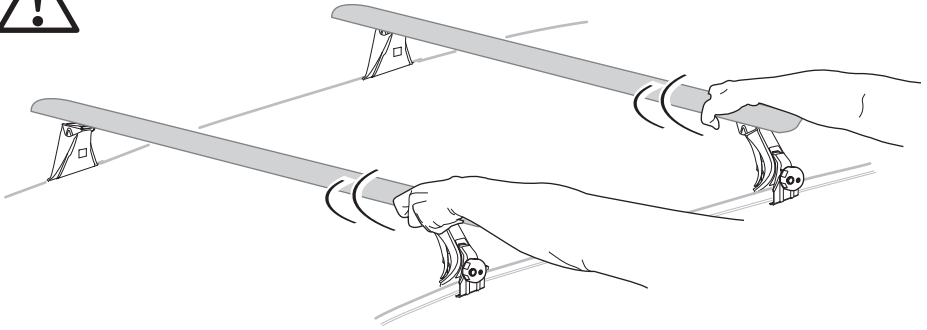

8

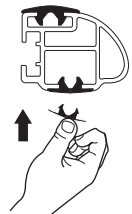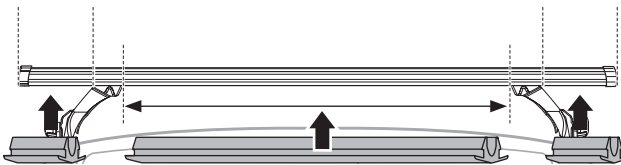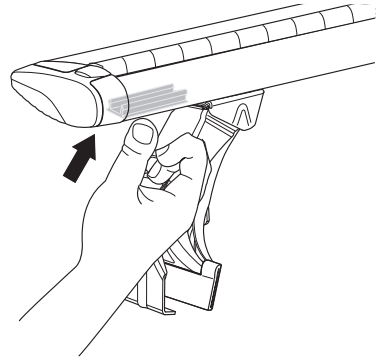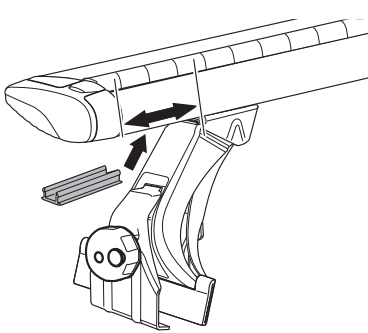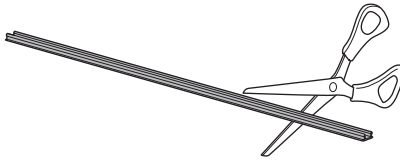

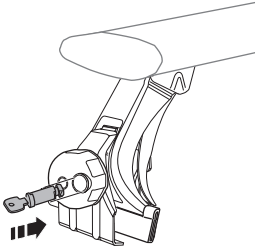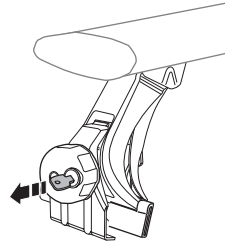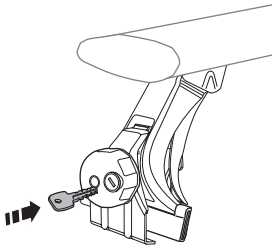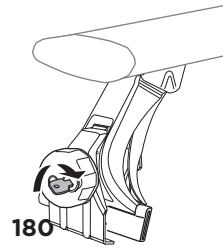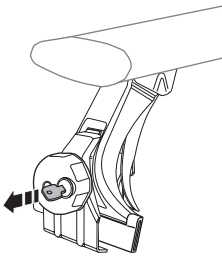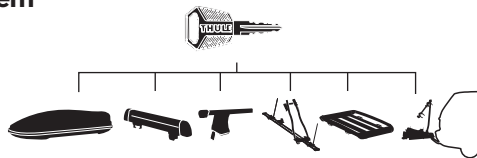i**Accessory****A****B****C****D****E****EN** Accessories**Thule One-Key System****450200** (x2)**450400** (x4)**450600** (x6)**450800** (x8)

Learn more about roof racks and cargo carriers we have.