

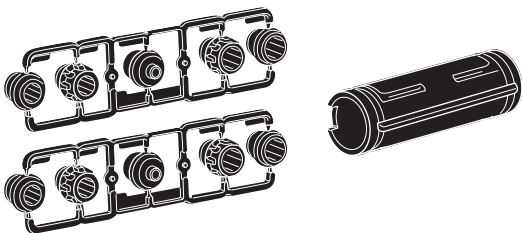



# > Instructions

Thule FastRide Ø9-15mm Axle  
Adapter Kit  
564100

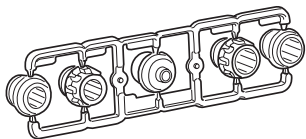

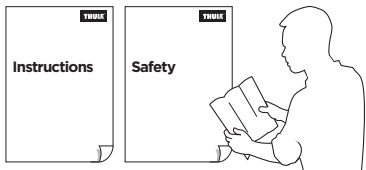


x2


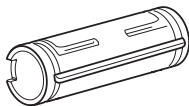


x1


**i** For Thule FastRide  
564001, 564005

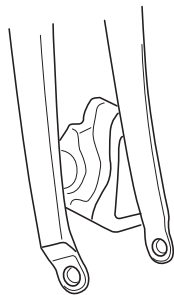


Bikes with  $\varnothing 9 - 15$  mm Axles

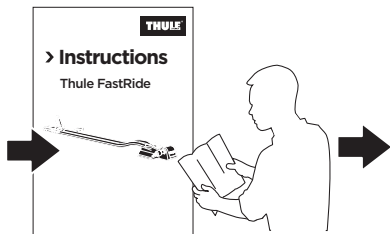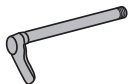


# 1

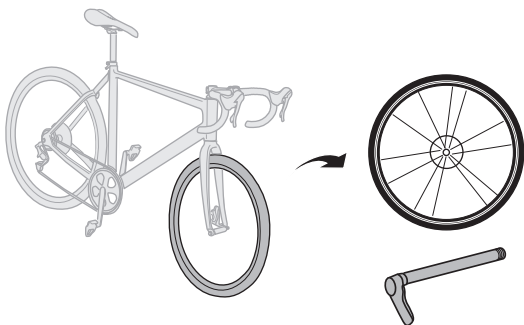


# 2

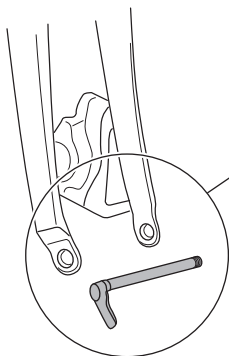


- ➔ ① Ø12 x 100mm Thru-Axle
- ➔ ② Ø12 x 110mm Thru-Axle
- ➔ ③ 9mm captive
- ➔ ④ Ø15 x 110mm Thru-Axle
- ➔ ⑤ Ø15 x 100mm Thru-Axle

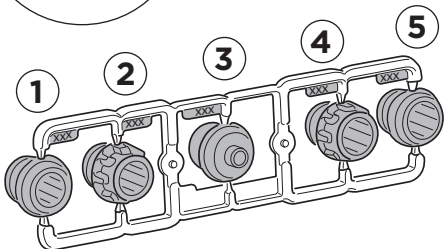

**3**

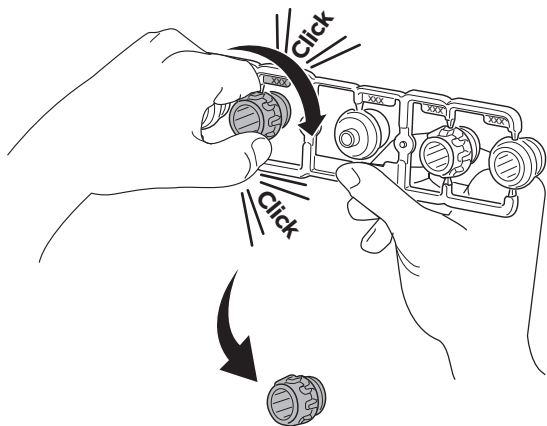


**4**

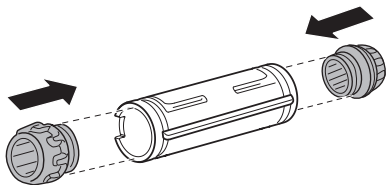


**5**


**A**

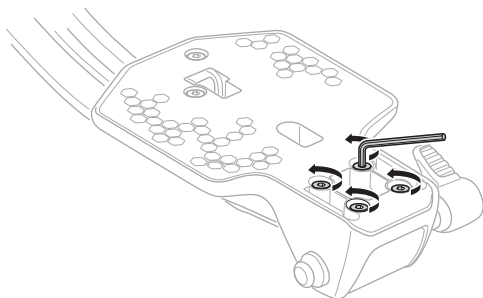


**B**

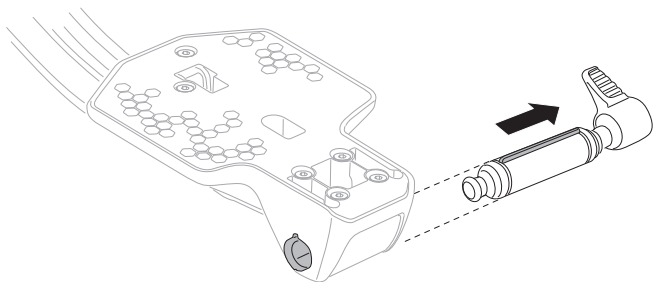

**C**

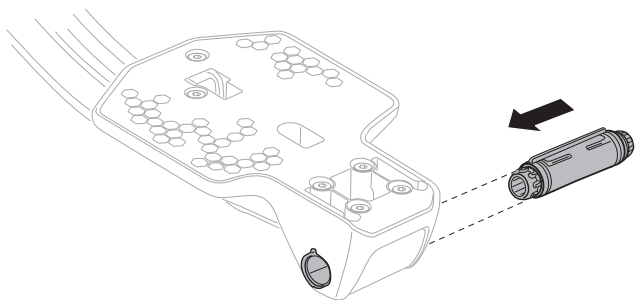


**D**

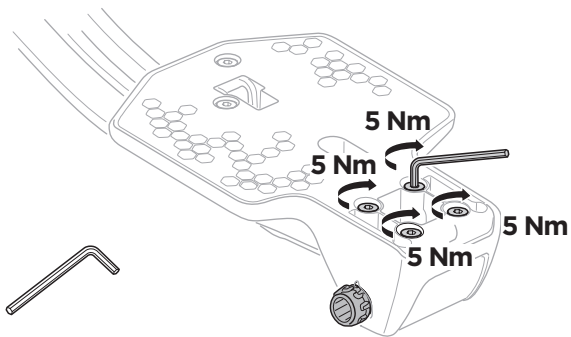


**6**


**A**

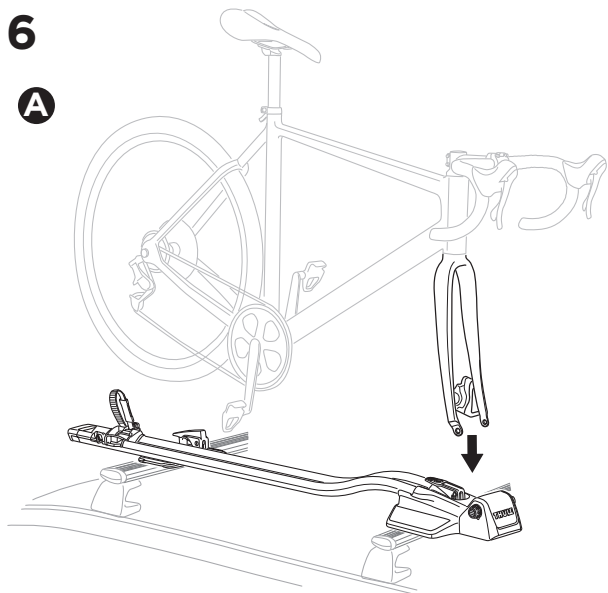

**B**

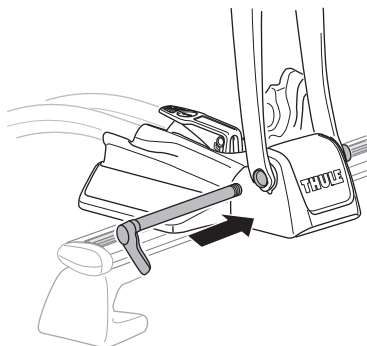

C

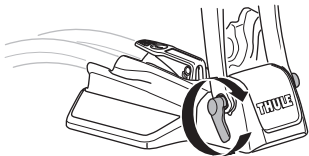

Follow bike manufacturer's recommendation for tightening torque!

Learn more about roof racks on our website.