



# ➤ Instructions


## Thule Rapid Gutter Footpack 300101, 387101, 953101

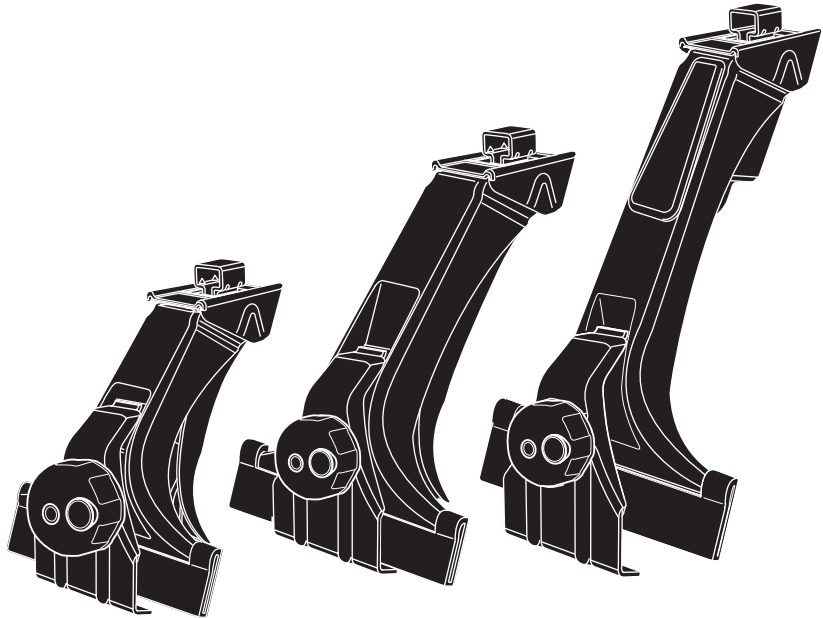


**EN** Roof mounted load carrier

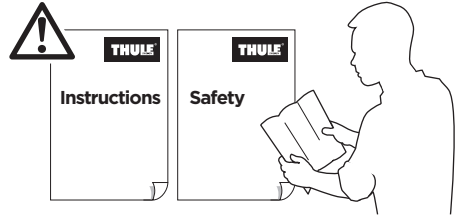


**300101**

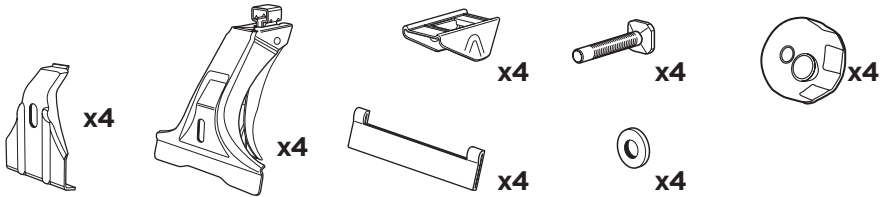



**387101**

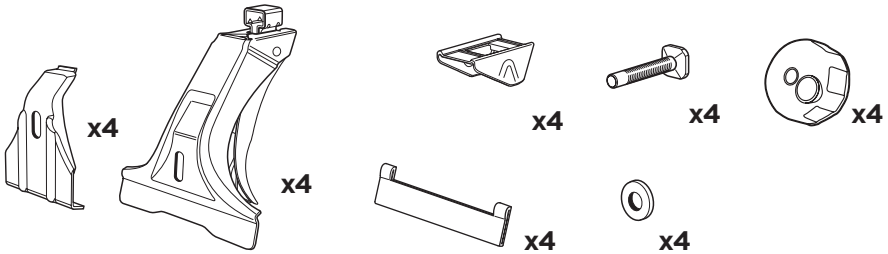

**953101**







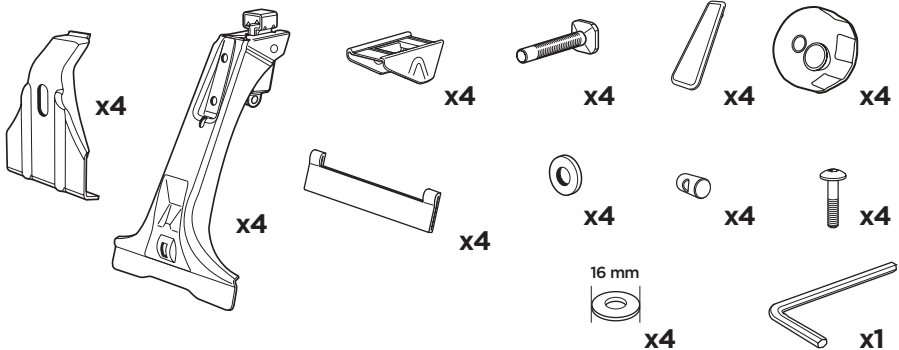


**i**

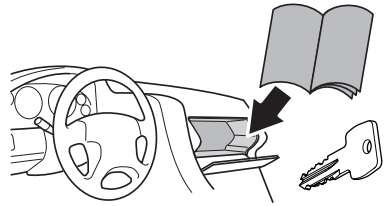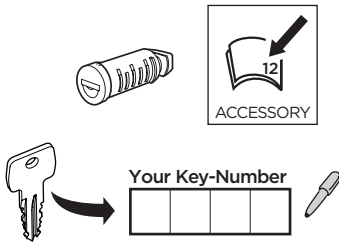

**i**

- 300101  5.3 lbs
- 387101  7.7 lbs
- 953101  7 lbs

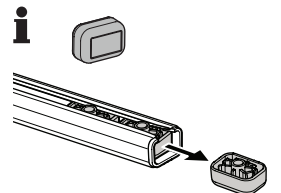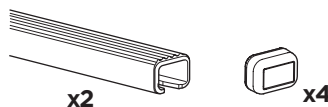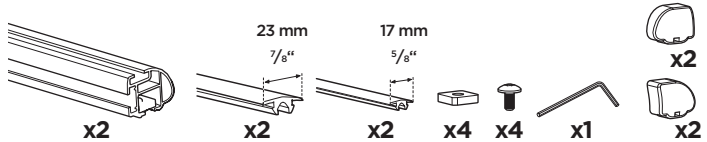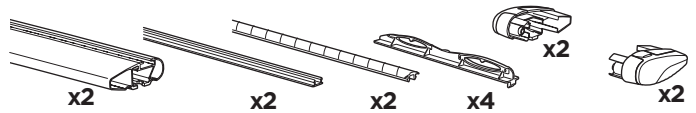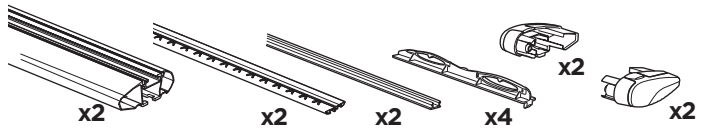
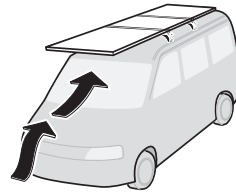
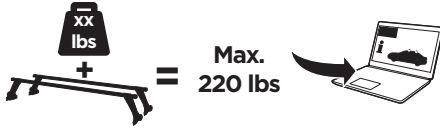


1


300101

387101

953101

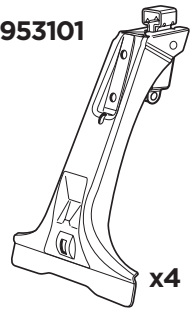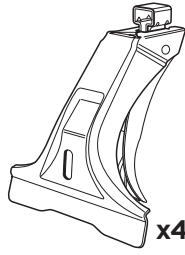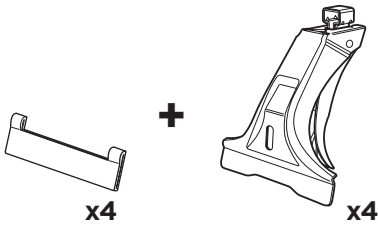


A

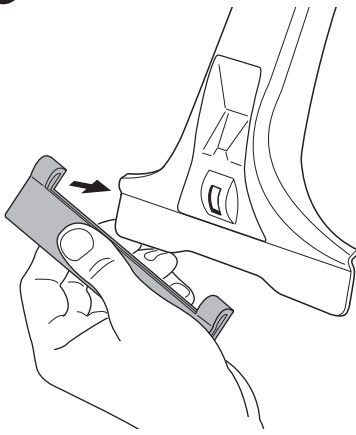

ok



+

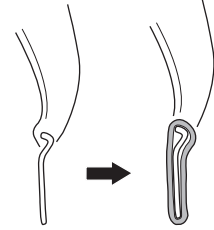


→

Not ok





+

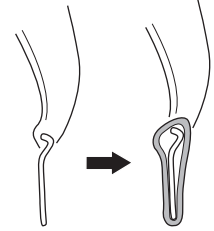




→

B

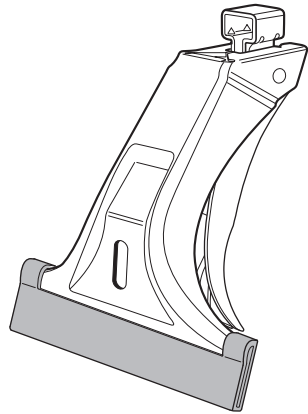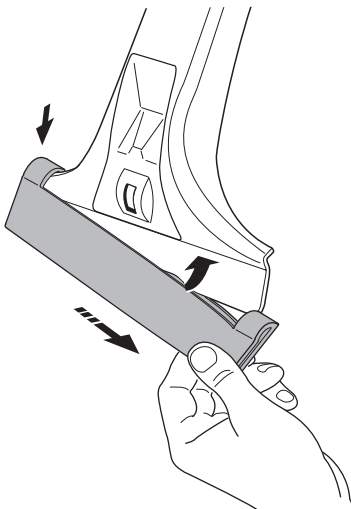


**2**


**300101, 387101**

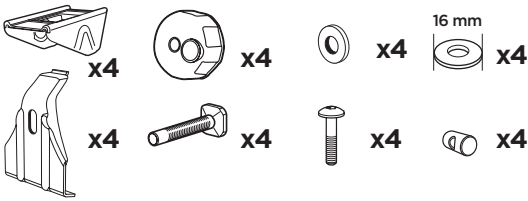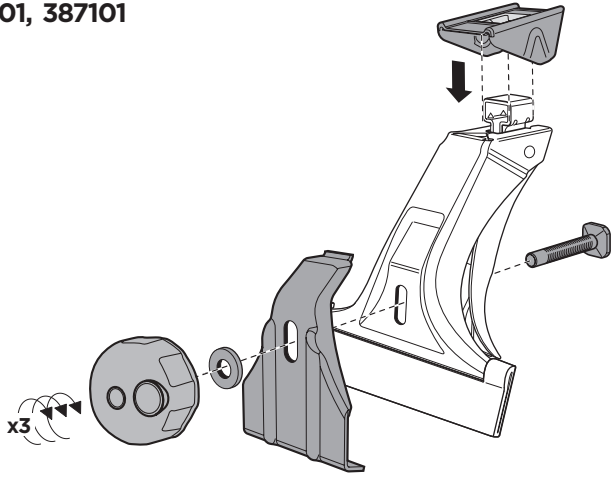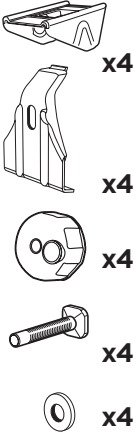


**953101**

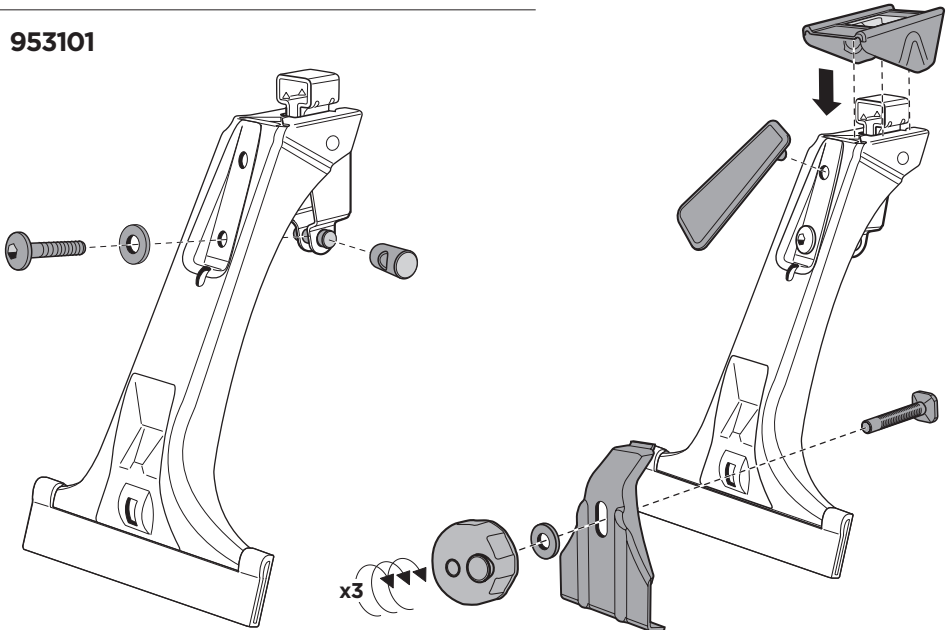


**3**

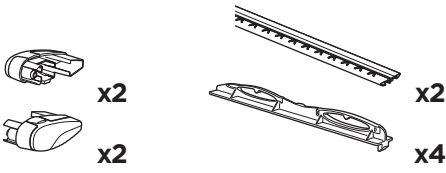


**A**

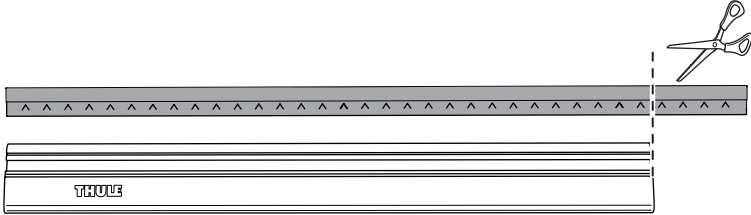


**B**

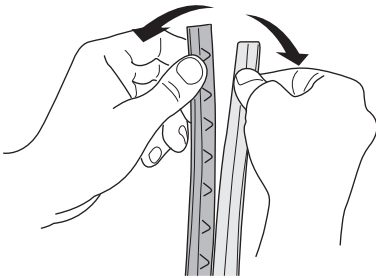


**C**






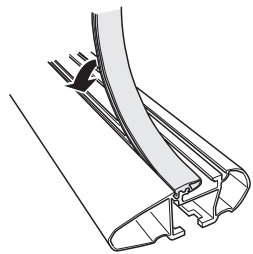





**D**

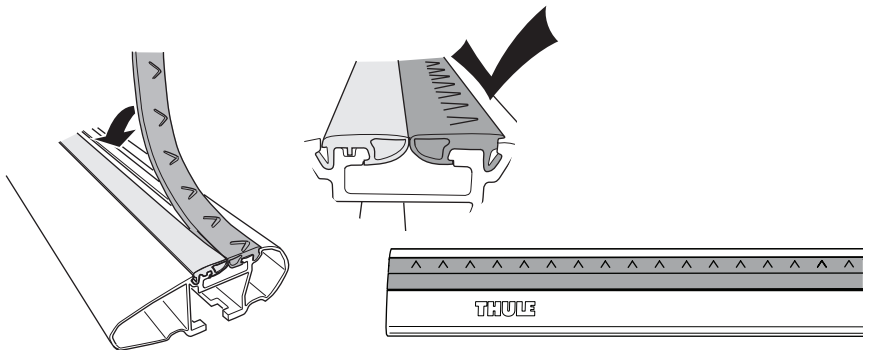



**E**



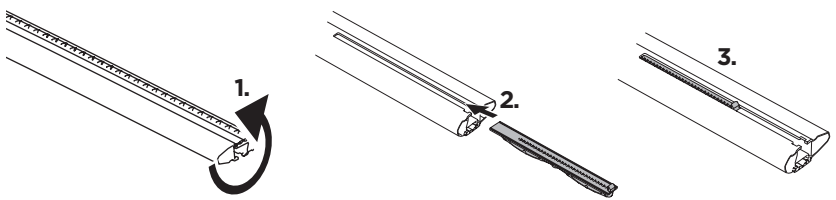


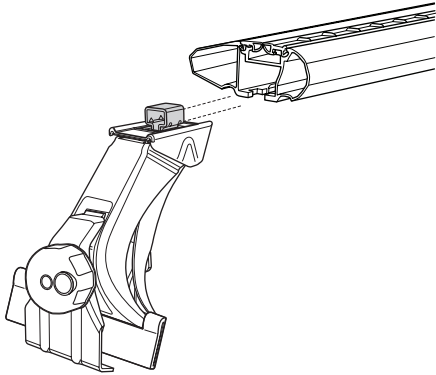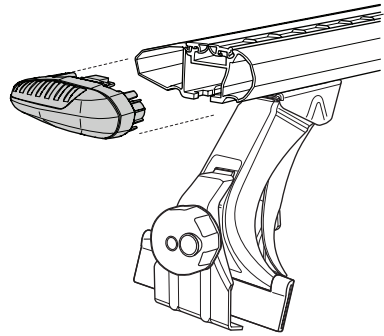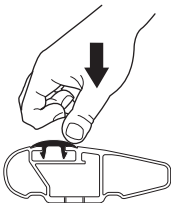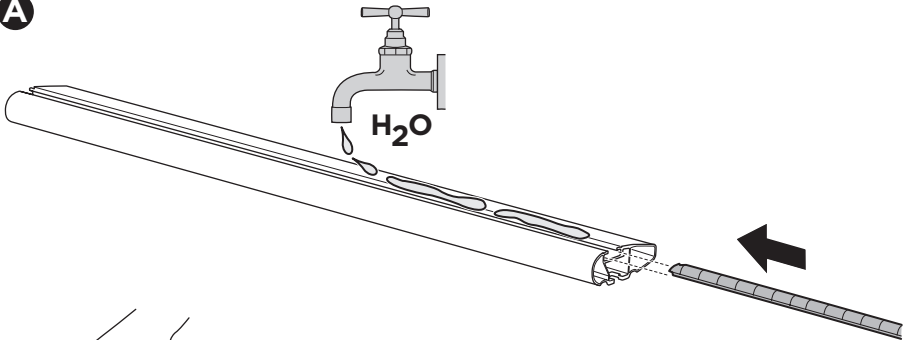**F****G****4****x2****x2****x2****x4****A**

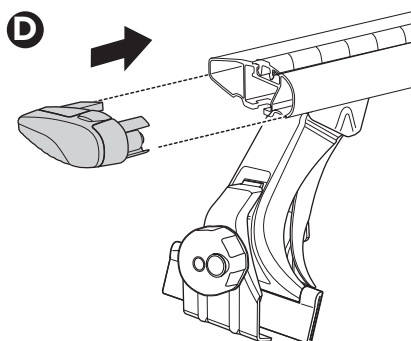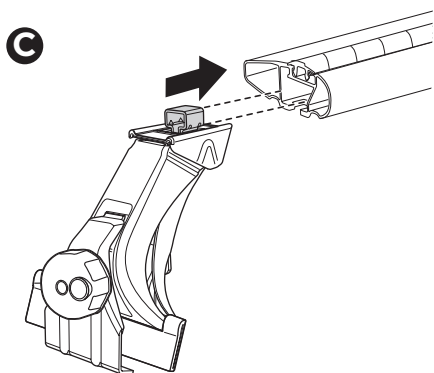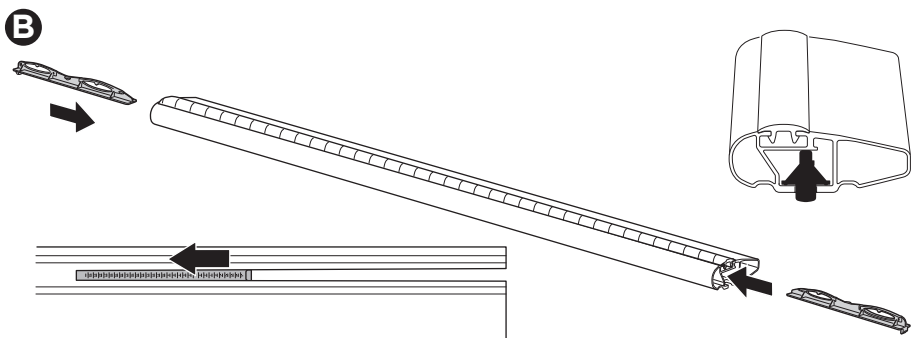


**5**

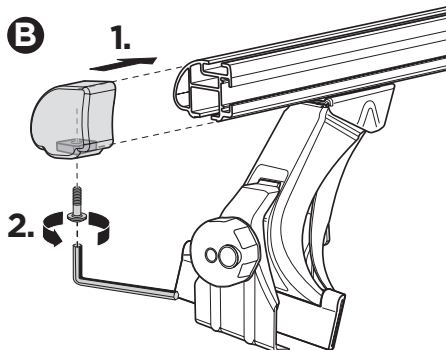
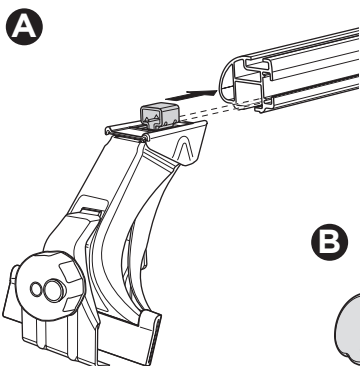


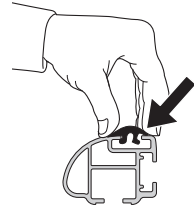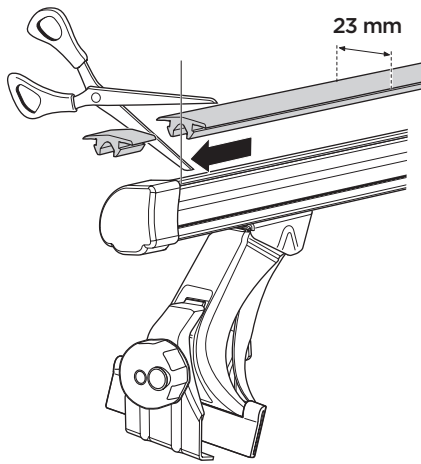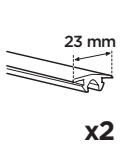



6




A

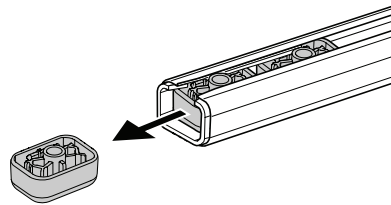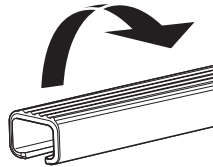



B

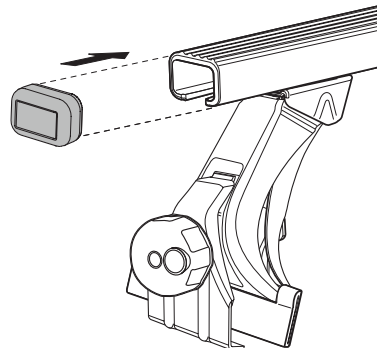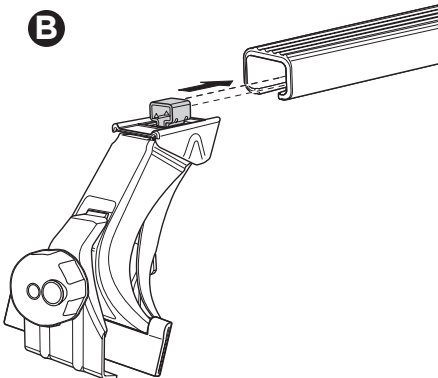


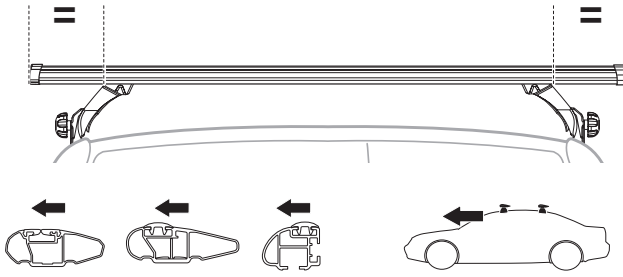



**7**

**300101, 387101**







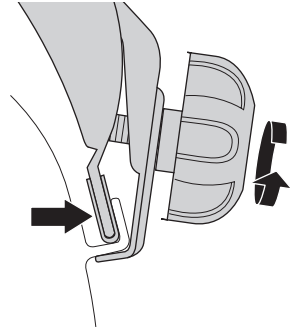
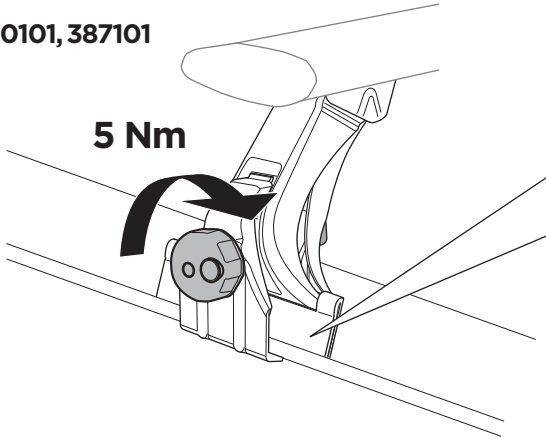









**953101**

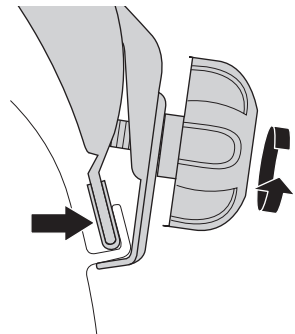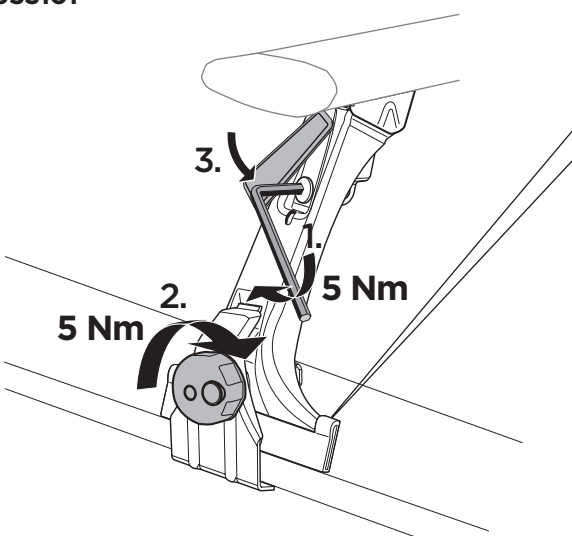

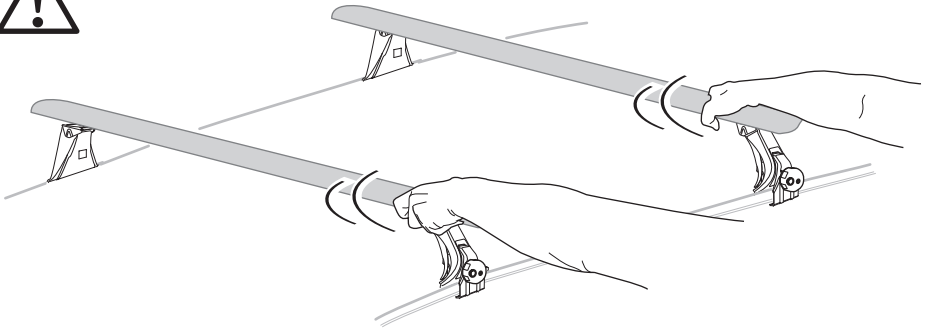

8

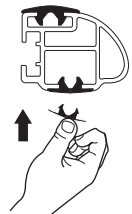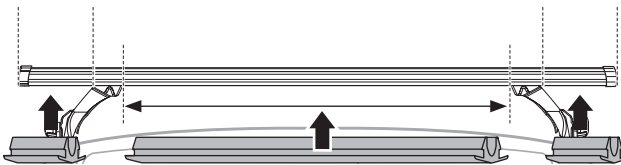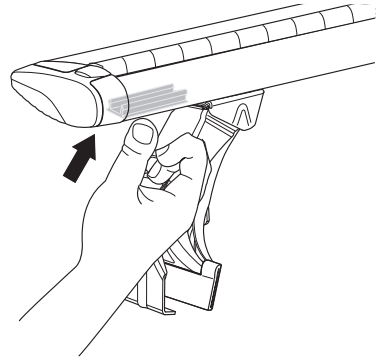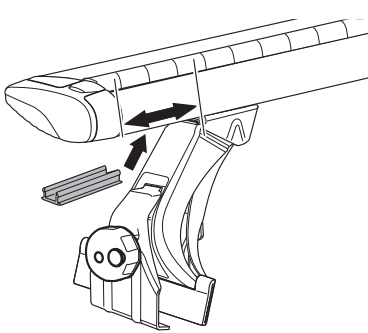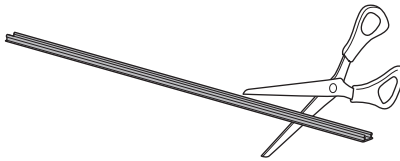

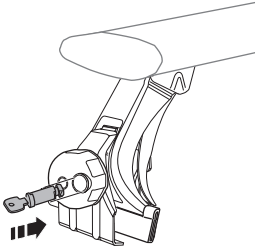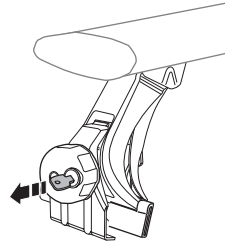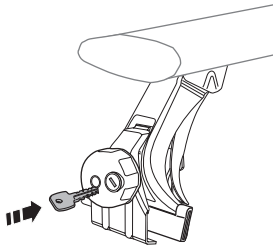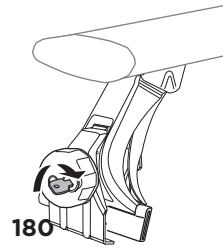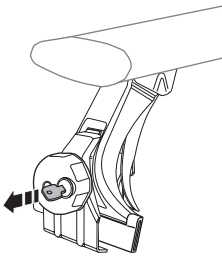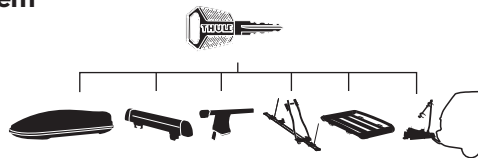**i****Accessory****A****B****C****D****E****EN** Accessories**Thule One-Key System****450200** (x2)**450400** (x4)**450600** (x6)**450800** (x8)

Learn more about roof racks and cargo carriers we have.