














## Thule XT Kit 3031

# > Instructions



FIAT Ducato, 4-dr Van, 06-  
PEUGEOT Boxer, 4-dr Van, 06-  
CITROËN Jumper, 4-dr Van, 06-

This kit is only for vehicles with fixpoint mounting.

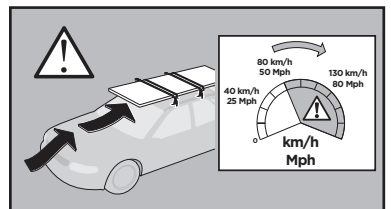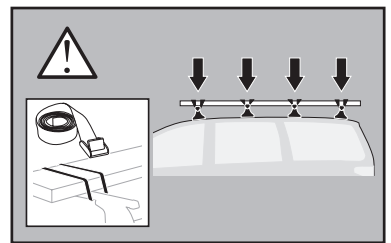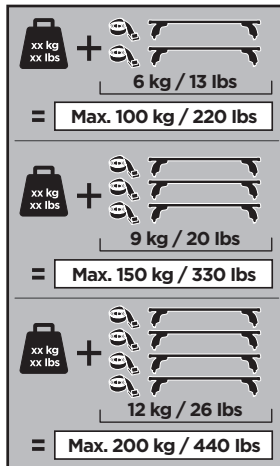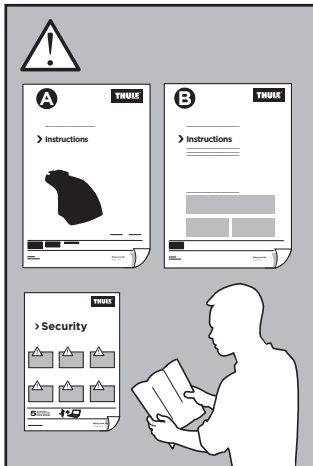

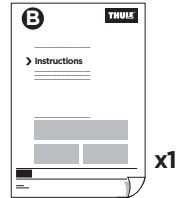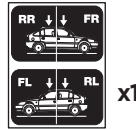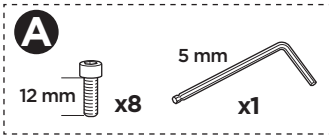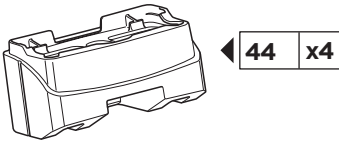


1

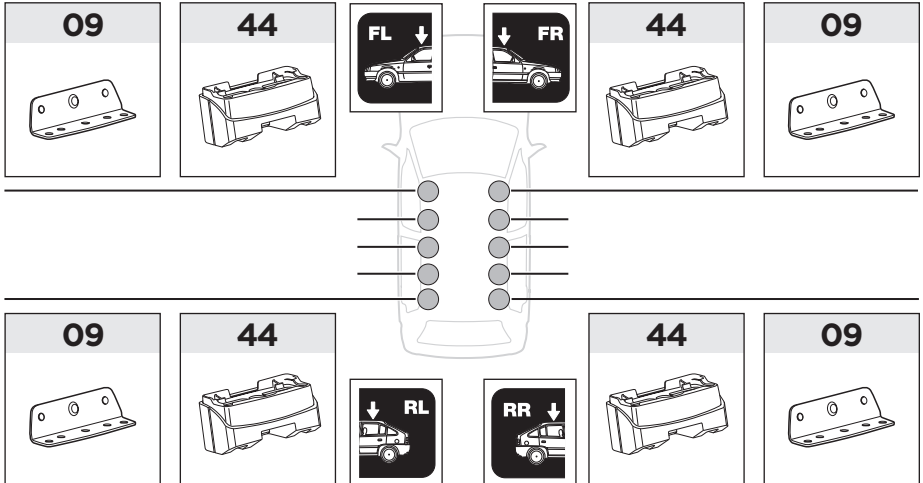
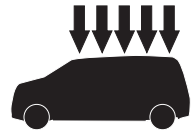


**2**

**A**

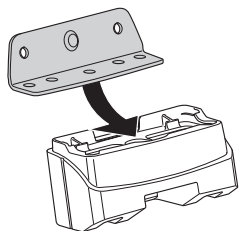


**B**

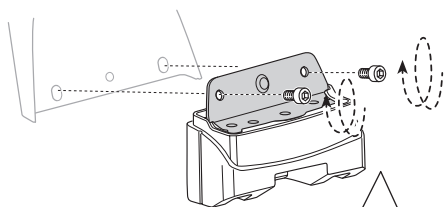


Only a few turns




**3**




x1

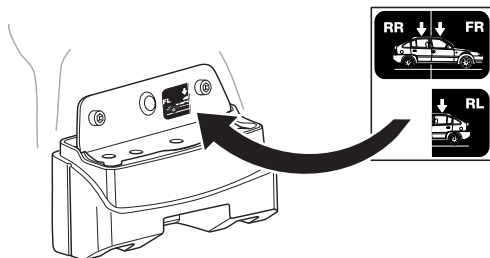


**2**

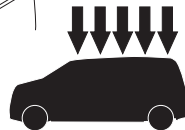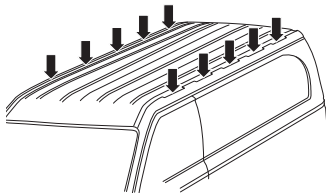


**A**

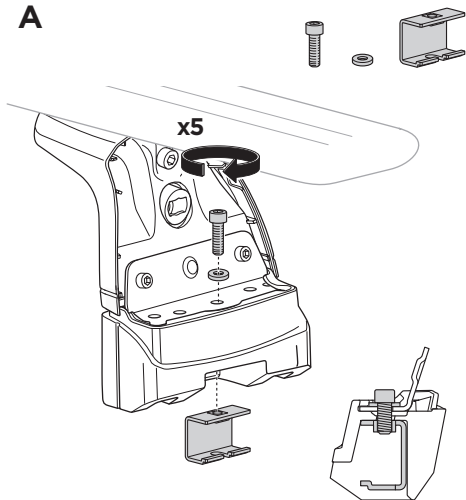


**B**

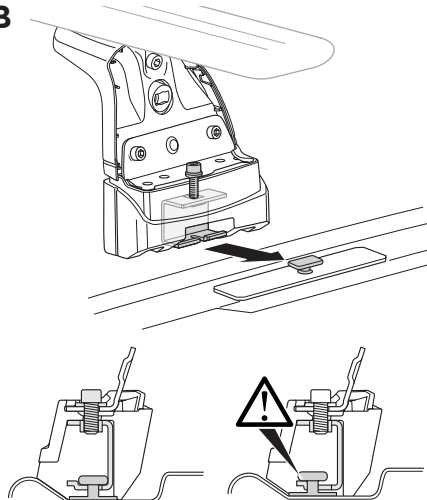

**C**

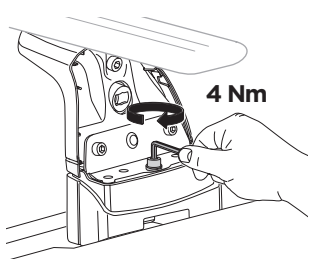

**D**

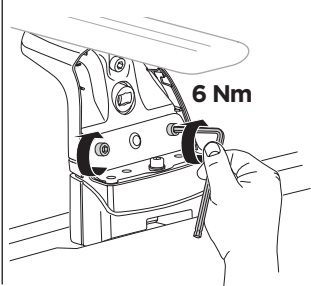

**E**

