







Thule XT Kit 3032

> Instructions

FORD Transit Connect, 4-dr Van, 14-
MERCEDES Sprinter, 4-dr Van, 06-
VOLKSWAGEN Crafter, 4-dr Van, 06-




This kit is only for vehicles with fixpoint mounting.

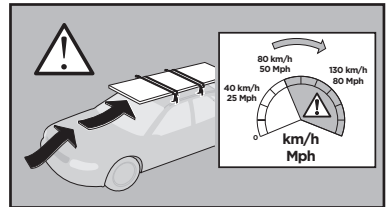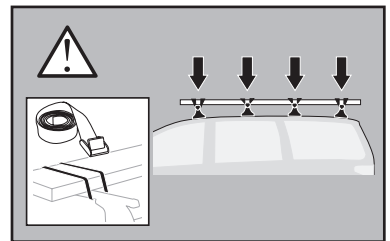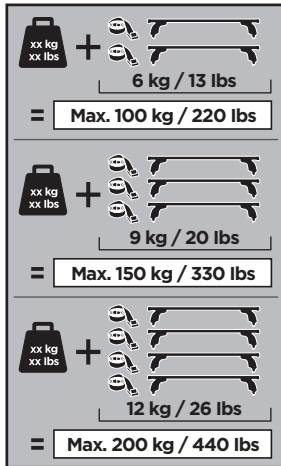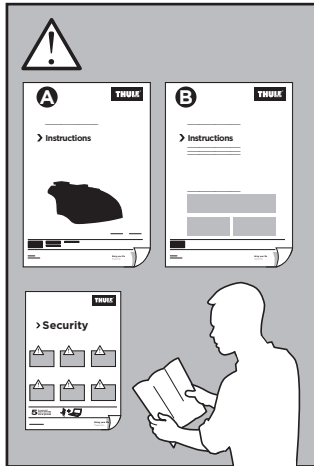

ISO 11154-E

183032

[Roof Racks & Cargo Carriers](#)

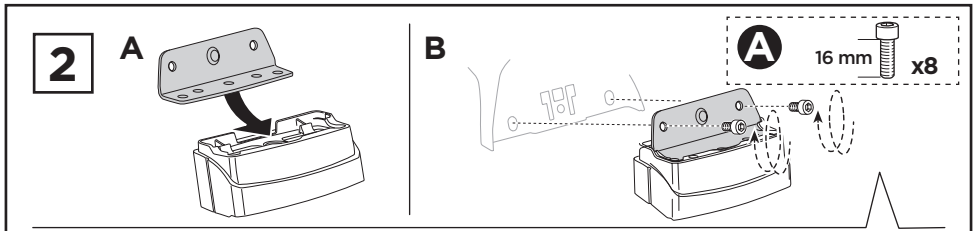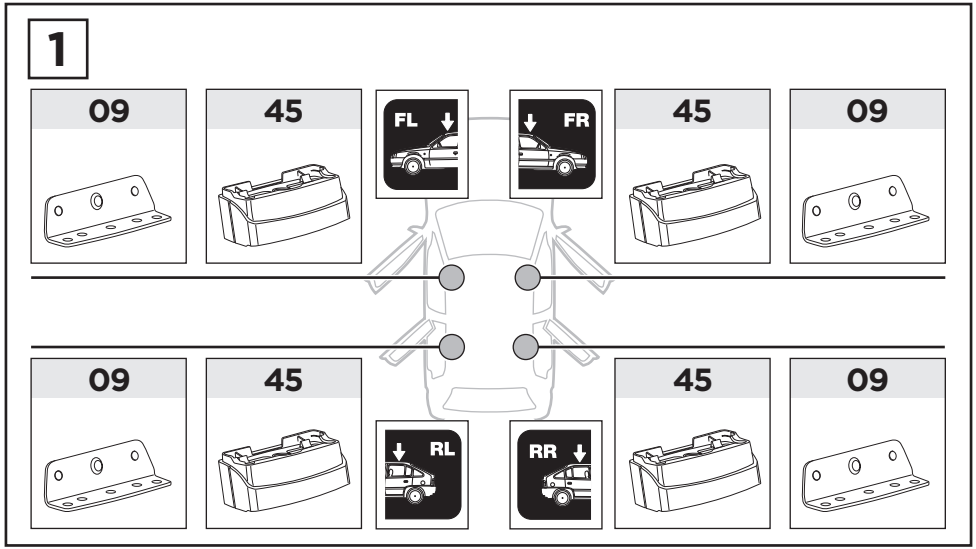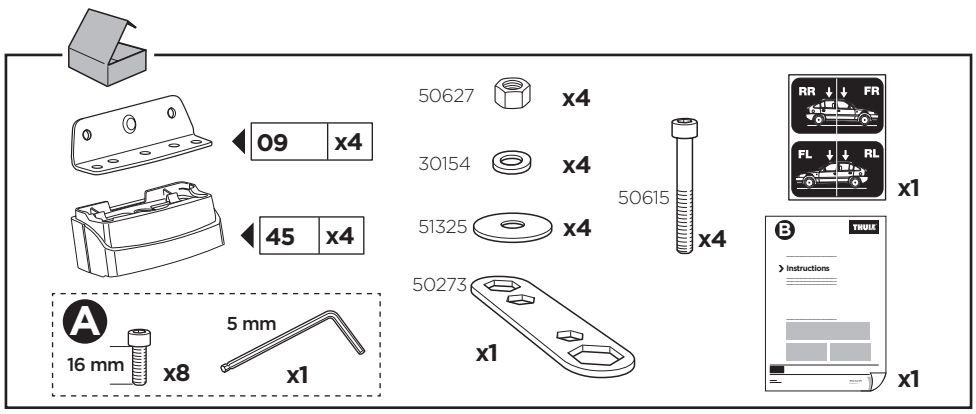


EN Only a few turns

3




x1

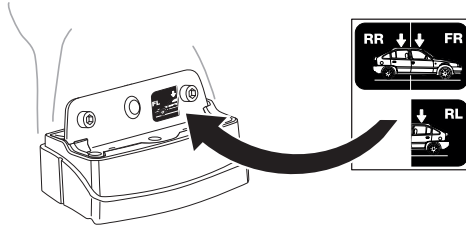


4

MERCEDES
VOLKSWAGEN



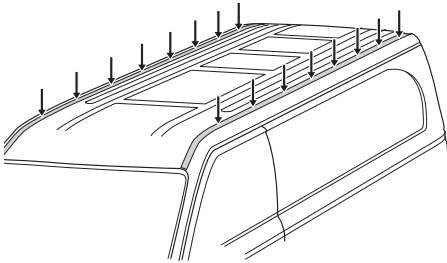


FORD

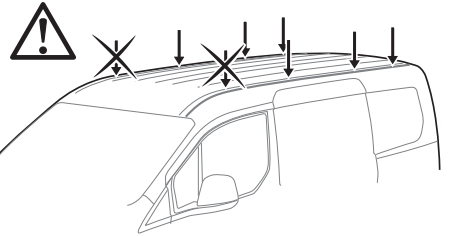

5

MERCEDES
VOLKSWAGEN

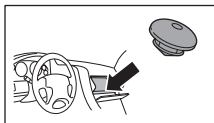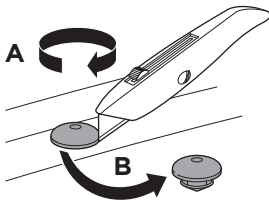

FORD

