



Thule XT Kit 3088

> Instructions

CHEVROLET Combo, 4-dr Van, 12-

FIAT Doblo, 4-dr Van, 10-

OPEL Combo, 4-dr Van, 12-

VAUXHALL Combo, 4-dr Van, 12-

This kit is only for vehicles with fixpoint mounting.

A THULE
> Instructions
751 FootPack

A THULE
> Instructions
753 FootPack

B THULE
> Instructions


Security THULE

xx kg / xx lbs + 6 kg / 13 lbs = Max. 100 kg / 220 lbs

xx kg / xx lbs + 9 kg / 20 lbs = Max. 150 kg / 330 lbs

80 km/h / 50 Mph, 130 km/h / 90 Mph, 40 km/h / 25 Mph

km/h / Mph

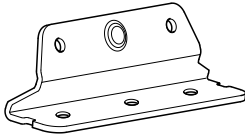


◀ 04 x4

50596



x8



x4




751
FootPack

A



12 mm x8



5 mm x1




753
FootPack


A



16 mm x8



5 mm x1



x1









x1


1





751
FootPack

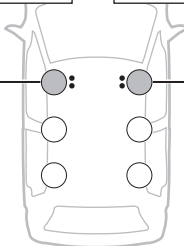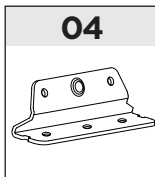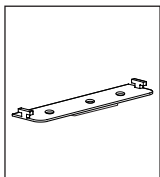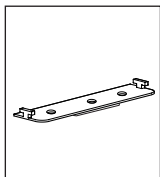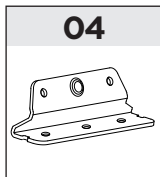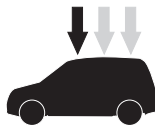


A

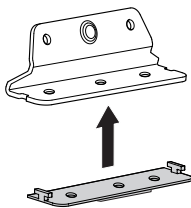

B





x1

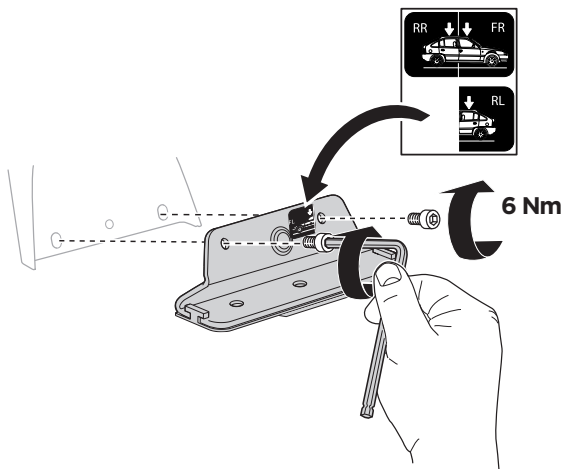


1




753
FootPack

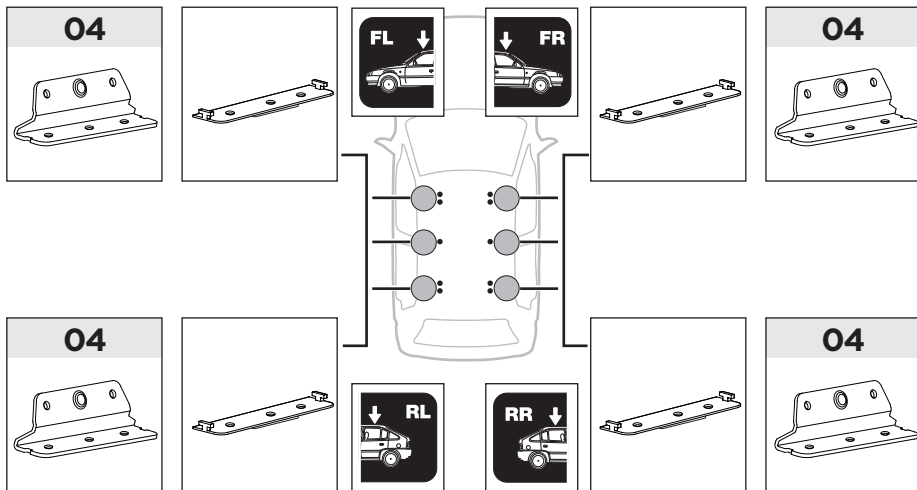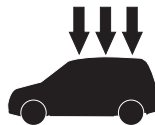

A

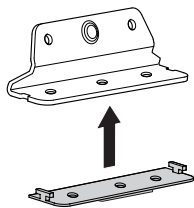

B

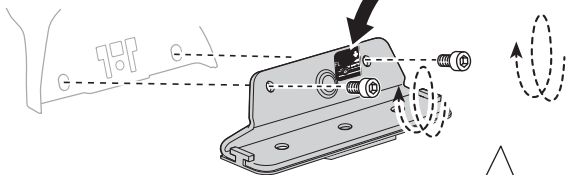

Only a few turns


2



751
FootPack

A


5 mm




x1




x4

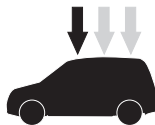



A

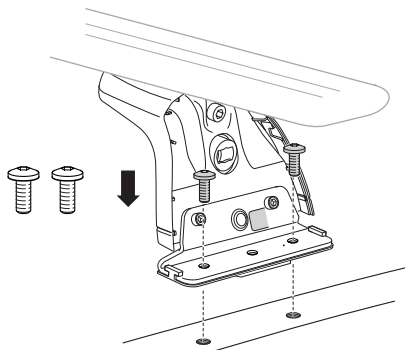

B

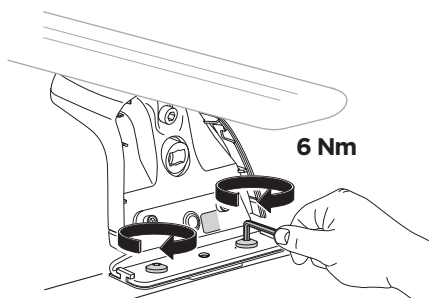

C

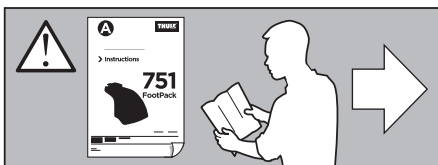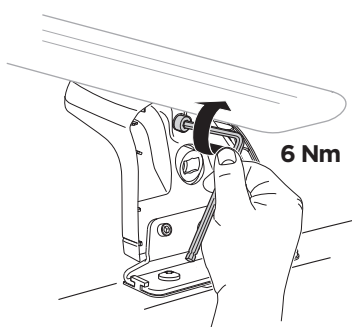

2

753
FootPack

