
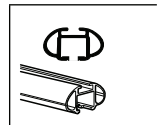


Kit 3113



COMPATIBILITY AND RESTRICTIONS

- *Installation requires drilling the roof and permanently installing parts.*
- *Access to underside of mounting surface is required.*
- *Tools and some mechanical skills are required. If concerned about installation, have installed by professional installer.*
- *Not for off road use*
- *Do not install if roof has had bodywork.*
- *Do not install on vehicles with sunroofs.*
- *Do not install on vehicles with side curtain airbags.*
- *Do not install on vehicles with factory racks.*

460R




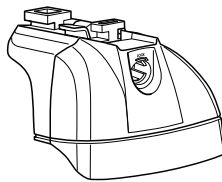


460

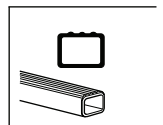
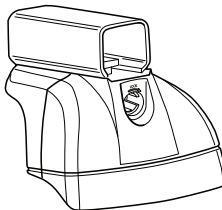


460R

460

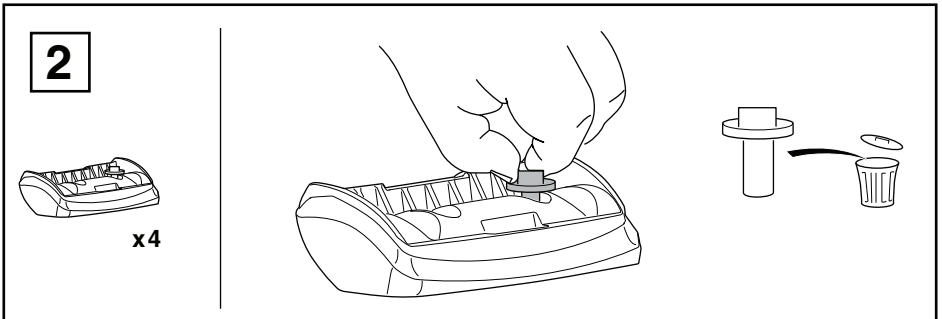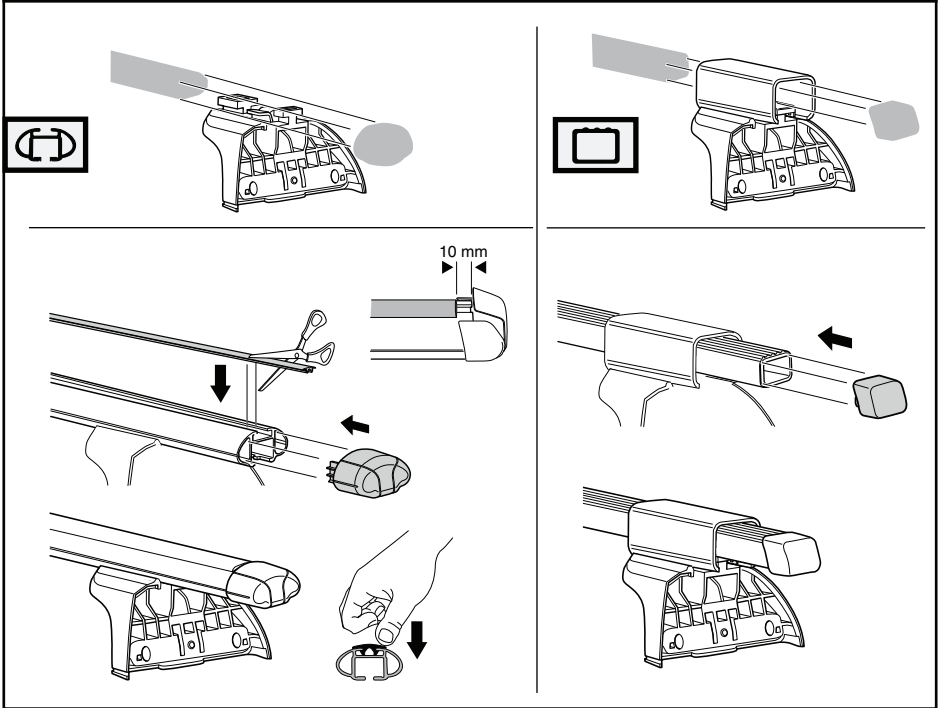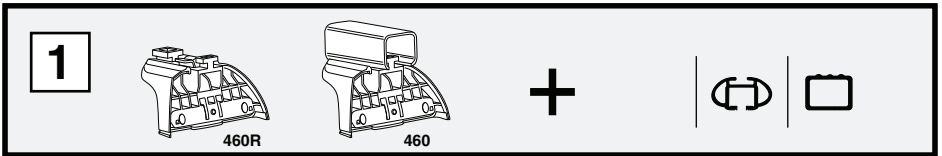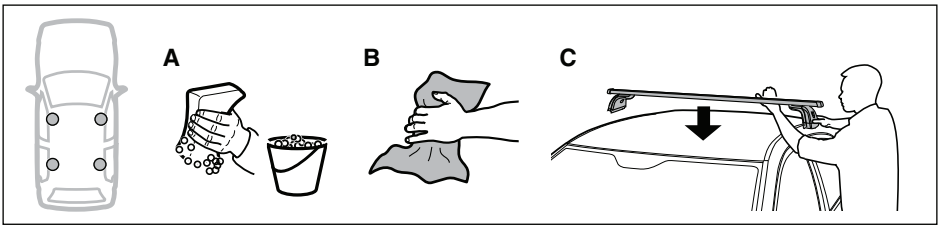


3


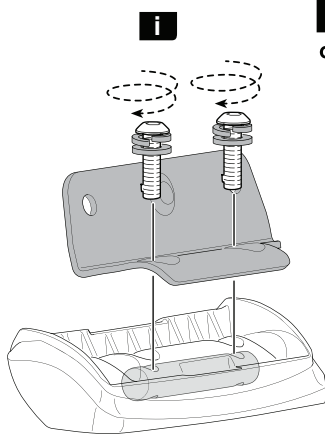



GB Only a few turns

4

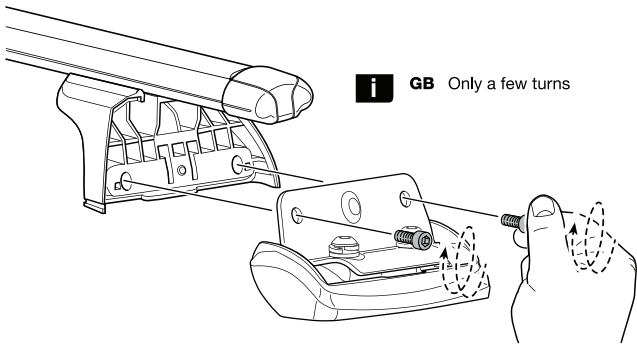

5

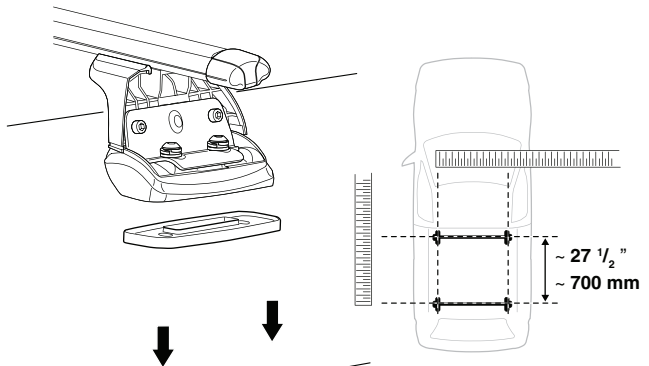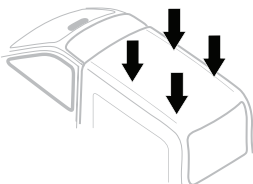











GB

NOTE:

Continuing with installation requires drilling. If you are unfamiliar with installation or have any doubt, seek a professional installer.




6

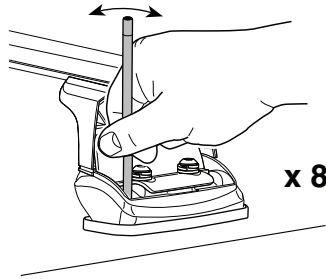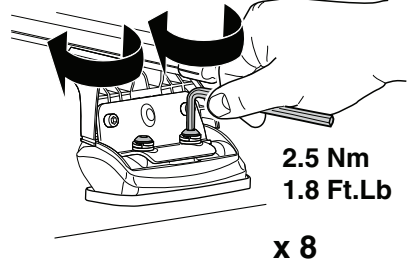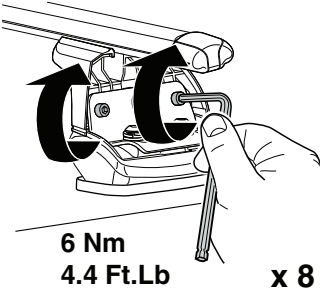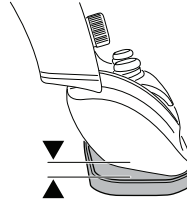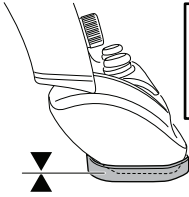

7




x1

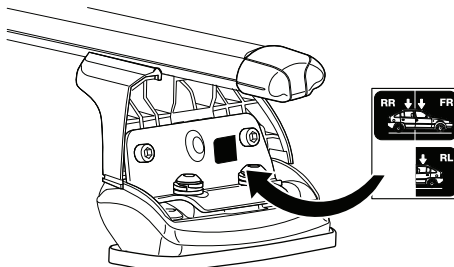

8





x1



x1



x1

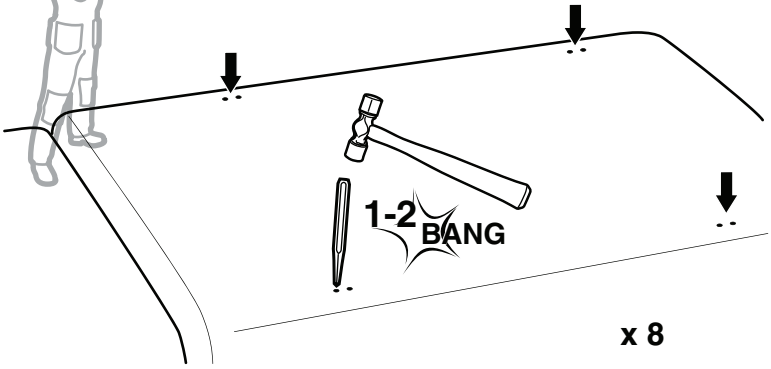



9




x1

Ø 1/8"

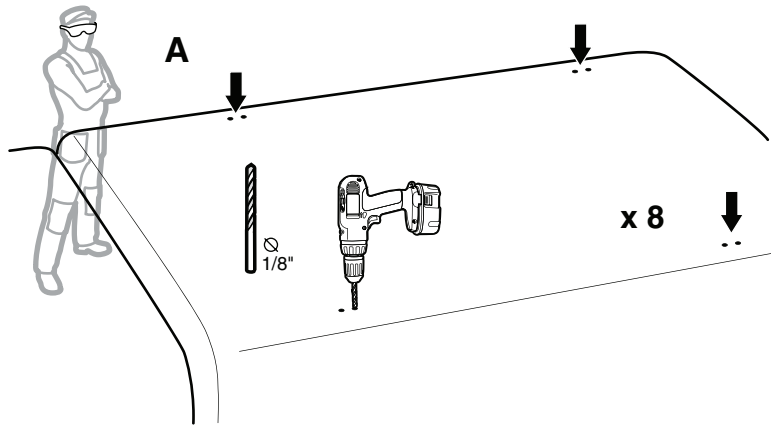

x1

Ø 9/32"

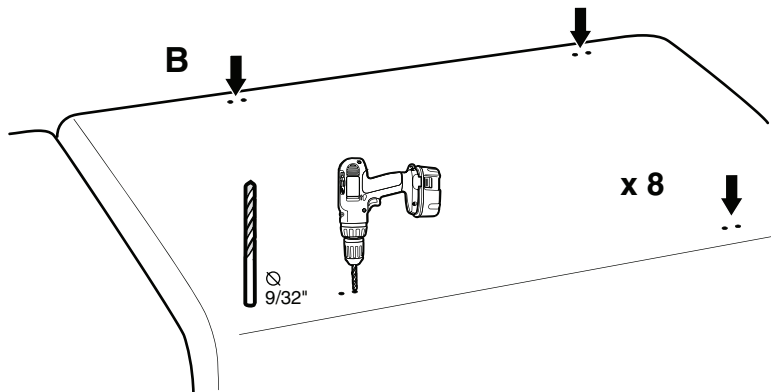

10




x1

A




B



11



x1




x1



x8





x8





x1

2.5 Nm
1.8 Ft.Lb

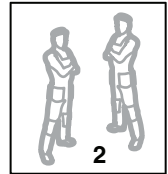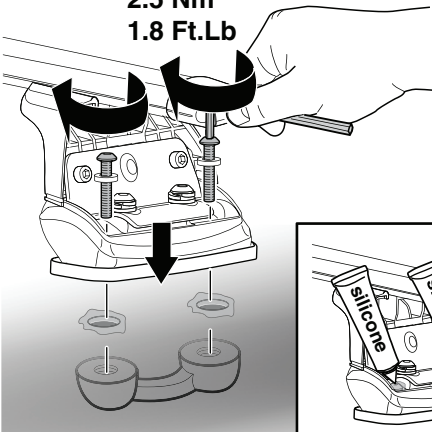

2

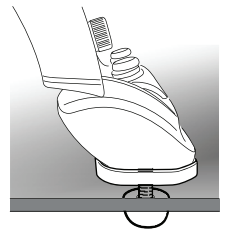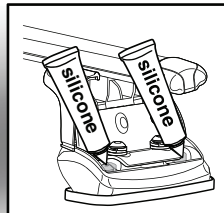

12



x4



x4

