




Thule XT Kit 3117

> Instructions




INFINITI Q30, 5-dr Hatchback, 16-

MERCEDES A-Class (W176), 5-dr Hatchback, 12-



MERCEDES CLA Shooting Brake (X117), 5-dr Estate, 15-

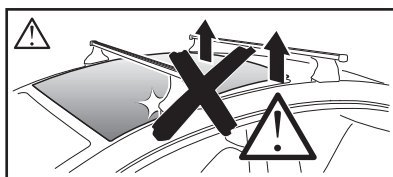


This kit is only for vehicles with fixpoint mounting.

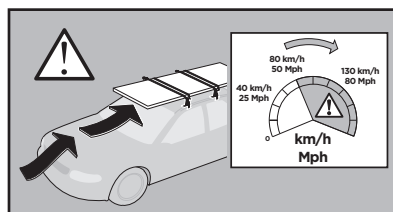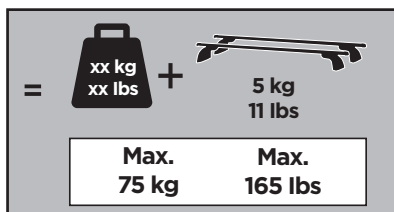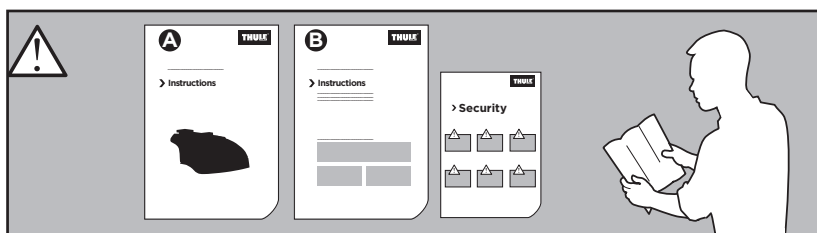


ISO 11154-E

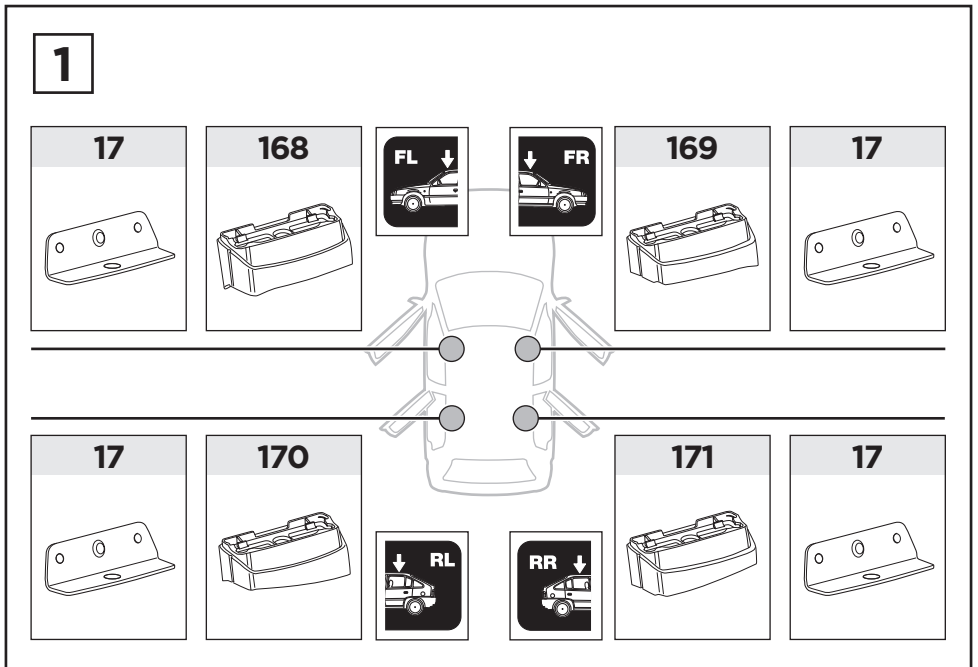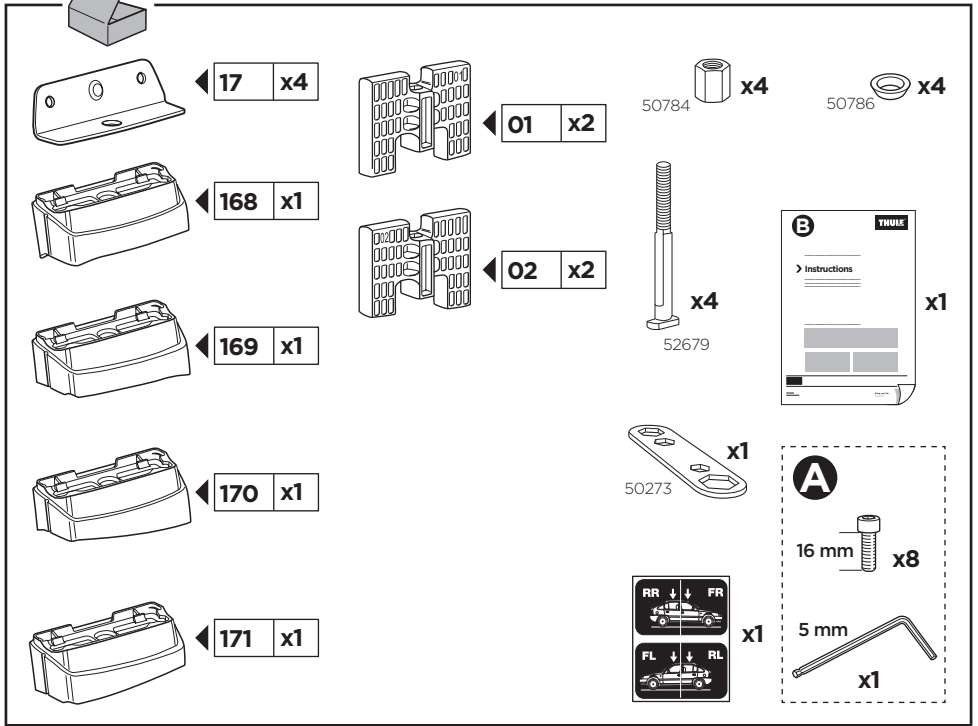



2 A

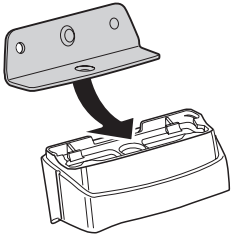

B **A** 16 mm x8



x1

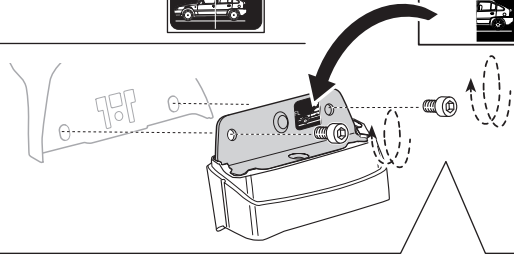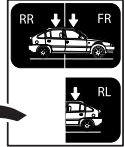

EN Only a few turns



3




O1 x2




O2 x2

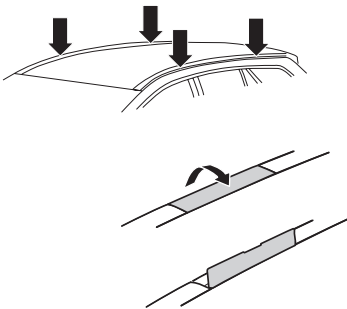


O1



O2



O2



O1

