






Thule XT Kit 3141

> Instructions

NISSAN Murano, 5-dr SUV, 15-

This kit is only for vehicles with fixpoint mounting.

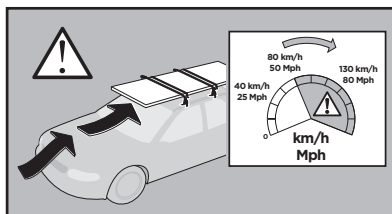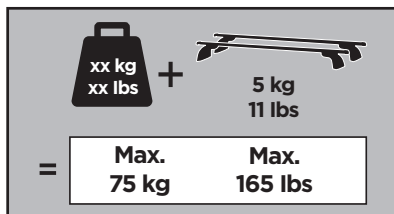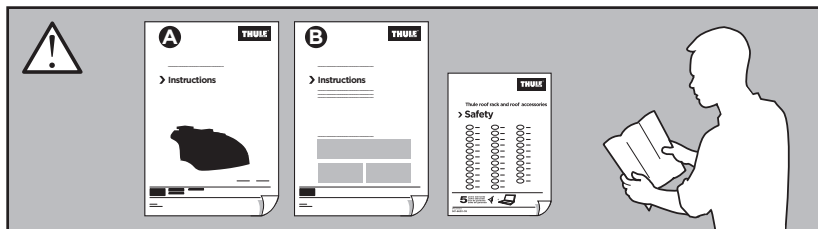


ISO 11154-E


183141

509-3141-01

Bring your life



◀ 10 x4




◀ 54 x4





50435 x8



52376 x1



x1

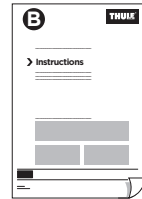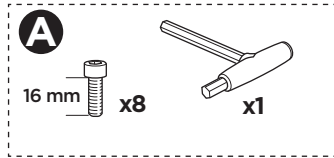

x1

1

