











Thule XT Kit 3151

> Instructions


FORD Explorer, 5-dr SUV, 16-

This kit is only for vehicles with fixpoint mounting.

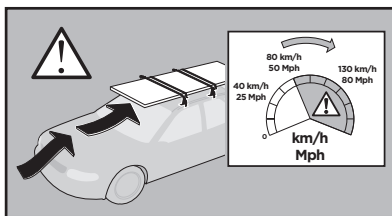
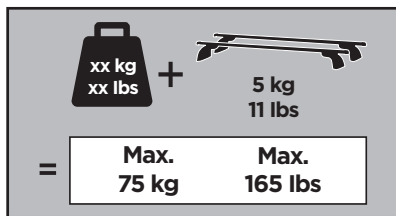
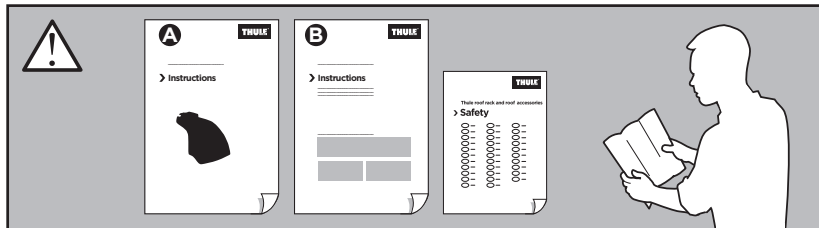


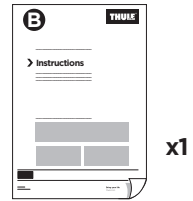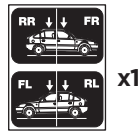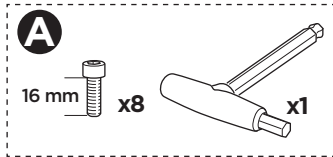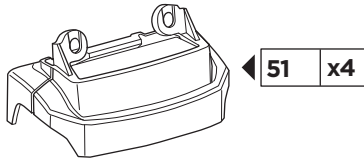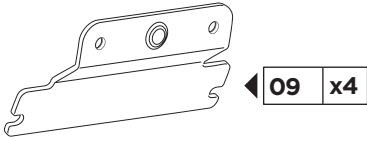


1

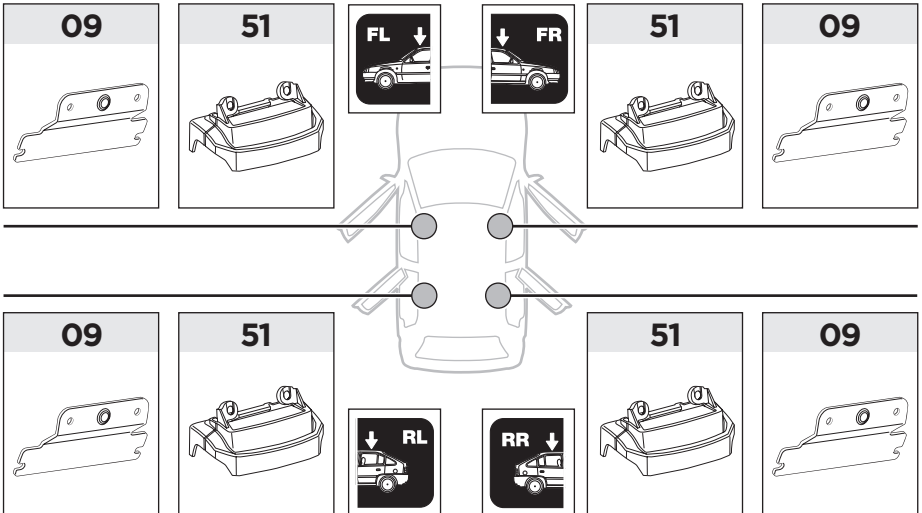


2

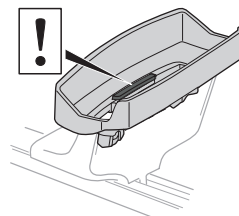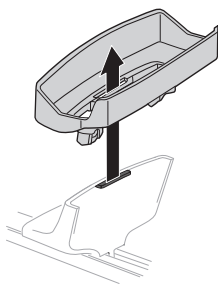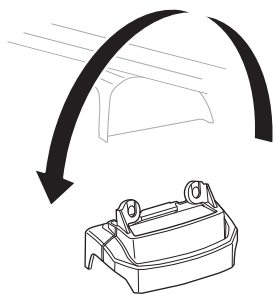

A

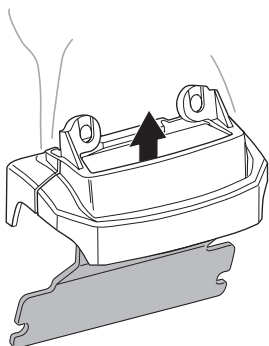


B

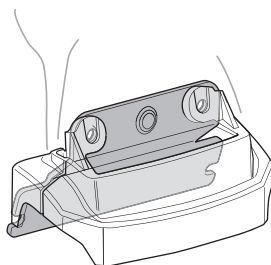

3

A

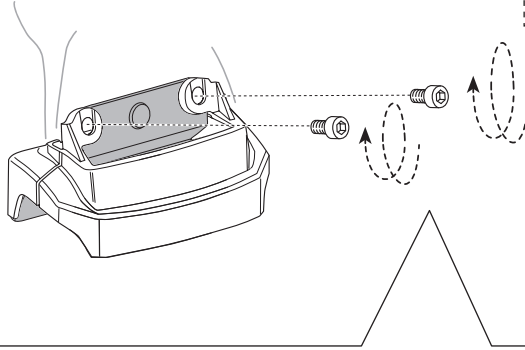


EN Only a few turns









4



x1

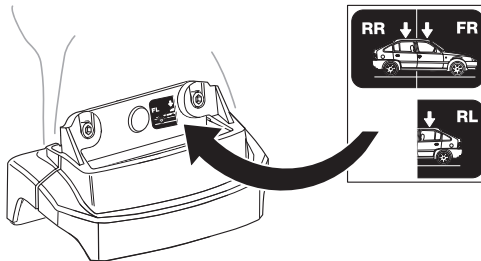


5

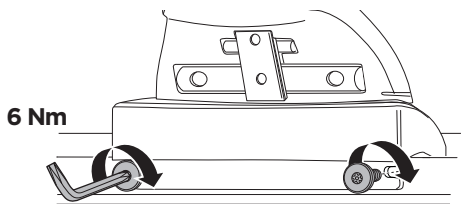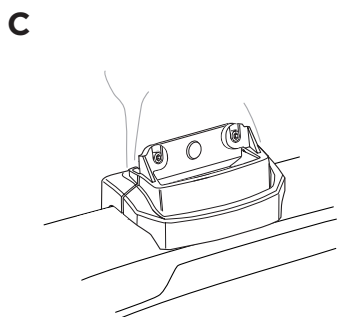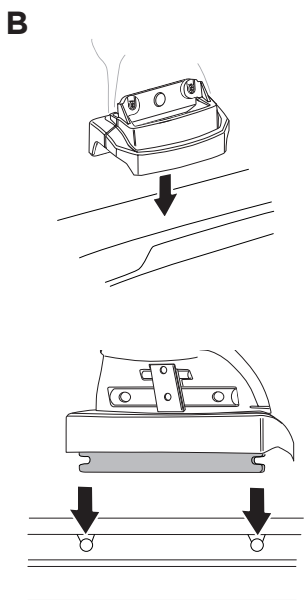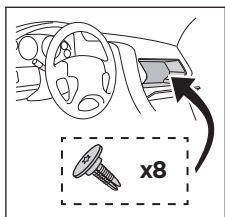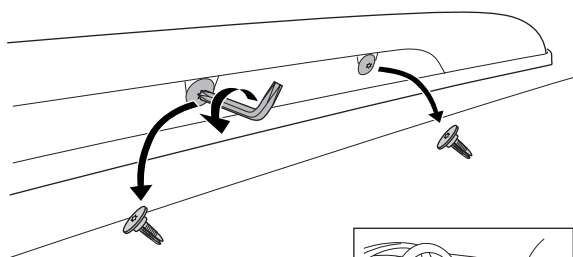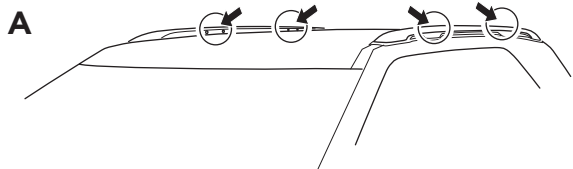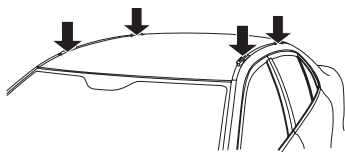

6

A



6 Nm

