






## Thule XT Kit 4041

# > Instructions






- CADILLAC Escalade**, 5-dr SUV, \*15-
- CADILLAC ESV Escalade**, 5-dr SUV, \*15-
- CHEVROLET Suburban**, 5-dr SUV, \*15-
- CHEVROLET Tahoe**, 5-dr SUV, \*15-
- GMC Yukon**, 5-dr SUV, \*15-
- GMC Yukon Denali**, 5-dr SUV, \*15-
- GMC Yukon XL**, 5-dr SUV, \*15-

\*North America


This kit is only for vehicles with fixpoint mounting.

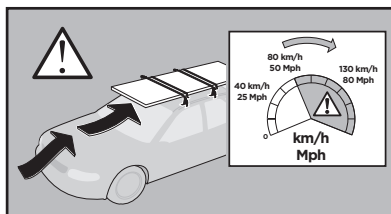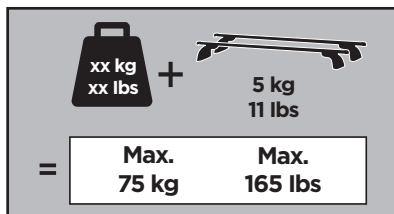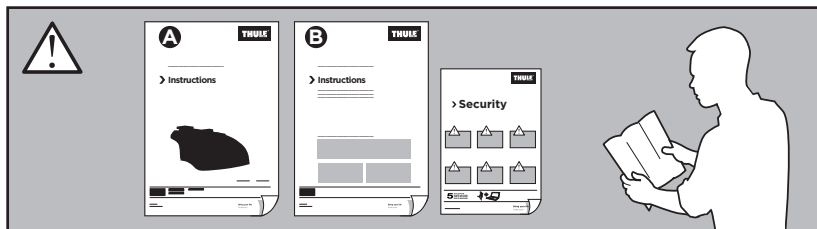




[Roof Racks & Cargo Carriers](#)

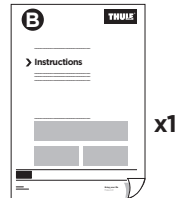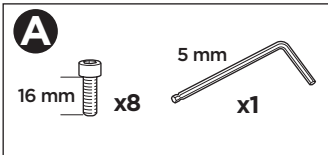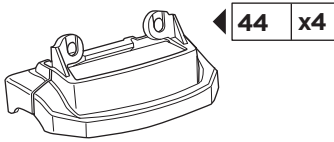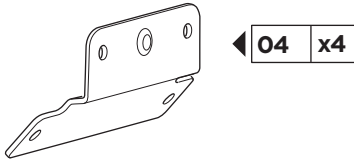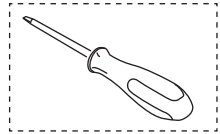


# 1

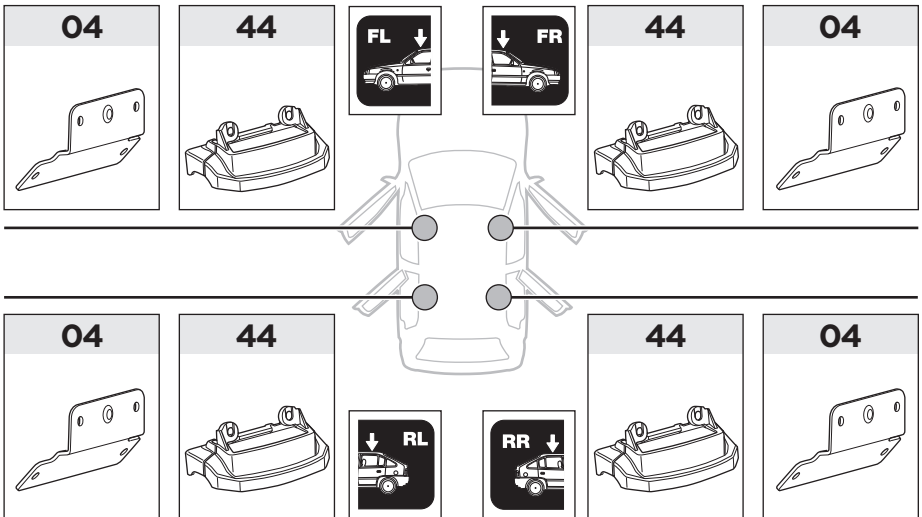


2

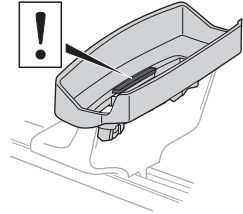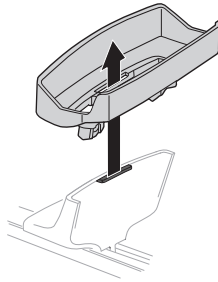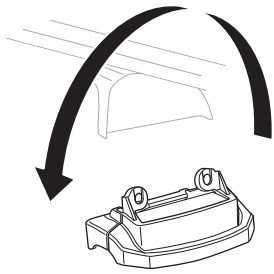

A

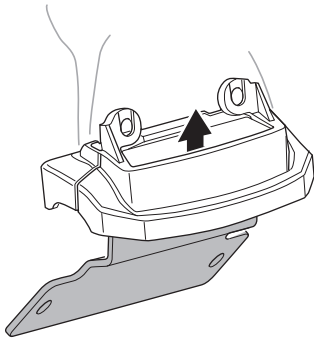


B

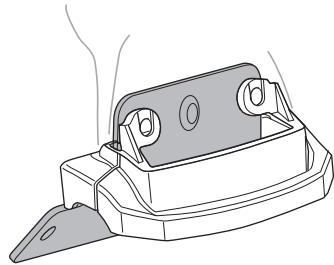


3

**A** 16 mm x8

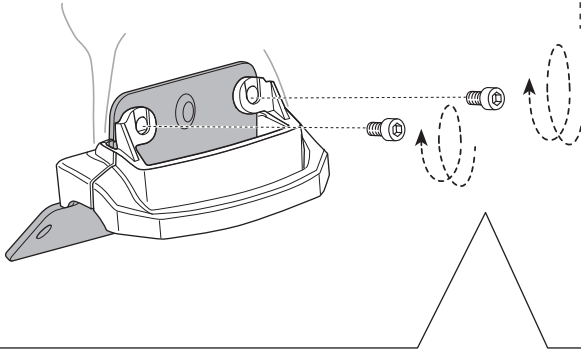


**EN** Only a few turns










4



x1

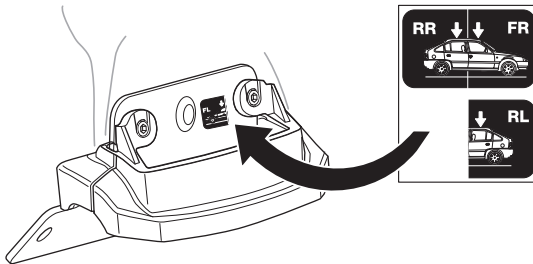

**5**

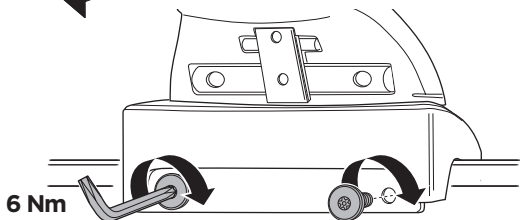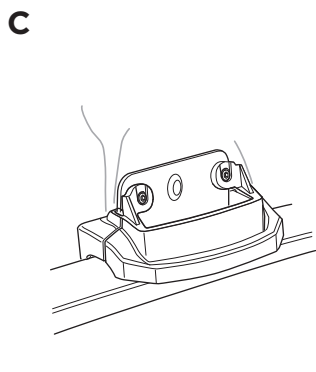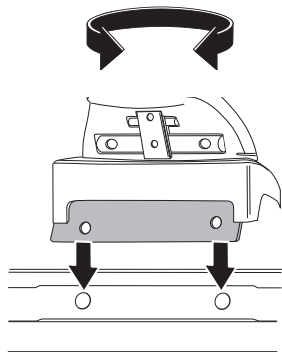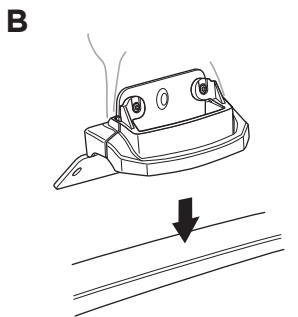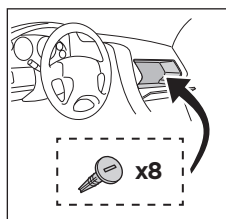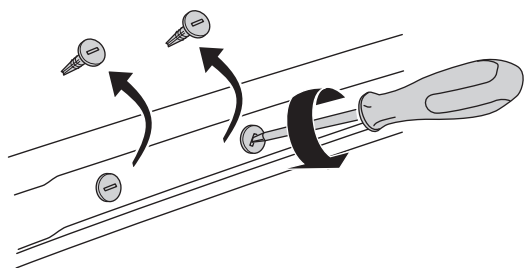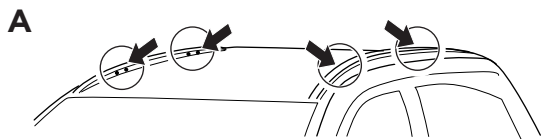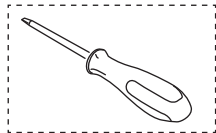

6

