






# Thule Rapid System Kit 4101 Thule Podium Kit 4101

# > Instructions

SUBARU XV e-Boxer, 5-dr SUV, 19-




This kit is only for vehicles with flush side railing.

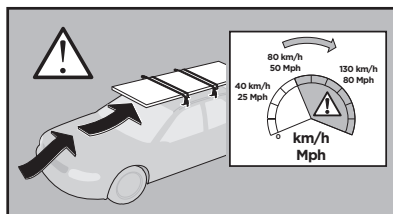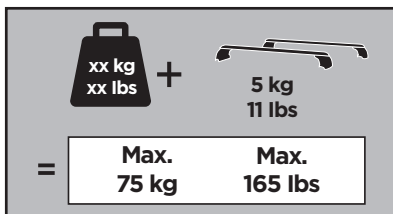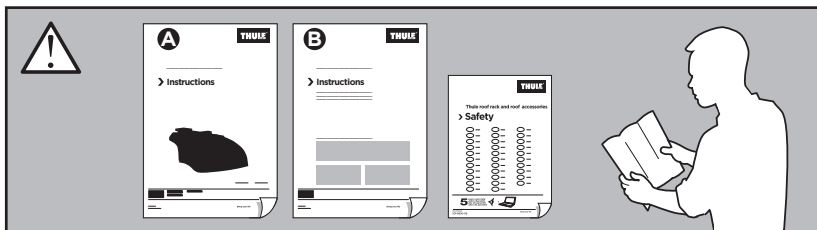


ISO 11154-E

184101




C.20181122  
509-4101-02

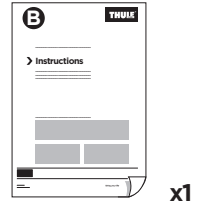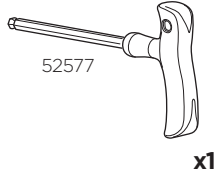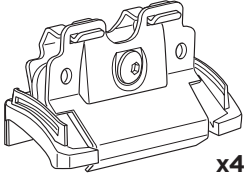


1

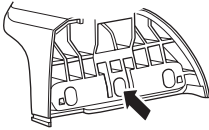

Thule Rapid System Foot Pack 753/7531  
Thule Podium Foot Pack 460/460R

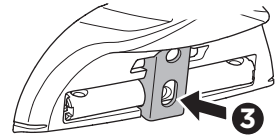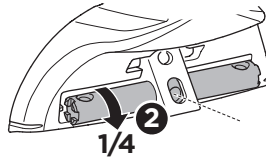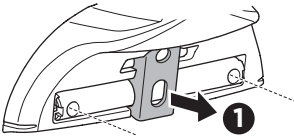


2



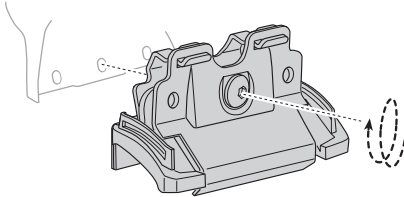


**EN** Only a few turns


3

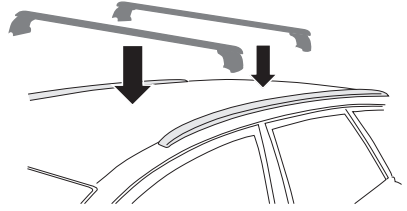

4

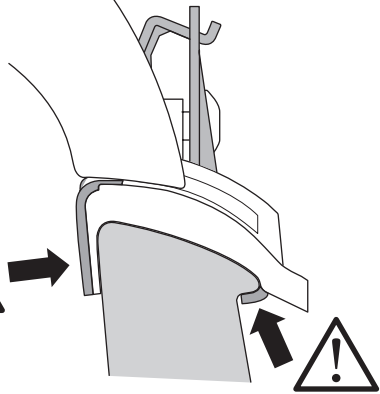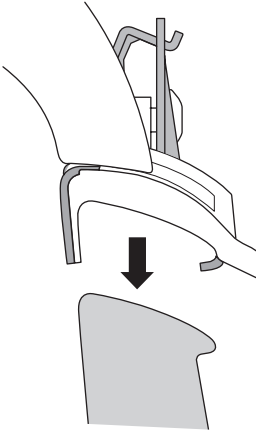

~ 700 mm



5

EN Tighten alternately

