



PARTS INCLUDED

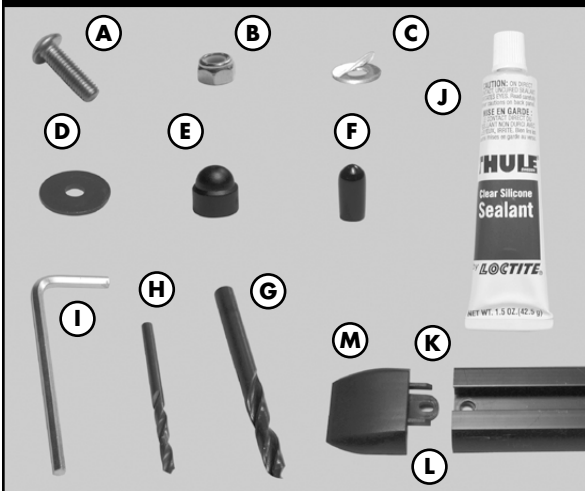

part	description	part number	qty.
A	screw M5 x 40mm/	924-0540-20	12
B	locking hex nut M5/	938-0500-11	12
C	self adhesive washer M5/	853-5367	24
D	steel washer M5/	951-0520-11	12
E	acorn cap/	853-5364	12
F	screw end protector/	853-5373	12
G	7/32" drill bit/	853-5369-02	1
H	1/8" drill bit/	853-5369-03	1
I	3mm hex key/	853-0947	1
J	silicone sealant/	853-5374	1
K	track/glisière	853-5359-03	2
L	vinyl roof protector/	853-5360-03-97	2
M	track end cap/	853-5361	4


TOOLS REQUIRED (NOT INCLUDED)

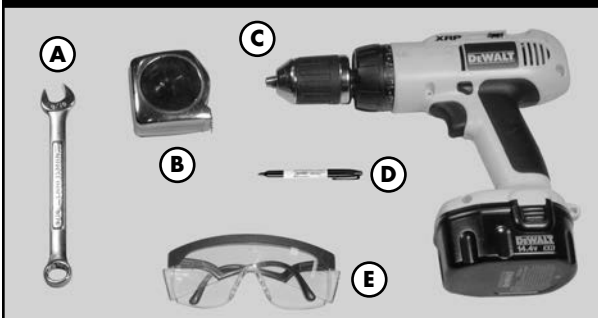

COMPATIBILITY AND RESTRICTIONS

- Installation of Top-Tracks™ requires drilling the roof and permanently installing parts.
- Only install track on fiberglass shells. Not for use on shells manufactured from any other material.
- Tools and some mechanical skills are required. If concerned about installation, have tracks installed by professional installer.
- Not for off road use.
- Do not install if roof has had bodywork.
- Do not install on vehicles with sunroofs.
- Do not install on vehicles with factory racks.

part/	description/
A	5/16" wrench/
B	tape measure/
C	electric drill/
D	fine tip marker/
E	safety glasses/

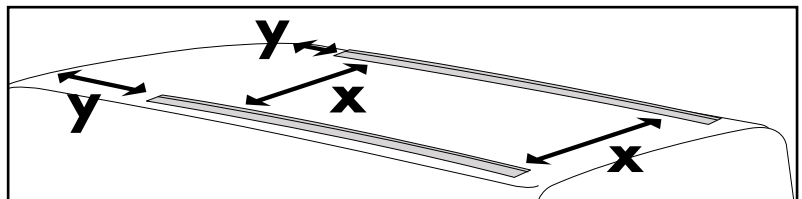

- Place the tracks on the shell, making sure they are parallel and equal distance from the front edge of the shell.


2

- Starting at either end of the track, mark the end hole using a fine tip marker, and continue to mark every other hole on the track.




3

- Remove the tracks from the roof.

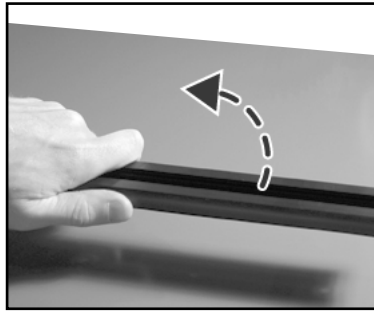


4

 Wear safety glasses during installation.

- Using the $\frac{1}{8}$ " drill bit supplied, drill a pilot hole in the center of each of the marks.




5

 Wear safety glasses during installation.

- Using the $\frac{7}{32}$ " drill bit supplied, drill a hole into each of the pilot holes.




- Carefully blow away debris.

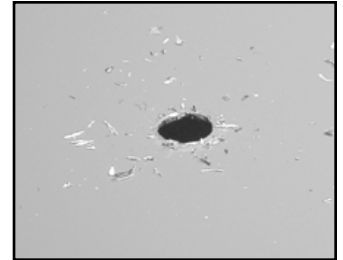

6

- Remove backing from the self adhesive washers and apply to the bottom of the track. Only place washers on holes that line up with the holes drilled in the roof.

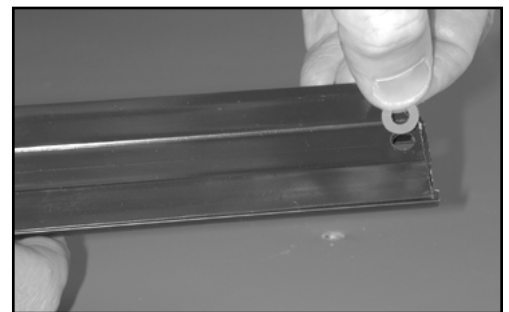

7

- Apply silicone into each hole.




8

- With end caps inserted into track, position track over the holes and install screws at front and rear.




9

- Put self adhesive washers on to remaining screws and install them in to the remaining holes.

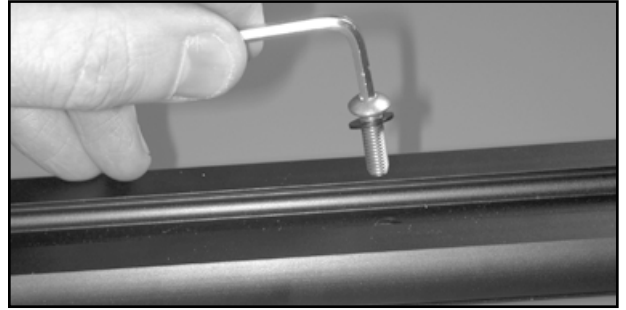


10

- Inside the shell, place the steel washer and locking hex nut onto the screw.

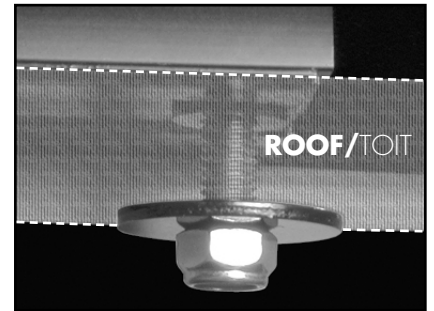

11


- Tighten all screws using a $\frac{5}{16}$ " wrench and the supplied 3mm hex key.
- Two people are required for proper installation.

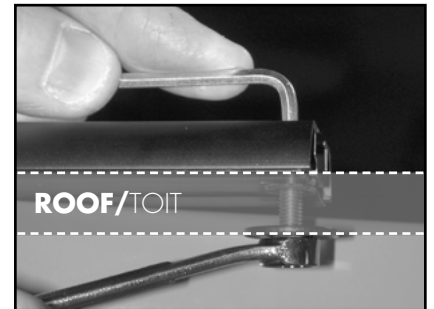


12

To finish the installation there are two options.

- Attach a screw end protector onto each screw.

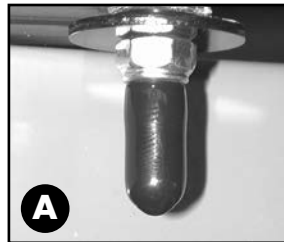

- Cut off the bolt excess length and place an acorn cap onto the nut.

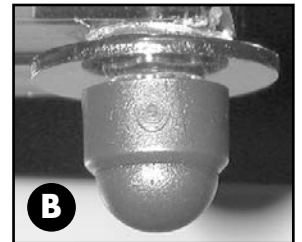

Note: For mounting TK1 bases (not included), use all hardware (thick washer, thin washer, spacer) included with TK1.