


**PARTS INCLUDED**

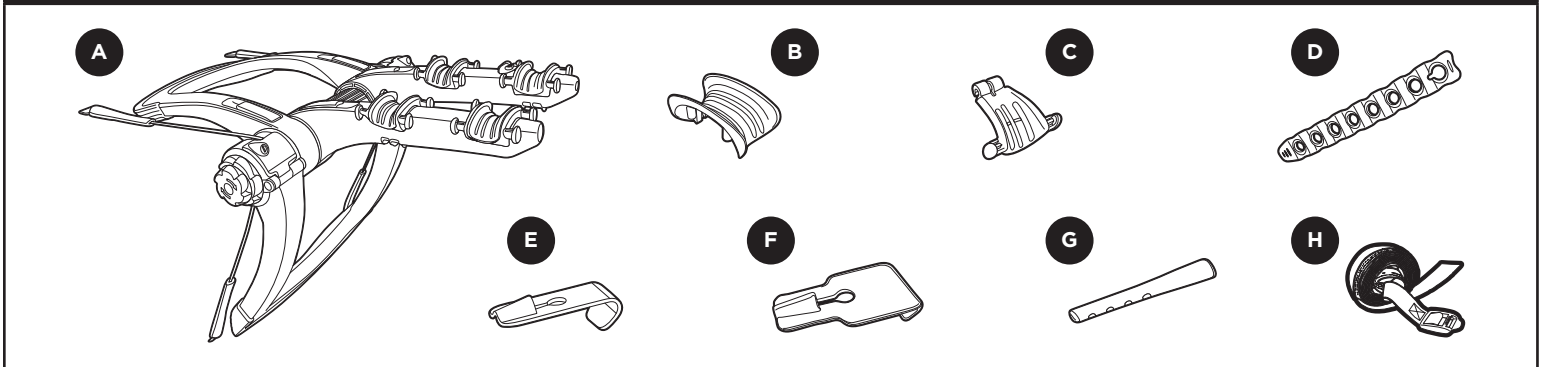


part	description	part number	9001PRO qty.	9002PRO qty.
A	9001PRO/9002PRO 2 OR 3 bike carrier	—	1	1
B	bike cradle pad	8523534001	4	6
C	anti-sway cage with overmold	8523486001	2	3
D	ripple strap /	8523006001	6	9
E	bottom hook /	8537748	2	2
F	top hook /	8529665001	2	2
G	cable cover /	8537749	4	4
H	tie down strap /	7531492	1	1

**WARNINGS / LIMITATIONS**

- Number of bicycles carried should not exceed designated carrying capacity for your specific Raceway model.
- 9001PRO (2 bike) max. carrying capacity = 70lbs.
- 9002PRO (3 bike) max. carrying capacity = 105lbs.
- Check tightness of all bolts and knobs periodically.
- Check straps for wear and replace if worn.
- Not intended for off-road use.
- Not intended for tandems or recumbents.
- Do not install on a trailer or other towed vehicle.
- Failure to use blue safety strap may result in loss of bicycles.
- Do not open your trunk/rear hatch with the rack installed, it may cause damage to your vehicle.

1


## CLEANING THE VEHICLE

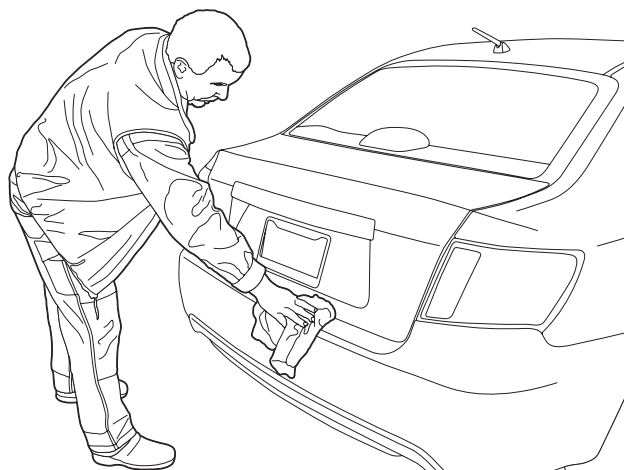

- Clean trunk/hatch and rear of car.

2


## FIT INFORMATION

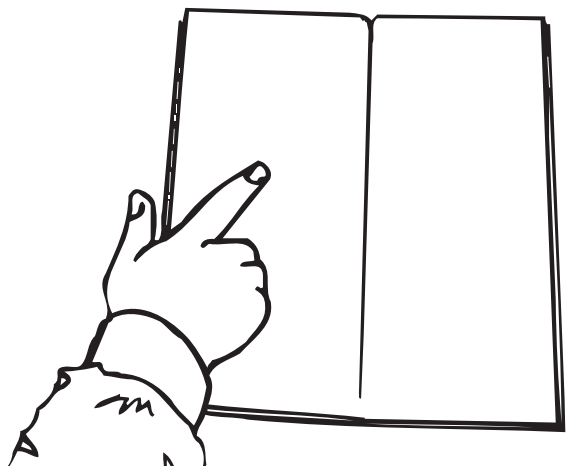

- Look up your vehicle in the Fit Guide (included with these instructions) for recommended fit number. **BE SURE TO READ THE FIT TIPS THAT APPLY TO YOUR VEHICLE.**

3


## PREPARING THE RACEWAY FOR INSTALLATION

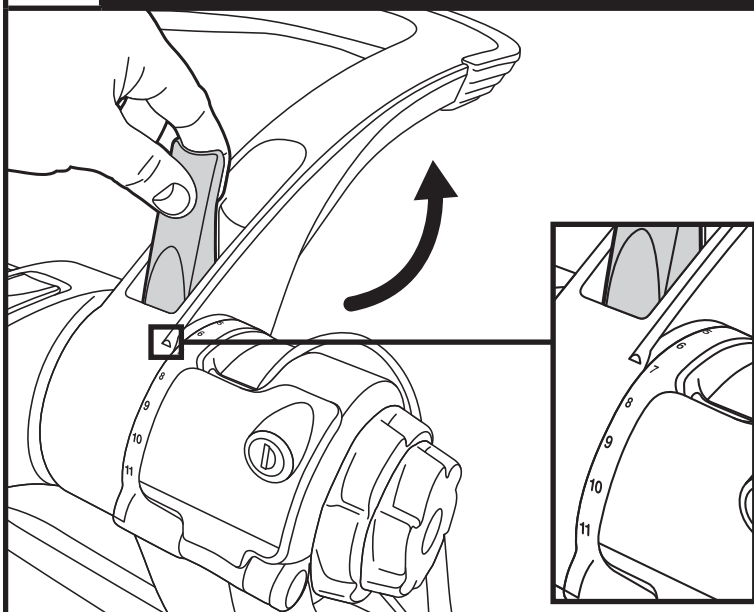


- Flip open both upper frame release levers.
- Adjust upper frame position to correct fit number.
- Close both upper frame release levers.

# 4

## RAISING AND LOWERING RACEWAY ARMS

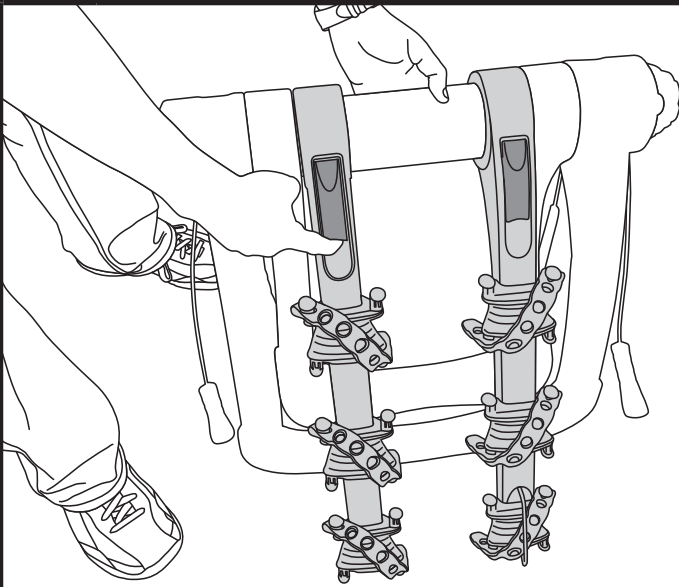

A

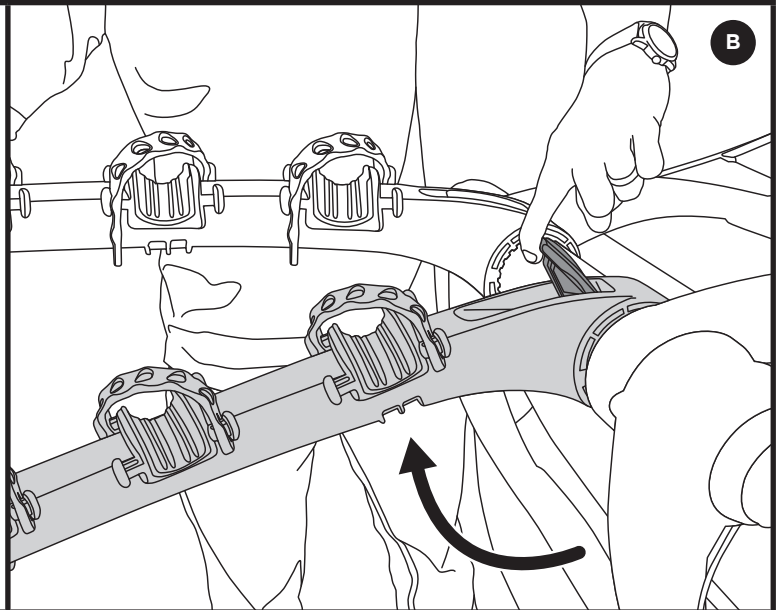

B


- Open or lift up on bike arm release lever to rotate bike arms up.

- Slightly rotate arms down to fully disengage from hub and then rotate up so that arms are perpendicular to the lower frame.

- Close bike arm release lever.

# 5

## MOUNT RACEWAY ON VEHICLE

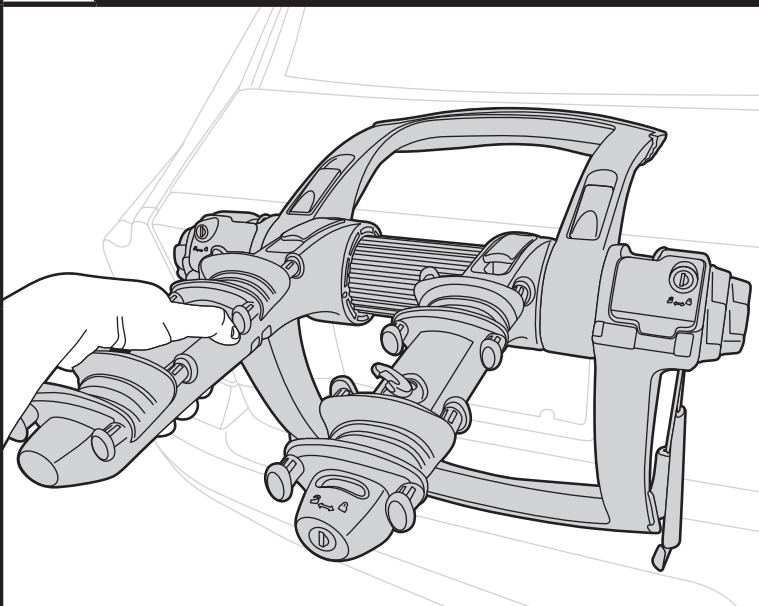

- Mount carrier to the back of vehicle. Refer to Fit Tips for specific placement instructions.

**NOTE:** Do not open your trunk/rear hatch with the rack installed, it may cause damage to your vehicle.


## INSTRUCTION TIPS

- Move down the top rubber boots to cover the edge of deep hatches and spoilers. Thus, eliminating cable rub.


**FOR TIGHTLY-TOLERANCED HATCHES:** Remove the hook from the cable and install it on the vehicle before installing the whole rack as shown in STEP 8.

# 6


## SECURING RACEWAY ON VEHICLE: TOP CABLES

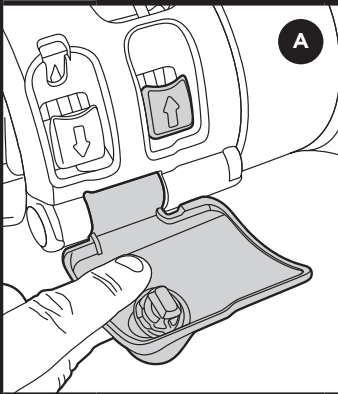**A**

- Open lock cover and pull up top cable release lever.

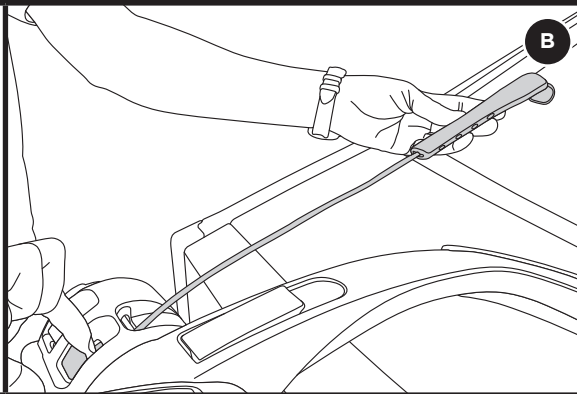**B**



- Pull enough cable out to fit top hook.

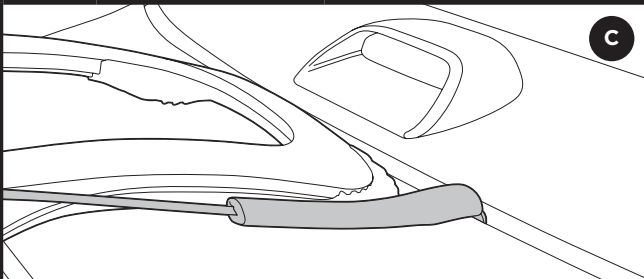**C**

- Attach top hooks according to Fit Tips for your car.

**NOTE:** Make certain cable cover is in place to protect vehicle finish.


- You may need to route straps in from the sides to get straps into their recommended place on the vehicle.

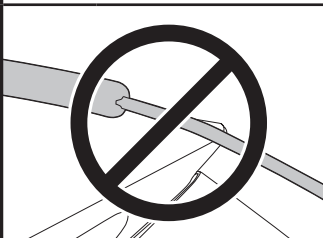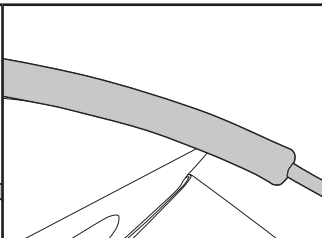**INCORRECT****CORRECT**

**NOTE:** If cable is contacting vehicle - cable cover can be repositioned on cable to provide protection.

# 6

## SECURING RACEWAY ON VEHICLE: TOP CABLES (CONTINUED)

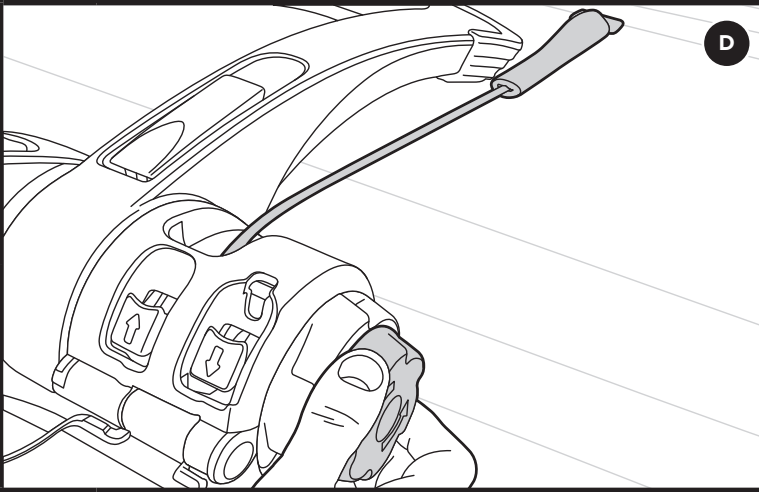

D

- Tighten top cables by rotating small knob.
- Repeat for other top hook.

**NOTE:** Tighten strap only enough to hold rack in place without changing its position.


# 7

## SECURING RACEWAY ON VEHICLE: BOTTOM CABLES



A


- Pull up bottom cable release lever.
- Pull enough cable out to fit bottom hook.

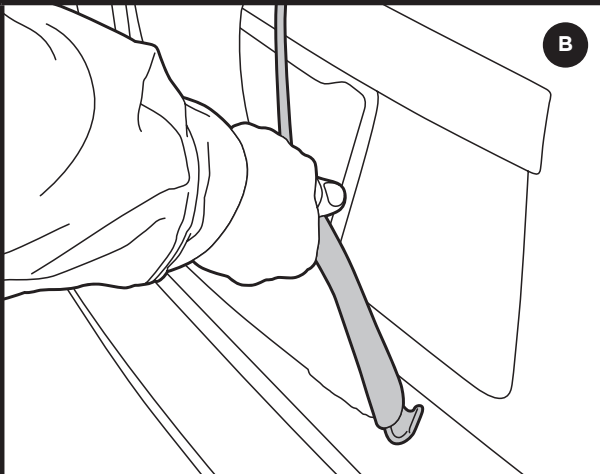

B

- Attach bottom hooks according to Fit Tips for your car. Always make sure that cables and cable covers are out of the way of hot exhaust gasses and not in contact with the muffler or exhaust pipe.

**NOTE:** Make certain cable cover is in place.



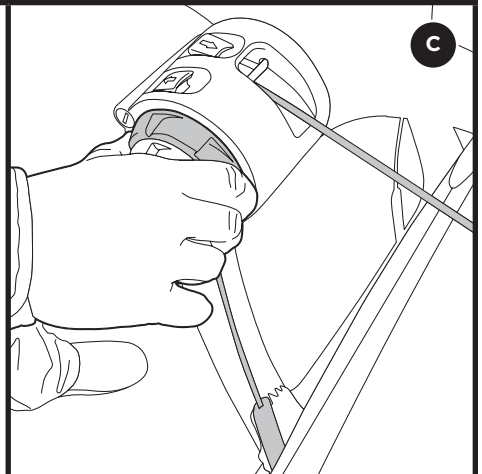


C

- Tighten bottom cables by rotating large knob.
- Repeat for other bottom hook.
- Be sure lower frame is in correct position.
- Refer to Fit Tips.

# 8





## TIGHT HATCH ALTERNATE MOUNTING METHOD

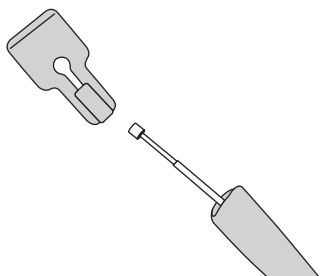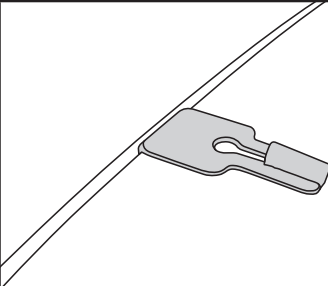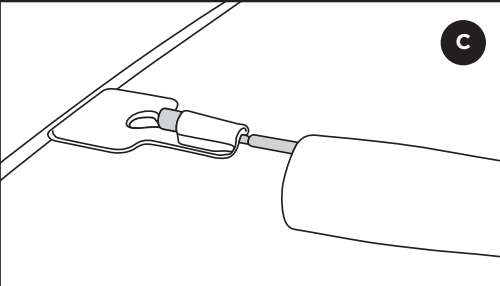 <p style="text-align: right;"><b>A</b></p>	 <p style="text-align: right;"><b>B</b></p>	 <p style="text-align: right;"><b>C</b></p>
<p><b>NOTE:</b> Start with top hooks and repeat process, if need be for bottom hooks.</p>	<ul style="list-style-type: none"> <li>• Install hook onto vehicle hatch/trunk.</li> </ul>	<ul style="list-style-type: none"> <li>• Reinstall the hook onto the cable.</li> <li>• Slide hook into notch on cable end.</li> <li>• Slide boot over hook, unless it is needed to cover the cable bending over the hatch/trunk.</li> </ul>
<ul style="list-style-type: none"> <li>• Remove the hook from the cable.</li> <li>• Pull back grey rubber boot.</li> <li>• Slide hook off of cable end.</li> </ul>		

# 9


## INSTALLING THE NO-SWAY CAGE

## INSTALLING THE STRAPS

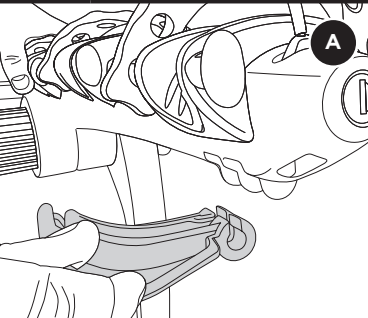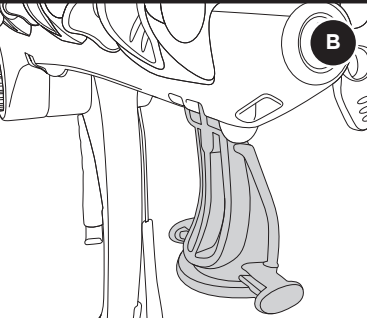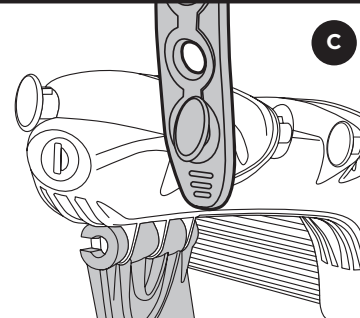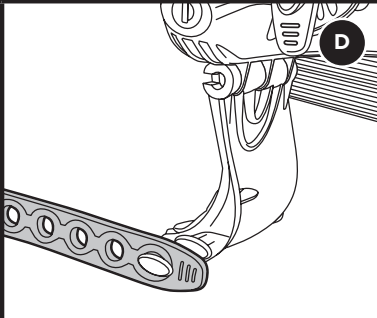
 <p style="text-align: right;"><b>A</b></p>	 <p style="text-align: right;"><b>B</b></p>	 <p style="text-align: right;"><b>C</b></p>	 <p style="text-align: right;"><b>D</b></p>
<ul style="list-style-type: none"> <li>• Attach No-Sway Cages to bike arm (smooth concave section towards outside).</li> </ul>	<ul style="list-style-type: none"> <li>• Rotate No-Sway Cages outward.</li> </ul>	<ul style="list-style-type: none"> <li>• Attach bike straps to bike arm cradles.</li> </ul>	<ul style="list-style-type: none"> <li>• Attach bike straps to No-Sway Cages.</li> </ul>

10

ADJUST BIKE ARMS

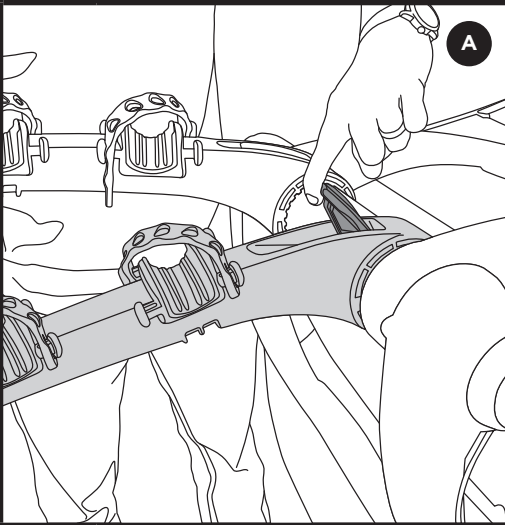

A

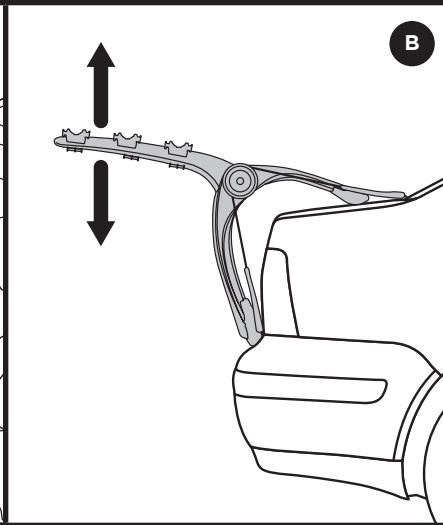


B

- If necessary adjust bike arm so that they are pointing slightly upward.
- If necessary slide arms closer together to make it easier to fit smaller frame bicycles.

11


MOUNTING BIKES

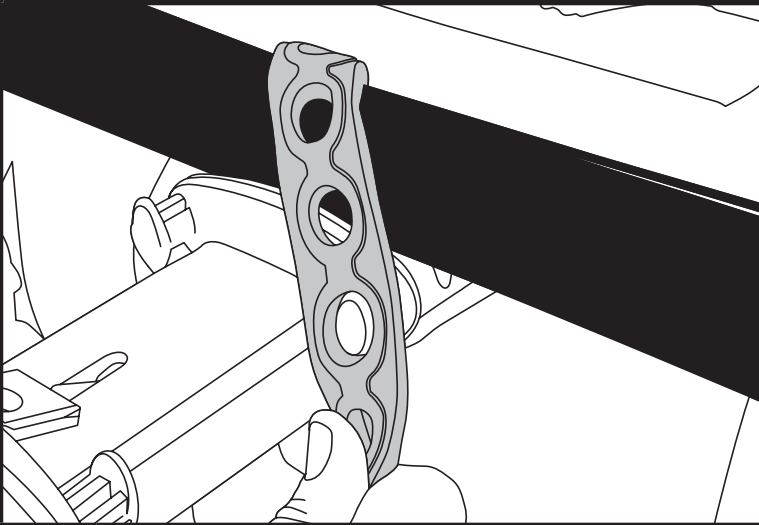

- Load the heaviest bike first with the handlebars on the passenger side of vehicle.
- Alternate direction of bikes when loading.
- Ensure straps are tightened securely around bike.


12

NO-SWAY CAGE ADJUSTMENT

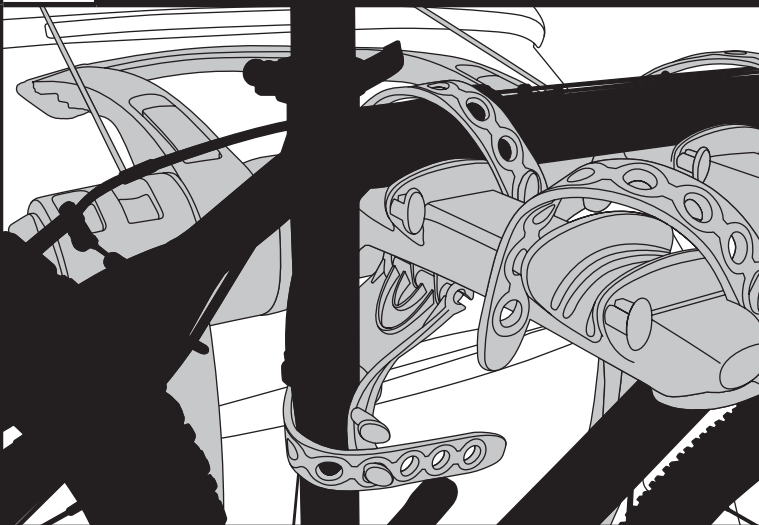


- Attach No-Sway Cage strap around the vertical bicycle tube and tighten securely.

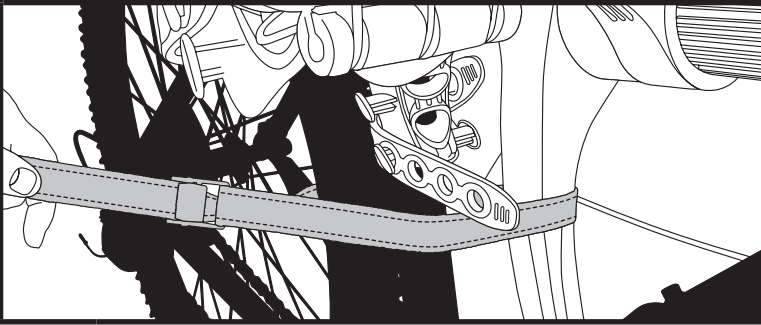

**13****BLUE STRAP USAGE**


- For added security, wrap blue strap through bikes and secure to lower frame of Raceway.

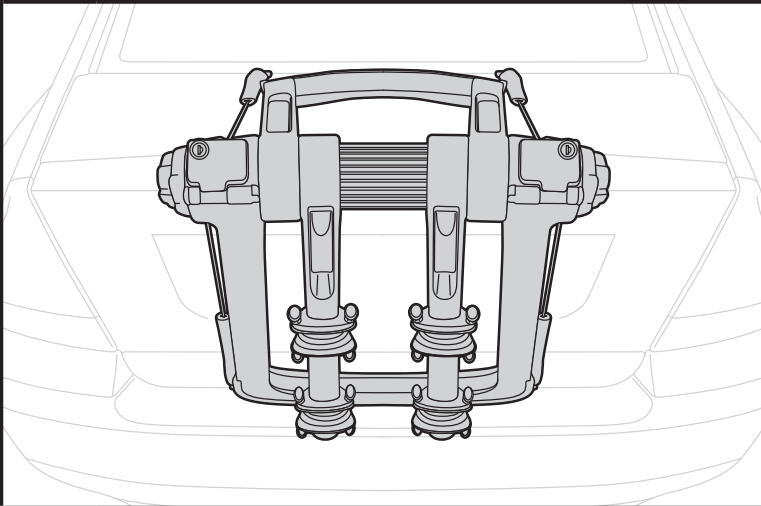**14****ROTATING BIKE ARMS DOWN**


- Flip open bike arm release lever.
- Rotate bike arms down.
- Make certain to leave adequate space from vehicle.

*Controle que quede a una distancia adecuada del vehículo.*

- Close bike arm release lever.

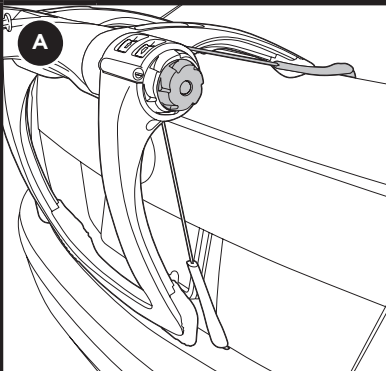
**15****REMOVING RACK FROM VEHICLE****TOP CABLE REMOVAL**

- Pull up top cable release lever.
- Pull a short length of cable out.
- Remove top hook. Shorten with small knobs.

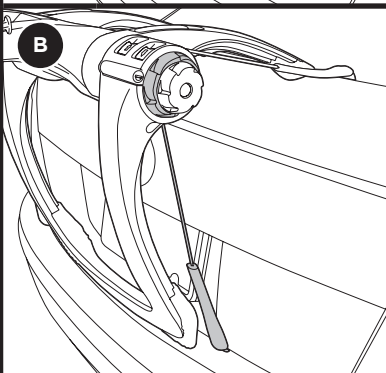
**BOTTOM CABLE REMOVAL**

- Pull up bottom cable release lever.
- Pull a short length of cable out.
- Remove bottom hook. Shorten with large knob.

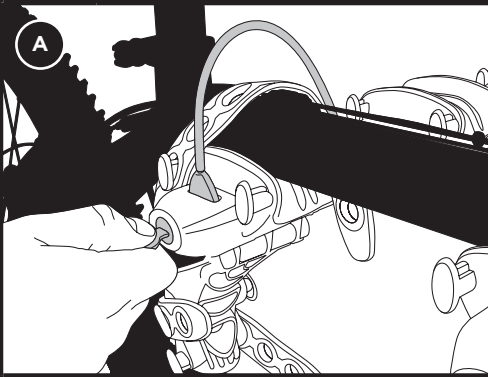

**LOCKING  
BIKES**

- Pass locking cable over bike frame and secure in lock slot by turning key clockwise to horizontal position.

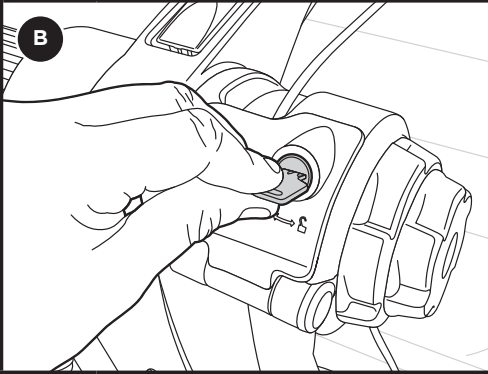**LOCK CARRIER**

- Close cover and lock carrier to vehicle by turning key clockwise to horizontal position.
- Lock both spool cylinders on opposite sides of hub.

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001/XT / PRO RACEWAY 2	9002/XT / PRO RACEWAY 3	9003/XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING

## ACURA

CL 2DR	'01-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
CL 2DR	'96-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,104,125,128
CSX 4DR (Canada)	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
EL 4DR	'01-06	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
EL 4DR	'96-00	✓			6	✓		6	✓		6	✓		6	101,102
ILX 4DR	'13-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Integra 3DR	'94-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,125,128
Integra 4DR	'94-01	✓			5	✓		5	✓		5	✓		5	101,102,110,140
Legend 2DR	'91-95	✓			5	✓		5	✓		5	✓		5	101,102,140
Legend 2DR	'87-90	✓			5	✓		5	✓		5	✓		5	101,102,140
Legend 4DR	'91-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102
Legend 4DR	'86-90	✓			5	✓		5	✓		5	✓		5	101,103,125,140
MDX	'14	✓			10	✓		10	✓		10	✓		10	101,102,121,128
MDX	'01-06	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,127,128
RL 4DR	'05-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
RL 4DR	'96-04	✓			6	✓		6	✓		6	✓		6	101,110
RSX 3DR	'02-06	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
TL 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TL 4DR	'09-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TL 4DR	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TL 4DR	'99-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TL 4DR	'95-98	✓			5	✓		5	✓		5	✓		5	101,102
TSX 4DR	'09-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TSX 4DR	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Vigor 4DR	'91-95	✓			5	✓		5	✓		5	✓		5	101,102
ZDX	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
ZDX	'95-98	✓			5	✓		5	✓		5	✓		5	101,102
TSX	'09-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TSX	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TSX Sport Wagon	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Vigor	'91-95	✓			5	✓		5	✓		5	✓		5	101,102
ZDX	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138

## AUDI

80 & 90 Series	'93-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
80 & 90 Series	'88-92	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,104
100 & 200 Series	'92-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
100 & 200 Series	'89-91	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,131
A3 Sportback 5DR	'06-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
A4 4DR	'09-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
A4 4DR	'02-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
A4 4DR	'95-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
A4 Allroad	'13-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A4 Allroad	'01-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A4 (Avant) Wagon	'09-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A4 (Avant) Wagon	'02-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A4 (Avant) Wagon	'97-01	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A5 2DR	'08-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
A6 4DR	'12-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## AUDI continued

A6 4DR	'05-11	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
A6 4DR	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
A6 Wagon	'06-11	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A6 Wagon	'99-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A6 Wagon	'95-96	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102
A8	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
A8	'04-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
RS4 4DR	'09-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
RS4 4DR	'04-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
S4 4DR	'09-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
S4 4DR	'02-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
S4 4DR	'95-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
S4 Wagon	'01-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
S5 2DR	'08-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
S6 4DR	'12-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
S6 4DR	'05-11	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
S6 4DR	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
S6 Wagon	'02-03	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
S8 4DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
S8 4DR	'04-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128

## BMW

1 Series 2DR	'08-13					✓		7	✓		7	✓		7	101,102,128
1 Series 2DR Convertible	'08-13					✓		7	✓		7	✓		7	101,102,128,156
3 Series 2DR	'06-13	✓			7	✓		7	✓		7	✓		7	101,102,128
3 Series 2DR	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
3 Series 2DR	'92-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
3 Series 2DR	'76-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,109
3 Series 2DR Convertible	'06-13					✓		7	✓		7	✓		7	101,102,128,156
3 Series 2DR Convertible	'76-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,109
3 Series 4DR	'12-14	✓			7	✓		7	✓		7	✓		7	101,102,128,
3 Series 4DR	'06-11	✓			7	✓		7	✓		7	✓		7	101,102,128,
3 Series 4DR	'99-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
3 Series 4DR	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
3 Series 4DR	'76-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,109
3 Series Wagon	'11-14	✓			9	✓		9	✓		9	✓		9	101,102,121,128
3 Series Wagon	'00-10	✓			9	✓		9	✓		9	✓		9	101,102,121,128
4 Series 2DR	'14	✓			7	✓		7	✓		7	✓		7	101,102,128
5 Series 4DR	'11-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
5 Series 4DR	'04-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
5 Series 4DR	'97-03	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
5 Series 4DR	'89-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
5 Series Wagon	'11-14	✓			8	✓		8	✓		8	✓		8	101,102,121,128
5 Series Wagon	'04-10	✓			8	✓		8	✓		8	✓		8	101,102,121,128
5 Series Wagon	'99-03	✓			8	✓		8	✓		8	✓		8	101,102,121,128
6 Series 2DR	'04-10	✓	✓	✓	6	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
6 Series 2DR Convertible	'11-14					✓		7	✓		7	✓		7	101,102,128,156
6 Series 2DR Convertible	'04-10	✓	✓	✓	6	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
7 Series 4DR	'02-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
X5	'14					✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138



# THULE 2014 REAR MOUNTED FIT GUIDE

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## BMW continued

X5	'07-13				8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
X6	'09-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138

## BUICK

Allure (Canada)	'10	✓			6	✓		6	✓		6	✓		6	101,102,116,128
Allure (Canada)	'05-09	✓			6	✓		6	✓		6	✓		6	101,102,116,128
Century 4DR	'97-05	✓			6	✓		6	✓		6	✓		6	101,105,125,138
Century Wagon	'82-96	✓			8	✓		8	✓		8	✓		8	101,105,125,138
Enclave	'08-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Encore	'13-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
LaCrosse	'10-14	✓			6	✓		6	✓		6	✓		6	101,102,116,128
LaCrosse	'05-09	✓			6	✓		6	✓		6	✓		6	101,102,116,128
LeSabre 4DR	'00-05	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,138,142
LeSabre 4DR	'92-99	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,128
Lucerne	'06-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Park Avenue 4DR	'97-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,138,142
Park Avenue 4DR	'91-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,138
Regal 2DR	'88-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,138
Regal 4DR	'10-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,113,128
Regal 4DR	'91-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,138
Rendezvous	'02-07	✓			10	✓		10	✓		10	✓		10	101,112,121,125,138
Skylark 2DR	'88-91	✓			6	✓		6	✓		6	✓		6	101,105
Skylark 4DR	'92-97	✓			5	✓		5	✓		5	✓		5	101,105,117,118
Skylark 4DR	'86-91	✓			6	✓		6	✓		6	✓		6	101,105
Terraza	'05-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Verano 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128

## CADILLAC

ATS 4DR	'13-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Catera 4DR	'97-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,125,128
CTS 4DR	'10-13	✓			8	✓		7	✓		7	✓		7	101,102,141
CTS 4DR	'03-09	✓	✓	✓	8	✓	✓	7	✓	✓	7	✓	✓	7	101,102,141
DeVille 4DR	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
DeVille 4DR	'94-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
DTS 4DR	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Eldorado 2DR	'92-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
ELR 4DR	'14	✓	✓		8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Escalade	'01-06	✓			10	✓		10	✓		10	✓		10	101,106,121,138
Escalade	'99-00	✓			10	✓		10	✓		10	✓		10	101,106,121,138
Fleetwood 4DR	'93-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,111,138
SRX	'10-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,129
SRX	'04-09	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,129

## CHEVROLET

Aveo 4DR	'07-11	✓			7	✓		7	✓		7	✓		7	101,102,128
Aveo 4DR	'04-06	✓			8	✓		8	✓		8	✓		8	101,128,147
Aveo 5DR	'07-11	✓			9	✓		9	✓		9	✓		9	101,128,147
Aveo 5DR	'04-06	✓			10	✓		10	✓		10	✓		10	101,128,147
Beretta 2DR	'87-96	✓			6	✓		6	✓		6	✓		6	101,105
Caprice 4DR	'91-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	------------------------------	------------------------------	-------------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

## CHEVROLET continued

Cavalier 2DR	'95-04	✓			7	✓		7	✓		7		7	101,142
Cavalier 2DR	'82-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,105
Cavalier 4DR	'95-04	✓			7	✓		7	✓		7		7	101,142
Cavalier 4DR	'82-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,105
Cavalier Wagon	'88-94	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	9	101,105,127
Celebrity Wagon	'90-91	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	8	101,105,125,138
Cobalt 2DR	'05-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
Cobalt 4DR	'05-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,110,128
Corsica 4DR	'87-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,105,127
Cruze 4DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
Cruze Eco 4DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
Equinox	'10-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	9	101,112,121,138
Equinox	'05-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	9	101,112,121,138
HHR	'06-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	11	101,102,121,128
Impala	'06-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
Impala	'00-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,116,128,142
Lumina 2DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,108
Lumina 4DR	'90-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,108
Malibu 4DR	'13-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,127,128
Malibu 4DR	'08-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,127,128
Malibu 4DR	'04-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
Malibu 4DR	'97-03	✓			6	✓		6	✓		6	✓	6	101,102,116,125,128,129
Malibu Maxx Wagon	'04-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	8	101,102,128
Metro 3DR	'98-01	✓			8	✓		8	✓		8	✓	8	101,102
Metro 4DR	'98-01	✓			6	✓		6	✓		6	✓	6	101,102,140
Monte Carlo 2DR	'06-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
Monte Carlo 2DR	'00-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,102,128
Optra Wagon (Canada)	'05-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	8	101,102,128
Prizm 4DR	'98-02	✓			7	✓		7	✓		7	✓	7	101,102,116,128
Sonic 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
Sonic 5DR	'12-14	✓	✓		8	✓	✓	9	✓	✓	9	✓	9	101,102,128
Spark 5DR	'13-14	✓	✓		8	✓	✓	9	✓	✓	9	✓	9	101,102,128
Spectrum 2DR	'85-88	✓			7	✓		7	✓		7	✓	7	101,102,138
Spectrum 4DR	'85-88	✓			6	✓		6	✓		6	✓	6	101,102
Suburban	'00-06	✓			10	✓		10	✓		10	✓	10	101,106,121,138
Suburban	'92-99	✓			10	✓		10	✓		10	✓	10	101,106,128
Tahoe 2DR	'95-99	✓			10	✓		10	✓		10	✓	10	101,106,128
Tahoe 4DR	'00-06	✓			10	✓		10	✓		10	✓	10	101,106,121,138
Tahoe 4DR	'95-99	✓			10	✓		10	✓		10	✓	10	101,106,128
Trax (Canada)	'13-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	8	101,102,121,128
Traverse	'09-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	9	101,102,121,128
Uplander	'05-08	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	11	101,102,121,128
Venture	'97-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	10	101,106,121,138
Volt	'11-14	✓	✓		8	✓	✓	8	✓	✓	8	✓	8	101,102,128

## CHRYSLER

200 4DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
300	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
300	'05-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	7	101,102,128
300M	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	6	101,102,128



# THULE 2014 REAR MOUNTED FIT GUIDE

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING

## CHRYSLER continued

Aspen	'07-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Cirrus 4DR	'95-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,106,125
Concorde 4DR	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
LeBaron Coupe	'85-89	✓			6	✓		6	✓		6	✓		6	101,105,138
LeBaron 4DR	'94-96	✓			6	✓		6	✓		6	✓		6	101,105
LHS 4DR	'98-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Pacifica	'04-08	✓			9	✓		9	✓		9	✓		9	101,102,121,138
PT Cruiser	'01-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,129
Sebring 2DR (Hardtop)	'01-06	✓			6	✓		6	✓		6	✓		6	101,102,116,128
Sebring 4DR	'07-10	✓			6	✓		6	✓		6	✓		6	101,102,116,128
Sebring 4DR	'01-06	✓			6	✓		6	✓		6	✓		6	101,102,116,128
Town & Country	'11-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Town & Country	'08-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Town & Country	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121
Town & Country	'96-00	✓			10	✓		10	✓		10	✓		10	101,102,121,139
Town & Country	'91-95	✓			10	✓		10	✓		10	✓		10	101,102,121,139
Voyager / Grand Voyager	'01-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121

## DODGE

Avenger 4DR	'07-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Caliber	'07-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Caravan / Grand Caravan	'11-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Caravan / Grand Caravan	'08-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Caravan / Grand Caravan	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Caravan / Grand Caravan	'96-00	✓			10	✓		10	✓		10	✓		10	101,102,121,139
Caravan / Grand Caravan	'90-95	✓			10	✓		10	✓		10	✓		10	101,102,121,139
Charger 4DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Charger 4DR	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Colt 2DR	'84-92	✓			9	✓		9	✓		9	✓		9	101,102,140
Colt 4DR	'93-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Colt Hatchback	'90-92	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102
Colt Vista Wagon	'92-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,105,121
Colt Vista Wagon	'88-91	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121
C/V Tradesman	'11-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Dart 4DR	'13-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Daytona	'84-93	✓			6	✓		6	✓		6	✓		6	101,105,121,138
Durango	'11-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,125,128
Durango	'04-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,125,128
Durango	'98-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Dynasty 4DR	'88-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105
Intrepid 4DR	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Intrepid 4DR	'93-97	✓			6	✓		6	✓		6	✓		6	101,102
Journey	'13-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Journey	'08-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Magnum	'05-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Neon 2DR	'95-99	✓			6	✓		6	✓		6	✓		6	101,102
Neon 4DR	'00-05	✓			7	✓		7	✓		7	✓		7	101,102
Neon 4DR	'95-99	✓			6	✓		6	✓		6	✓		6	101,102
Nitro	'07-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Omni	'78-90	✓			7	✓		7	✓		7	✓		7	101,109,121



# THULE 2014 REAR MOUNTED FIT GUIDE

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## DODGE continued

<b>Spirit</b>	'89-94	✓			6	✓		6	✓		6	✓		6	101,112
<b>Stratus 2DR</b>	'01-06	✓			6	✓		6	✓		6	✓		6	101,102,116,128
<b>Stratus 4DR</b>	'01-06	✓			6	✓		6	✓		6	✓		6	101,102,116,128
<b>Stratus 4DR</b>	'95-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,106,125

## FIAT

<b>500 3DR</b>	'11-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,138
<b>500 Abarth 3DR</b>	'12-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,138
<b>500E 5DR</b>	'14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,138

## FORD

<b>Aerostar</b>	'85-97	✓			10	✓		10	✓		10	✓		10	101,102,128
<b>Aspire 3DR</b>	'95-97	✓			6	✓		6	✓		6	✓		6	101,102,138
<b>Aspire 5DR</b>	'95-97	✓			6	✓		6	✓		6	✓		6	101,102,138
<b>C-Max</b>	'13-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>Contour 4DR</b>	'95-00	✓			6	✓		6	✓		6	✓		6	101,103,118
<b>Crown Victoria</b>	'92-10	✓			6	✓		6	✓		6	✓		6	101,102
<b>Crown Victoria, LTD</b>	'88-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108
<b>Edge</b>	'11-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
<b>Edge</b>	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
<b>Edge Sport</b>	'11-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
<b>Edge Sport</b>	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
<b>Escape</b>	'08-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Escape</b>	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Escort 3DR</b>	'91-96	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,138
<b>Escort 3DR</b>	'87-90	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,105,138
<b>Escort 4DR</b>	'97-02	✓			7	✓		7	✓		7	✓		7	101,103,116,125,128,
<b>Escort 4DR</b>	'91-96	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,138
<b>Escort Wagon</b>	'91-99	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
<b>Escort GT 2DR</b>	'88	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,103,125,138
<b>Excursion</b>	'00-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121
<b>Expedition</b>	'05-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
<b>Expedition</b>	'97-04	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
<b>Expedition EL</b>	'05-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
<b>Expedition EL</b>	'97-04	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
<b>Explorer 2DR</b>	'96-00	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,108,121,139
<b>Explorer 2DR</b>	'91-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
<b>Explorer 4DR</b>	'11-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>Explorer 4DR</b>	'02-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
<b>Explorer 4DR</b>	'96-01	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,108,121,138
<b>Explorer 4DR</b>	'91-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
<b>Explorer Sport</b>	'01-03	✓			9	✓		9	✓		9	✓		9	101,108,121,139
<b>Fiesta 4DR</b>	'11-14	✓			7	✓		7	✓		7	✓		7	101,102,128
<b>Fiesta 5DR</b>	'11-14	✓			10	✓		10	✓		10	✓		10	101,102,128
<b>Five Hundred 4DR</b>	'05-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
<b>Flex</b>	'08-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Focus 2DR</b>	'08-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
<b>Focus 3DR</b>	'00-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>Focus 4DR</b>	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,125,126,128
<b>Focus 4DR</b>	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,125,126,128



**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING

## FORD continued

Focus 4DR	'00-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,116,125,126,128
Focus 5DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Focus 5DR	'02-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Focus Wagon	'00-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Freestar	'04-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
Fusion 4DR	'06-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Mustang 2DR	'05-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Mustang 2DR	'95-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,112
Probe 2DR	'91-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,138
Taurus 4DR	'13-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Taurus 4DR	'10-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Taurus 4DR	'08-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Taurus 4DR	'96-07	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,106,126
Taurus 4DR	'86-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
Taurus Wagon	'96-06	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,106,121
Taurus Wagon	'86-95	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Tempo 2DR	'84-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,138
Tempo 4DR	'84-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,138
Thunderbird 2DR	'89-97	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
Windstar	'99-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
ZX2	'98-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,116,125,128

## GMC

Acadia	'10-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Acadia	'07-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Acadia Denali	'11-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Denali	'00-06	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,106,121,138
Denali XL	'00-06	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,106,121,138
Suburban	'92-99	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,106,128
Terrain	'10-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,112,121,138
Terrain Denali	'12-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,112,121,138
Yukon	'00-06	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,106,121,138
Yukon	'99	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,106,128
Yukon XL	'00-06	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,106,121,138

## HONDA

Accord 2DR	'13-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,132
Accord 2DR	'08-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Accord 2DR	'03-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,147
Accord 2DR	'98-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110,128
Accord 2DR	'94-97	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Accord 2DR	'90-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Accord 2DR	'86-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
Accord 4DR	'13-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
Accord 4DR	'08-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Accord 4DR	'03-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Accord 4DR	'98-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Accord 4DR	'94-97	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Accord 4DR	'90-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Accord 4DR	'86-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year

9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	------------------------------	-------------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

## HONDA continued

Accord Wagon	'91-93	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Civic 2DR	'13-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Civic 2DR	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Civic 2DR	'01-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Civic 2DR	'96-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Civic 2DR	'92-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Civic Si 3DR	'02-05	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Civic 3DR	'92-95	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Civic 4DR	'13-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
Civic 4DR	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Civic 4DR	'01-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Civic 4DR	'96-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Civic 4DR	'92-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Civic 4DR	'86-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Civic Wagon	'88-91	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102
Crosstour	'10-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
CR-Z 3DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
del Sol	'93-97	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,110,125,126,138
Element	'03-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,121,128,147
Element SC	'03-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,121,128,147
Fit 5DR	'09-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Fit 5DR	'07-08	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Insight	'10-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Passport	'98-02	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138,144
Prelude 2DR	'92-96	✓	✓	✓	4	✓	✓	4	✓	✓	4	✓	✓	4	101,102,138
Prelude 2DR	'88-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125
Prelude 2DR	'83-87	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125

## HYUNDAI

Accent 3DR	'07-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Accent 3DR	'00-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Accent 3DR	'95-99	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108,138
Accent 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Accent 4DR	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Accent 4DR	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Accent 4DR	'95-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,126,138
Accent 5DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Azera 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Azera 4DR	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Elantra 2DR	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Elantra 4DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Elantra 4DR	'07-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Elantra 4DR	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Elantra 4DR	'99-00	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,126,128
Elantra 5DR	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
Elantra GT 5DR	'13-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Elantra Touring	'09-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
Entourage	'07-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Excel 2DR	'90-94	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108,138
Excel 4DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year

9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	------------------------------	-------------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

## HYUNDAI continued

Excel 4DR	'86-89	✓			8	✓			8	✓		8	101,102,121
Excel 5DR	'86-89	✓			8	✓			8	✓		8	101,102,121,138
Genesis 4DR	'09-14	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,128
Santa Fe	'13-14	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128
Santa Fe	'07-12	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128
Santa Fe	'01-06	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,138
Santa Fe Sport	'13-14	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128
S Coupe 2DR	'91-96	✓	✓	✓	5	✓	✓	✓	5	✓	✓	5	101,102,138
Sonata 4DR	'11-14	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,128
Sonata 4DR	'06-10	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,128
Sonata 4DR	'02-05	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,128
Sonata 4DR	'99-01	✓			7	✓			7	✓		7	101,102,126,128
Sonata 4DR	'95-98	✓			6	✓			6	✓		6	101,108,126,138
Tiburon 2DR	'02-08	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,121,128
Tuscon	'10-14	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,119,121
Tuscon	'05-09	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128
XG300 / 350 4DR	'01-05	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,128

## INFINITI

EX35	'08-13	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128,151
EX37	'13	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128,151
FX35	'07-13	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,141
FX37	'13	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,141
FX45	'03-08	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,141
FX50	'09-13	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,141
G20 4DR	'99-02	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,116,128
G20 4DR	'91-96	✓			6	✓			6	✓		6	101,103,138
G25 4DR	'11-12	✓			7	✓			7	✓		7	101,102,116,128
G35 2DR	'03-08					✓			7	✓		7	101,102,138
G35 2DR	'07-08	✓			7	✓			7	✓		7	101,102,116,128
G35 2DR	'03-06	✓			7	✓			7	✓		7	101,102,116,128
G37 2DR	'09-12					✓			7	✓		7	101,102,138
G37 4DR	'09-13	✓			7	✓			7	✓		7	101,102,116,128
I30 4DR	'00-01	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103,125,128
I30 4DR	'95-99	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,110,128
I35 4DR	'02-04	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103,125,128
J30 4DR	'92-98	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103,126
JX	'12-13	✓	✓	✓	11	✓	✓	✓	11	✓	✓	11	101,102,121,128
M 4DR	'11-13	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,128
M35 4DR	'06-10	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,128
M45 4DR	'06-10	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,103,128
Q45	'90-95	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103
Q50 4DR	'14	✓			7	✓			7	✓		7	101,102,116,128
Q60 2DR	'14					✓			7	✓		7	101,102,138
Q70 4DR	'14	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,128
QX4 w/o Spare	'97-03	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128
QX50	'14	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128,151
QX56	'11-13	✓	✓	✓	11	✓	✓	✓	11	✓	✓	11	101,112,121,128
QX56	'04-10	✓	✓	✓	11	✓	✓	✓	11	✓	✓	11	101,112,121,128

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## INFINITI continued

<b>QX60</b>	'14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
<b>QX70</b>	'14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,141
<b>QX80</b>	'14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128

## ISUZU

<b>Axiom</b>	'02-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>I-Mark 2DR</b>	'86-89	✓			7	✓		7	✓		7	✓		7	101,102,140
<b>I-Mark 4DR</b>	'86-89	✓			7	✓		7	✓		7	✓		7	101,102,140
<b>Stylus 4DR</b>	'91-93	✓			6	✓		6	✓		6	✓		6	101,102

## JAGUAR

<b>S-Type 4DR</b>	'00-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>VDP Vanden Plas 4DR</b>	'96-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,130
<b>XJ12 4DR</b>	'94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
<b>XJ6 4DR</b>	'96-97	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,130
<b>XJ6 4DR</b>	'89-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
<b>XJ8 4DR</b>	'97-09	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,130
<b>XJS 2DR</b>	'92-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
<b>X-Type 4DR</b>	'02-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>X-Type Wagon</b>	'05-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128

## JEEP

<b>Cherokee</b>	'91-01	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,109,121,139
<b>Commander</b>	'06-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
<b>Compass</b>	'11-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>Compass</b>	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>Grand Cherokee</b>	'11-14	✓	✓		9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>Grand Cherokee</b>	'05-10	✓	✓		9	✓	✓	9	✓	✓	9	✓	✓	9	101,105,121,128
<b>Grand Cherokee</b>	'99-04	✓			10	✓		10	✓		10	✓		10	101,102,121,138
<b>Grand Cherokee</b>	'93-98	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,105,121,138
<b>Liberty</b>	'08-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
<b>Patriot</b>	'07-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128

## KIA

<b>Amanti 4DR</b>	'04-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Carens</b>	'07-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
<b>Forte Koup 2DR</b>	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Forte Koup 2DR</b>	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Forte 4DR</b>	'14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
<b>Forte 4DR</b>	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
<b>Forte 5DR</b>	'14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
<b>Forte 5DR</b>	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
<b>Optima 4DR</b>	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Optima 4DR</b>	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Optima 4DR</b>	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Rio 4DR</b>	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
<b>Rio 4DR</b>	'06-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
<b>Rio 4DR</b>	'01-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Rio5 5DR</b>	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>Rio Cinco Wagon</b>	'06-11	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## KIA continued

Rio Cinco Wagon	'02-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Rondo (Canada)	'14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Rondo	'07-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sedona	'11-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121
Sedona	'06-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121
Sedona	'02-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Sephia 4DR	'98-01	✓			7	✓		7	✓		7	✓		7	101,102,128
Soul	'10-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sorento	'14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,125,128
Sorento	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,125,128
Sorento	'03-09	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,125,128
Spectra 4DR	'07-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Spectra 4DR	'00-04.5	✓			6	✓		6	✓		6	✓		6	101,102,128
Sportage	'11-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,119,121
Sportage	'05-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

## LAND ROVER

LR2	'07-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
LR3	'05-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,128,147
LR4	'10-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,128,147

## LEXUS

CT200H 5DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
CT200H F Sport 5DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
ES300 4DR	'02-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
ES300 4DR	'97-01	✓			6	✓		6	✓		6	✓		6	101,103,125,126,138
ES300 4DR	'92-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
ES330 4DR	'04-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
ES350 4DR	'07-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GS 4DR	'13-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GS F 4DR	'13-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GS300 4DR	'06-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GS300 4DR	'02-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
GS300 4DR	'98-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
GS350 4DR	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GS400 4DR	'98-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
GS430 4DR	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GS430 4DR	'02-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
GS450h 4DR	'07-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GS460 4DR	'02-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
GX460	'09-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
GX470	'03-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
HS250H 4DR	'10-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
IS300 4DR	'01-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
IS 250 4DR	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
IS 250 4DR	'06-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
IS 350 4DR	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
IS 350 4DR	'06-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
IS F 4DR	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
IS F 4DR	'06-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## LEXUS continued

LS400 4DR	'95-00	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LS430 4DR	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LX470	'98-07	✓			10	✓		10	✓		10	✓		10	101,103,121,125,141
LX570	'08-14	✓			10	✓		10	✓		10	✓		10	101,103,121,125,141
RX300	'98-03	✓			9	✓		9	✓		9	✓		9	101,103,121,127,138
RX330	'04-06	✓			9	✓		9	✓		9	✓		9	101,103,121,138
RX350	'05-14	✓			9	✓		9	✓		9	✓		9	101,103,121,138
RX400H	'06-14	✓			9	✓		9	✓		9	✓		9	101,103,121,138
RX450H	'10-14	✓			9	✓		9	✓		9	✓		9	101,103,121,138

## LINCOLN

Aviator	'03-05	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
Continental 4DR	'98-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108
Continental 4DR	'97-97	✓			7	✓		7	✓		7	✓		7	101,106,138
Continental 4DR	'90-96	✓			6	✓		6	✓		6	✓		6	101,103,138
LS 4DR	'00-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,128
Mark VII 2DR	'84-92	✓			7	✓		7	✓		7	✓		7	101,109,117,138
Mark VIII 2DR	'96-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,117,125,128
Mark VIII 2DR	'93-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,103,139
MKS 4DR	'09-14	✓			7	✓		7	✓		7	✓		7	101,102,116,128
MKX	'11-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
MKX	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
MKZ	'13-14	✓			8	✓		8	✓		8	✓		8	101,102,128
MKZ	'07-12	✓			8	✓		8	✓		8	✓		8	101,102,116,128
Navigator	'98-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
Town Car 4DR	'98-11	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Zephyr 4DR	'06	✓			8	✓		8	✓		8	✓		8	101,102,116,128

## MAZDA

2 5DR	'11-14	✓			10	✓		10	✓		10	✓		10	101,102,128
3 4DR	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
3 4DR	'04-13	✓			6	✓		6	✓		6	✓		6	101,102,128
3 5DR	'14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,128
3 5DR	'04-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,128
323 3DR	'90-94	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103
5 5DR	'12-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,128
5 5DR	'06-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,128
6 4DR	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
6 4DR	'09-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
6 4DR	'03-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
6 Wagon	'04-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,128
CX-5	'12-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
CX-7	'07-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128,151
CX-9	'07-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Miata	'90-05	✓			5	✓		5	✓		5	✓		5	101,103,126,138
MPV	'00-06	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
MPV	'91-98	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121
MX-3	'92-96	✓			6	✓		6	✓		6	✓		6	101,103,121
MX-6	'93-97	✓			4	✓		4	✓		4	✓		4	101,108
Navajo	'90-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,139



# THULE 2014 REAR MOUNTED FIT GUIDE

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## MAZDA continued

Protege 4DR	'99-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
Protege 4DR	'95-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,126
Protege 4DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,126
Tribute	'08-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Tribute	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

## MERCEDES-BENZ

300 Series 4DR	'87-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
300 Series Wagon	'88-98	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
400 Series 4DR	'88-88	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109,138
560 SEC	'89-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109,138
B Class 5DR	'13-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,116,121,128
B Class 5DR	'10-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,116,121,128
C Class 2DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
C Class 2DR	'05-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
C Class 4DR	'07-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
C Class 4DR	'05-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
C Class 4DR	'01-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
CL Class 2DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
CL Class 2DR	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
CLS Class 4DR	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
E-Class 4DR	'10-14	✓	✓	✓	7	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
E-Class 4DR	'96-09	✓	✓	✓	7	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
M Class	'12-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
M Class	'06-11	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
R Class	'06-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

## MERCURY

Cougar 2DR	'89-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125,138
Grand Marquis 4DR	'92-09	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,116
Grand Marquis 4DR	'88-89	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108
Mariner	'05-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Marauder 4DR	'03-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,116
Milan 4DR	'06-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Montego 4DR	'05-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Monterey	'04-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Mountaineer	'02-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Mountaineer	'96-01	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121
Mystique 2DR	'95-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,118
Sable 4DR	'08-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Sable 4DR	'00-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,106,126
Sable 4DR	'96-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,106,126
Sable 4DR	'86-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
Sable Wagon	'96-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,106,121
Sable Wagon	'85-95	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Topaz 4DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,138
Tracer 4DR	'91-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
Tracer Wagon	'91-99	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Villager	'99-02	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Villager	'93-98	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,126,138



**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year

9001/XT / PRO RACEWAY 2	9002/XT / PRO RACEWAY 3	9003/XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
-------------------------	-------------------------	--------------------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	----------------------------	------------------

## MITSUBISHI

Diamante 4DR	'97-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Diamante 4DR	'91-96	✓	✓	✓	5	✓	✓	5	✓	✓	5	101,108,126,138
Diamante Wagon	'92-96	✓	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127
Endeavor	'04-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Expo/Expo LRV	'92-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Galant 4DR	'04-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Galant 4DR	'97-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Galant 4DR	'94-96	✓	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Galant 4DR	'89-93	✓	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Galant 4DR	'85-88	✓	✓	✓	5	✓	✓	5	✓	✓	5	101,108,114
Lancer 4DR	'08-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Lancer 4DR	'02-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
MiEV 5DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	102,102,121,138
Mirage 2DR	'00-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,108,128
Mirage 2DR	'89-92	✓	✓	✓	8	✓	✓	8	✓	✓	8	101,102
Mirage 4DR	'00-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,108,128
Mirage 4DR	'93-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Mirage 4DR	'89-92	✓	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Mirage 5DR	'14	✓	✓	✓	8	✓	✓	8	✓	✓	8	102,102,121,138
Precis 2DR	'90-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,108,138

## NISSAN

200SX 2DR	'95-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
300ZX	'90-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,103,128
Altima 2DR	'13	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Altima 2DR	'08-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Altima 4DR	'13-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Altima 4DR	'07-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Altima 4DR	'02-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Altima 4DR	'98-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,102,139,140
Altima 4DR	'93-97	✓	✓	✓	5	✓	✓	5	✓	✓	5	101,102,140
Armada	'08-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
Armada	'04-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
Cube	'09-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	101,102,119,121
Juke 5DR	'11-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Maxima 4DR	'09-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
Maxima 4DR	'04-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Maxima 4DR	'00-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125,128
Maxima 4DR	'87-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Maxima Wagon	'87-88	✓	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Micra 5DR (Canada)	'15	✓	✓	✓	9	✓	✓	9	✓	✓	10	101,102,121,128
Murano	'03-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,141
NX 1600	'92-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,103,121
NX 2000	'92-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,103,121
Pathfinder	'13-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Pathfinder	'05-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Pathfinder	'96-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Pathfinder w/o Spare	'92-95	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,127,138
Pulsar 2DR	'87-88	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,105
Quest	'12-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## NISSAN continued

Quest	'04-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Quest	'99-02	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Quest	'93-98	✓			10	✓		10	✓		10	✓		10	101,102,126,138
Rogue	'08-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,151
Sentra 2DR	'95-99	✓			6	✓		6	✓		6	✓		6	101,102,138
Sentra 2DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
Sentra 4DR	'13-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Sentra 4DR	'07-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Sentra 4DR	'00-06	✓	✓		7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
Sentra 4DR	'95-99	✓			6	✓		6	✓		6	✓		6	101,102,138
Sentra 4DR	'91-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
Sentra 4DR	'82-90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
Stanza 4DR	'91-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Versa 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Versa 4DR	'07-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Versa 5DR	'07-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Versa Note 5DR	'14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Xterra	'05-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Xterra	'00-04	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,121,125,128,130
X-Trail	'01-08	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128

## OLDSMOBILE

98 Regency 4DR	'92-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,126,130
Achieva 2DR	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Achieva 4DR	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Alero 2DR	'99-04	✓			5	✓		5	✓		5	✓		5	101,126,128,142
Alero 4DR	'99-04	✓			5	✓		5	✓		5	✓		5	101,126,128,142
Aurora 4DR	'01-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Cutlass 4DR	'97-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,142
Cutlass Supreme 4DR	'90-97	✓			6	✓		6	✓		6	✓		6	101,108
Delta 88 Royale 2DR	'92-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105
LSS 4DR	'96-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,128
Silhouette	'97-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138

## PONTIAC

Aztek	'01-05	✓			10	✓		10	✓		10	✓		10	101,112,121,125,138
Bonneville 4DR	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Bonneville 4DR	'94-99	✓			6	✓		6	✓		6	✓		6	101,110,116
G3 5DR	'08-10	✓			9	✓		9	✓		9	✓		9	101,128,147
G3 Wave 5DR (Canada)	'08-10	✓			9	✓		9	✓		9	✓		9	101,128,147
G5 2DR	'07-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
G5 4DR	'07-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,110,128
G6 Coupe	'06-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
G6 4DR	'05-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
G8 4DR	'08-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Grand Am 2DR	'99-05	✓			5	✓		5	✓		5	✓		5	101,126,128,142
Grand Am 2DR	'85-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109
Grand Am 4DR	'99-05	✓			5	✓		5	✓		5	✓		5	101,126,128,142
Grand Prix 2DR	'97-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Grand Prix 2DR	'88-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING

## PONTIAC continued

Grand Prix 4DR	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Grand Prix 4DR	'97-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Grand Prix 4DR	'88-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108
LeMans 3DR	'88-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Montana	'99-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Montana SV6	'05-06	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sunbird 2DR	'85-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110
Sunbird 4DR	'85-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110
Sunfire 2DR	'95-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,142
Sunfire 4DR	'95-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,142
Torrent	'06-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
Trans Sport	'97-98	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Vibe	'03-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128

## PORSCHE

Cayenne	'11-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Cayenne	'03-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

## SAAB

9-2x 5DR	'05-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
9-3 3DR	'99-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
9-3 4DR	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-3 4DR	'03-05	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
9-3 Convertible	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-3 Convertible	'03-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-3 5DR	'99-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
9-3 Sport Combi Wagon	'06-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
9-4x	'10-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,129
9-5 4DR	'10-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-5 4DR	'99-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-5 Wagon	'99-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
900 3DR	'94-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
900 4DR	89-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103
900 5DR	'94-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
900 Convertible	'95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
9000 4DR	'86-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102

## SATURN

Astra 3DR	'08-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Astra 5DR	'08-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Aura 4DR	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Ion 2DR	'03-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Ion 4DR	'03-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LS 4DR	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LW Wagon	'00-04	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,121,128,142
Outlook	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Relay	'05-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
SL 4DR	'96-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108
SL 4DR	91-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105
SW Wagon	'02-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## SATURN continued

SW Wagon	'93-01	✓			8	✓		8	✓		8	✓		8	101,102,121,126
----------	--------	---	--	--	---	---	--	---	---	--	---	---	--	---	-----------------

## SCION

FR-S	'13-14	✓	✓	✓	6	✓	✓	6	✓	✓	6				101,102,128,155
IQ 3DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
xA 5DR	'04-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
xB 5DR	'08-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
xD 5DR	'08-14	✓			10	✓		10	✓		10	✓		10	101,102,116,121,128,

## SUBARU

BRZ	'13-14	✓	✓	✓	6	✓	✓	6	✓	✓	6				101,102,128,155
Forester	'14	✓	✓	✓	9	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Forester	'09-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Forester	'03-08	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Forester	'98-02	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,128
Impreza 2DR	'95-01	✓			6	✓		6	✓		6	✓		6	101,111
Impreza 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Impreza 4DR	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Impreza 4DR	'02-07	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Impreza 4DR	'93-01	✓			5	✓		5	✓		5	✓		5	101,102,139
Impreza WRX / WRX STI 4DR (w/o Spoiler)	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Impreza WRX / WRX STI 4DR (w/o Spoiler)	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Impreza WRX / WRX STI 4DR (w/o Spoiler)	'02-07	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Impreza WRX / WRX STI 4DR (w/o Spoiler)	'93-01	✓			5	✓		5	✓		5	✓		5	101,102,139
Impreza 5DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Impreza 5DR	'08-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Impreza 5DR	'02-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Impreza 5DR	'93-99	✓			9	✓		9	✓		9	✓		9	101,102,121,128
Impreza Sport 5DR	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Impreza WRX / WRX STI 5DR (w/o Spoiler)	'12-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Impreza WRX / WRX STI 5DR (w/o Spoiler)	'08-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Impreza WRX / WRX STI 5DR (w/o Spoiler)	'02-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Impreza WRX / WRX STI 5DR (w/o Spoiler)	'93-99	✓			9	✓		9	✓		9	✓		9	101,102,121,128
Justy 3DR	'87-94	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121
Justy 5DR	'87-94	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121
Legacy 4DR	'10-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Legacy 4DR	'05-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,128,147
Legacy 4DR	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128,129
Legacy 4DR	'95-99	✓			6	✓		6	✓		6	✓		6	101,103,138
Legacy 4DR	'90-94	✓			6	✓		6	✓		6	✓		6	101,103
Legacy Wagon (Canada)	'09-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Legacy Wagon	'05-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Legacy Wagon	'00-04	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Legacy Wagon	'89-94	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,138
Legacy Outback Wagon	'95-99	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Loyale 2DR	'90-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Loyale 4DR	'90-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Loyale Wagon	'90-94	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Outback 4DR	'05-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,128,147
Outback 4DR	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128,129

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

## SUBARU continued

Outback Wagon	'13-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Outback Wagon	'10-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Outback Wagon	'00-04	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Outback Sport Wagon	'02-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
Outback Sport Wagon	'00-01	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Tribeca	'06-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
XV Crosstrek (w/o Spoiler)	'13-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128

## SUZUKI

Esteem 4DR	'95-02	✓			6	✓		6	✓		6	✓		6	101,102,138
Esteem Wagon	'98-02	✓			9	✓		9	✓		9	✓		9	101,102,121,128
Forenza Wagon	'05-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Kizashi 4DR	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Reno 5DR	'05-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Swift 2DR	'91-94	✓			5	✓		5	✓		5	✓		5	101,102,138
Swift 3DR	'95-01	✓			8	✓		8	✓		8	✓		8	101,102
Swift 4DR	'91-94	✓			5	✓		5	✓		5	✓		5	101,102,138
SX4 4DR	'07-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
SX4 Sport 4DR	'07-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
SX4 Sportback 5DR	'07-13	✓			9	✓		9	✓		9	✓		9	101,102,121,128
SX4 Hatchback	'07-13	✓			9	✓		9	✓		9	✓		9	101,102,121,128
Verona 4DR	'04-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
XL-7	'07-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128

## TOYOTA

4 Runner 4DR	'10-14	✓			10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
4 Runner 4DR	'03-09	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,127,128
4 Runner 4DR	'96-02	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,127,128
Avalon 4DR	'13-14	✓			7	✓		7	✓		7	✓		7	101,102,128
Avalon 4DR	'05-12	✓			7	✓		7	✓		7	✓		7	101,102,116,128
Avalon 4DR	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Camry 2DR	'92-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125
Camry 4DR	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Camry 4DR	'07-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Camry 4DR	'02-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Camry 4DR	'97-01	✓			6	✓		6	✓		6	✓		6	101,102,138
Camry 4DR	'92-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,125
Camry 4DR	'87-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,108,138
Camry Wagon	'92-96	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121
Camry Wagon	'87-91	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,108,121
Celica 2DR	'94-99	✓			5	✓		5	✓		5	✓		5	101,103,121,138
Celica 2DR	'90-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,126,138
Celica 2DR	'82-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Celica 3DR	'94-99	✓			5	✓		5	✓		5	✓		5	101,103,121,138
Celica 3DR	'90-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,126,138
Corolla 4DR	'14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128,155
Corolla 4DR	'09-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Corolla 4DR	'03-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Corolla 4DR	'98-02	✓			7	✓		7	✓		7	✓		7	101,102,128
Corolla 4DR	'93-97	✓			6	✓		6	✓		6	✓		6	101,102,126

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING

## TOYOTA continued

Corolla 4DR	'89-92	✓			6	✓		6	✓		6	✓		6	101,102
Corolla S 4DR	'09-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Corolla S 4DR	'03-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Corolla Wagon	'93-96	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,103,121,138
Corolla Wagon	'88-92	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,103,121,138
Highlander	'14	✓			9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Highlander	'01-07	✓		✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,127,128
Land Cruiser	'98-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Matrix	'09-14	✓		✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Matrix	'03-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Paseo 2DR	'91-97	✓			6	✓		6	✓		6	✓		6	101,102,138
Previa	'91-97	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,103,125,138
Prius 5DR	'10-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
Prius 5DR	'04-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
Prius C 5DR	'12-14	✓			8	✓		8	✓		8	✓		8	101,102,121,128
Prius V 5DR Wagon	'12-14	✓			9	✓		9	✓		9	✓		9	101,102,121,128
RAV 4	'13-14	✓	✓		11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,138
Sequoia	'08-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,127,138
Sequoia	'01-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,127,138
Sienna	'10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sienna	'04-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sienna	'98-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Solara 2DR (AKA Camry Solara)	'04-08	✓			7	✓		7	✓		7	✓		7	101,102,128
Solara 2DR (AKA Camry Solara)	'99-03	✓			5	✓		5	✓		5	✓		5	101,102,128
Tercel 2DR	'91-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Tercel 2DR	'90	✓			8	✓		8	✓		8	✓		8	101,103
Tercel 4DR	'91-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Tercel Wagon	'80-88	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,139
Vans	'84-90	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,138
Venza	'09-14	✓			9	✓		9	✓		9	✓		9	101,102,121,138
Yaris 3DR	'12-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Yaris 3DR	'07-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Yaris 4DR	'07-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
Yaris 5DR	'12-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Yaris 5DR	'07-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

## VOLKSWAGEN

Beetle	'12-14	✓			6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128,155
Beetle	'98-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Beetle Turbo	'12-14	✓			5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,128,155
Corrado 3DR	'90-94	✓			6	✓		6	✓		6	✓		6	101,112,121,125,138
Fox 2DR	'87-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Fox 4DR	'87-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
GLI 4DR	'08-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Golf 3DR (Type VII)	'15	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf 3DR (Type VI)	'10-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf 3DR (Type V)	'06-09	see "Volkswagen Rabbit 3DR, 06-09"													
Golf 3DR (Type IV)	'99-05	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf 3DR (Type III)	'93-99	✓			8	✓		8	✓		8	✓		8	101,102,138
Golf 5DR (Type VII)	'15	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128

**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year	9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING

## VOLKSWAGEN continued

<b>Golf 5DR (Type VI)</b>	'10-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>Golf 5DR (Type V)</b>	'06-09	see "Volkswagen Rabbit 5DR, 06-09"													
<b>Golf 5DR (Type IV)</b>	'99-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>Golf 5DR (Type III)</b>	'93-99	✓			8	✓		8	✓		8	✓		8	101,102,138
<b>Golf</b>	'85-92	✓			7	✓		7	✓		7	✓		7	101,102,121,138
<b>Golf City 5DR (Canada)</b>	'08-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>Golf R 3DR</b>	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>Golf R 5DR</b>	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>Golf Wagon (Canada)</b>	'10-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>GTI 3DR (Type VII)</b>	'15	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>GTI 3DR (Type VI)</b>	'10-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>GTI 3DR (Type V)</b>	'06-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>GTI 3DR (Type IV)</b>	'99-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>GTI 3DR (Type III)</b>	'93-99	✓			8	✓		8	✓		8	✓		8	101,102,138
<b>GTI 3DR</b>	'89-92	✓			7	✓		7	✓		7	✓		7	101,102,121,138
<b>GTI 5DR (Type VII)</b>	'15	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>GTI 5DR (Type VI)</b>	'10-14	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>GTI 5DR (Type V)</b>	'06-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
<b>GTI 5DR</b>	'85-92	✓			7	✓		7	✓		7	✓		7	101,102,121,138
<b>GTI 5DR</b>	'75-84	✓			7	✓		7	✓		7	✓		7	101,102,121,138
<b>Jetta 4DR (Type VI)</b>	'11-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Jetta 4DR (Type V)</b>	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Jetta 4DR (Type IV)</b>	'99-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Jetta 4DR (Type III)</b>	'93-99	✓			6	✓		6	✓		6	✓		6	101,102,138
<b>Jetta 4DR</b>	'85-92	✓			6	✓		6	✓		6	✓		6	101,103,140
<b>Jetta SportWagen / Clean Diesel TDI</b>	'09-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Jetta Wagon</b>	'01-08	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Passat 4DR</b>	'12-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Passat 4DR</b>	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Passat 4DR</b>	'98-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>Passat 4DR</b>	'90-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,103,138
<b>Passat CC</b>	'09-14	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
<b>Passat Wagon</b>	'90-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Phaeton 4DR</b>	'04-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,112,128
<b>Rabbit 3DR</b>	'06-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>Rabbit 5DR</b>	'06-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>Routan</b>	'11-14	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
<b>Routan</b>	'09-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
<b>Scirocco 3DR</b>	'87-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,121,138
<b>Touareg</b>	'08-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Touareg</b>	'04-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>Vanagon Van (T3)</b>	'80-02	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,123

## VOLVO

<b>240 / 260 4DR</b>	'79-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
<b>240 / 260 Wagon</b>	'79-93	✓			10	✓		10	✓		10	✓		10	101,102,121,130
<b>740 / 760 4DR</b>	'90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
<b>740 / 760 4DR</b>	'84-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109
<b>740 / 760 Wagon</b>	'84-90	✓			10	✓		10	✓		10	✓		10	101,102,121,130
<b>740 / 940 / 960 Wagon</b>	'84-97	✓			10	✓		10	✓		10	✓		10	101,102,121,130



**NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule**

Vehicle make, model and year

9001 / XT / PRO RACEWAY 2	9002 / XT / PRO RACEWAY 3	9003 / XT / PRO RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	------------------------------	-------------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	--------------------------------	------------------

**VOLVO** continued

<b>740 / 960 4DR</b>	'91-97	✓			6	✓		6	✓		6	101,102,138
<b>850 4DR</b>	'93-97	✓			6	✓		6	✓		6	101,102,138
<b>C70 Convertible</b>	'98-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	101,110,128
<b>S40 4DR</b>	'05-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>S40 4DR</b>	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,108,128
<b>S60 4DR</b>	'10-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>S60 4DR</b>	'01-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>S70 4DR</b>	'98-00	✓			6	✓		6	✓		6	101,102,138
<b>S80 4DR</b>	'07-14	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>S80 4DR</b>	'99-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
<b>S90 4DR</b>	'98-00	✓			6	✓		6	✓		6	101,102,138
<b>V40</b>	'00-04	✓	✓	✓	11	✓	✓	8	✓	✓	8	101,102,121,128
<b>V50</b>	'05-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>V70</b>	'98-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>V70 XC</b>	'01-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>V90</b>	'98-00	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>XC60</b>	'09-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
<b>XC70</b>	'01-14	✓	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
<b>XC90</b>	'03-14	✓	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128

- 101** Place top clips in the gap at the front edge of the top of the trunk, hatch or door.
- 102** Place lower clips in the bottom edge of trunk or hatch.
- 103** Set lower clips/hooks into vehicle's left and right tow loops under the rear of the vehicle.
- 104** Set lower clips/hooks into tow loop on the right and frame hole on the left.
- 105** Set lower clips into bottom edge of internal metal bumper.
- 106** Set lower clips/hooks into frame holes.
- 107** Set lower clips into bottom edge of rear doors.
- 108** Set lower clips into frame holes in back of bumper.
- 109** Set lower clips onto bottom edge of bumper.
- 110** Set lower clip/hook onto edge of structural bumper located behind plastic bumper.
- 111** Frame holes are located up high on the backside of bumper.
- 112** Set lower clip/hooks into frame holes in chassis behind bumper.
- 114** Chafe guards required.
- 115** To minimize contact between carrier tow hooks and the bumper, slide the strap through only one end of the chafe guard leaving the other end free to rest between the tow hook and the bumper.
- 116** Bumper cover may deform with the use of this carrier. Remove carrier when not in use.
- 117** The upper arm of carrier, between rubber pads, may contact the center ridge in the trunk lid when carrier is fully mounted.
- 118** Lower arm of the carrier will mount against the license plate and the lights to the left and right of it.
- 119** Lower arm of the carrier will mount on the ridge on the bottom of the rear door, just above the bottom edge of the rear door.
- 121** Caution: Rear wiper can not be used when carrier is mounted.
- 122** Offset carrier to the right.
- 123** Lower arm of the carrier will mount higher on the rear door, so that the upper arm rests against the metal above the rear window.
- 124** Rear wiper must be positioned through the upper arm of carrier.
- 125** Always check to make sure there is no contact between the lower straps and the muffler and/or exhaust pipe.
- 126** Caution: The trunk lid may deform slightly with the use of this carrier. Remove carrier when not in use.
- 127** Route top strap under the spoiler on top of the hatch.
- 128** Lower arm of carrier should be positioned on upper tier of bumper.
- 129** Rubber weather stripping at top door/hatch will deform over time. Remove carrier when not in use.
- 130** Set lower clips/hooks into frame holes in bumper located by the right and left bumper strut.
- 131** Set lower clips/hooks into tow loop on the right and edge of bumper, by the bumper strut, on the left.
- 132** Thule cannot recommend the use of 3-bike carriers on this vehicle.
- 133** Carrier is not recommended because lower straps can not be mounted in a safe place.
- 134** Carrier is not recommended because top straps should not be mounted directly to glass or plastic trim covering glass.
- 135** Carrier is not recommended because vehicle is unable to support carrier weight.
- 136** Carrier is not recommended because upper arm of carrier could damage trunk lid.
- 137** Carrier is not recommended because top straps can not be mounted in a safe place.
- 138** Lower arm of carrier will rest in the bottom of the license plate well.
- 139** Lower arm of carrier will rest above license plate well.
- 140** Lower arm of carrier will rest at bottom of trunk lip.
- 141** Lower arm of carrier will rest in the area between the license plate well and upper tier of the bumper.
- 142** Set lower clips/hooks on top edge of the metal bumper struts.
- 143** When installing a Freeway or Speedway rack the use of a versa clip is required.
- 144** Vehicle can have an externally mounted spare tire prohibiting the use of any strap rack.
- 145** Set lower clips/hooks into tow loop on the left and frame hole on the right.
- 146** Carrier is not recommended because it cannot be installed without unwanted contact.
- 147** Set lower clips/hooks in tow loop located in the center of the vehicle behind the bumper.
- 148** Please verify vehicle cargo area will accept bicycle wheelbase prior to purchase.
- 149** Due to a factory incorporated "tire hanger" on some models, the 963 "Spare Me" cannot be used on this vehicle. Please check your vehicle's configuration before buying this product.
- 150** Only the "963XT, 963XTR, and 963PRO" can be used with this vehicle, due to mounting limitations on the original "963 Spare Me". If you have the "963 Spare Me" and would like to fit one of these vehicles - you need part # 753-3532.
- 151** If this vehicle has a spoiler installed, it is a "NO FIT"
- 152** If this vehicle has a spare tire mounted back-up camera, the 963XT will not fit.
- 153** Truck bed is not long enough to carry bikes using the 501 Insta-Gater.
- 154** All instances of this vehicle come with a factory spoiler which is not strong enough to take the weight of our strap carriers.
- 155** Place side clips in the bottom edge of trunk or hatch next to the lower clips
- 156** Do not operate convertible roof while rack is in place.