


PARTS INCLUDED

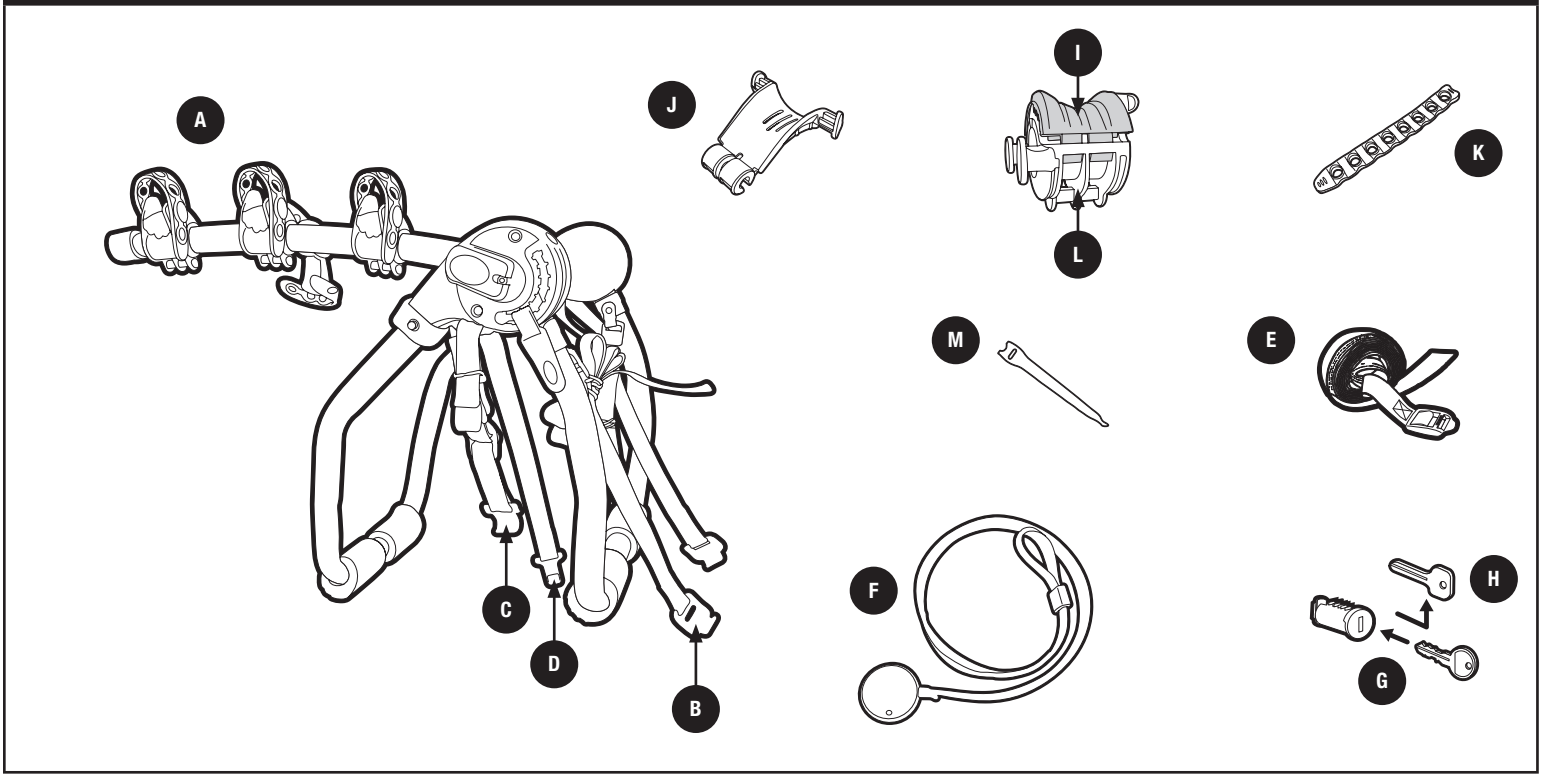

part	description	part number	9009XT qty.	9010XT qty.
A	Archway 2 or 3 bike carrier /	—	1	1
B	top strap assembly /	7532184	2	2
C	side hook assembly w/buckle /	7532877	2	2
D	bottom strap (narrow) w/hook /	753003507	2	2
E	tie down strap /	7531492	1	1
F	trunk locking strap /	7521282001	1	1
G	lock cylinder and key /	—	1	1
H	change key /	8531251	1	1
I	cradle overmold /	8523503001	4	6
J	anti-sway cage with overmold /	8523037001	2	3
K	ripple strap /	8523006001	6	9
L	Hold Fast with RDT cradle base /	7521303001	4	6
M	strap management device /	8535414	4	4


WARNINGS / LIMITATIONS •

- Number of bicycles carried should not exceed designated carrying capacity for your specific Archway model.
- 9009XT (2 bike) max carrying capacity = 70 lbs.
- 9010XT (3 bike) max carrying capacity = 105 lbs.
- Check tightness of all bolts and knobs periodically.
- Check straps for wear and replace if worn.
- Not intended for off-road use.
- Not intended for tandems or recumbents.
- Do not install on a trailer or other towed vehicle.
- Failure to use blue safety strap may result in loss of bicycles.
- Do not open your trunk/rear hatch with the rack installed, it may cause damage to your vehicle.




1

- Clean trunk/hatch and rear of car.

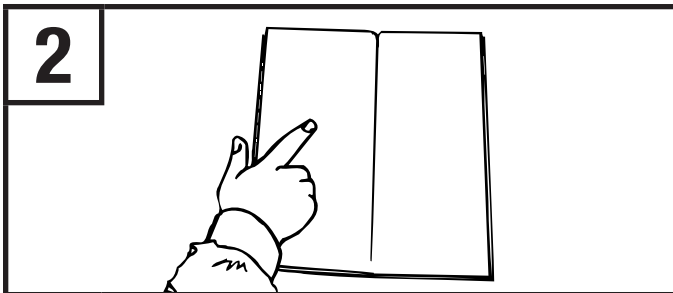

2


- Look up your vehicle in the Fit Guide (included with these instructions) for recommended fit number. **BE SURE TO READ THE FIT TIPS THAT APPLY TO YOUR VEHICLE.**

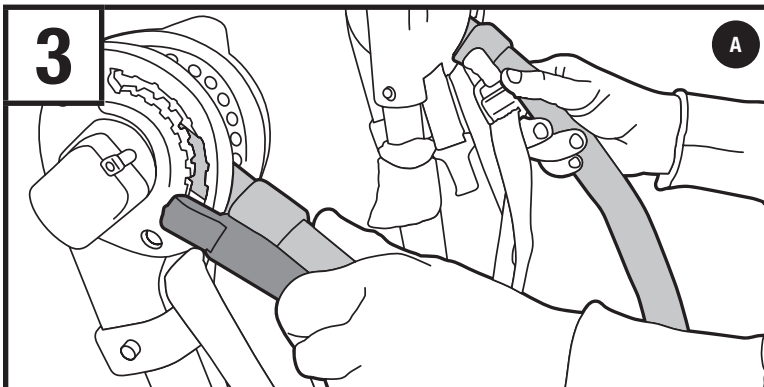

3


A

- Depress both angle adjusting levers simultaneously as shown.

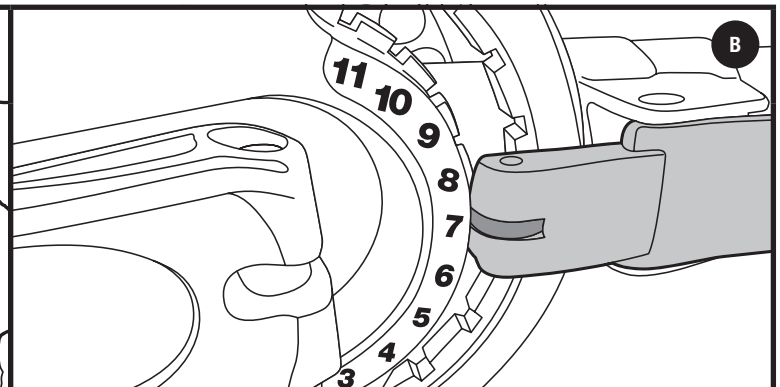


B


- With levers depressed, raise the trunk tube legs until the center of the lever top matches the number listed in the Fit Guide for your vehicle.

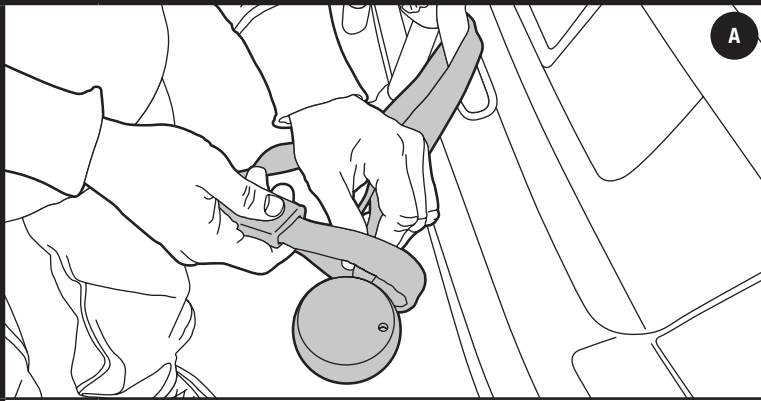

- Loop passive locking strap around bottom or top bumper tube leg. Thread hockey puck lock device through loop at other end and pull tight.

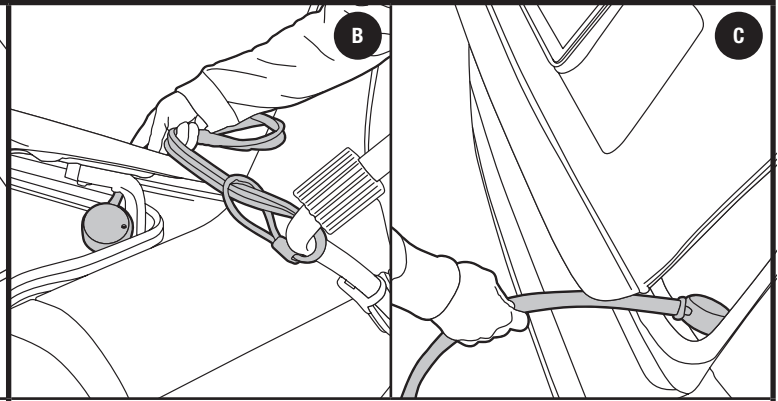


- Place hockey puck lock device inside trunk. You may place it through the bottom or top of the trunk. Push most of the excess strap inside the trunk before closing.

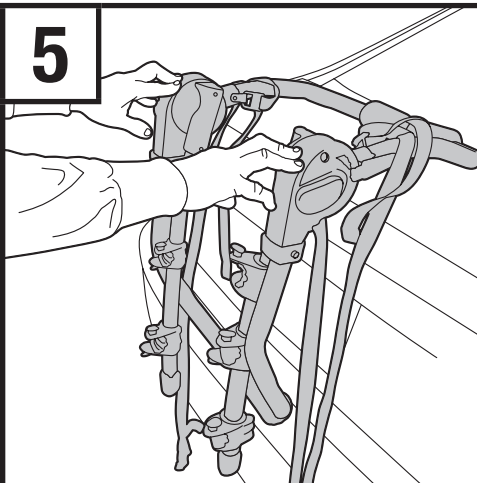

- Mount carrier to the back of vehicle. Refer to Fit Tips for specific placement instructions.


NOTE: Do not open your trunk/rear hatch with the rack installed, it may cause damage to your vehicle.

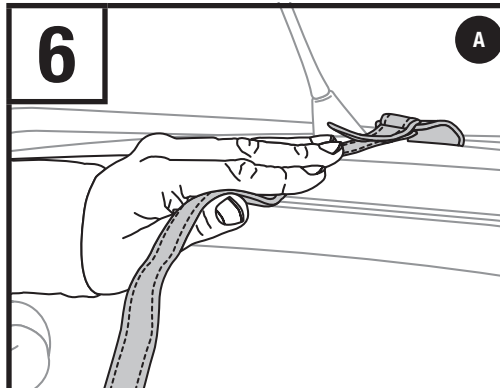

- Attach top strap according to the Fit Tips for your car.
Installez les sangles supérieures conformément aux Concoils de réglage s'appliquant à votre véhicule.
Sujete la correa superior de acuerdo a los puntos de encaje para su carro.

NOTE: If versa clip is required for proper mounting, go to step 17 before continuing.


- You may need to route straps in from the sides to get straps into their recommended place on the vehicle.

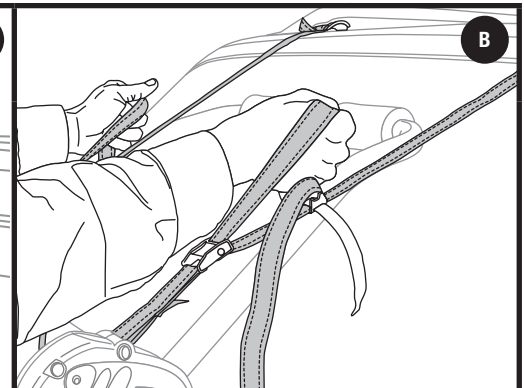

- Tighten top straps, by pulling on the loose end, so the carrier stays in position.


NOTE: Tighten straps only enough to hold rack in place without changing its position as instructed in the Fit Tips.

7

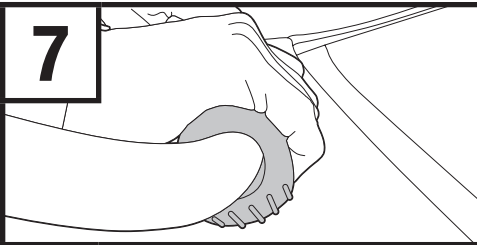


- Rotate all 4 foam pads so that the ribbed channels are flat against the vehicle surface.

8

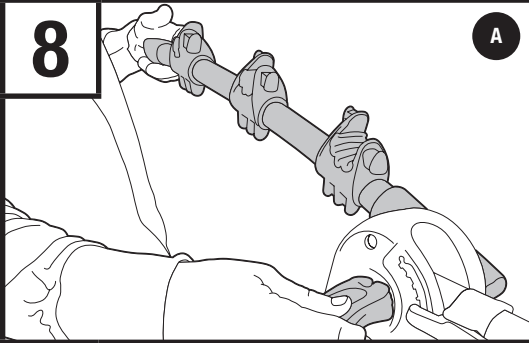

A


- Open one side's cinching lever to raise bike arm. You may have to spin cinching lever counter-clockwise to create gap between hub and bike arm engagement teeth. You may also push levers inward to create gap.

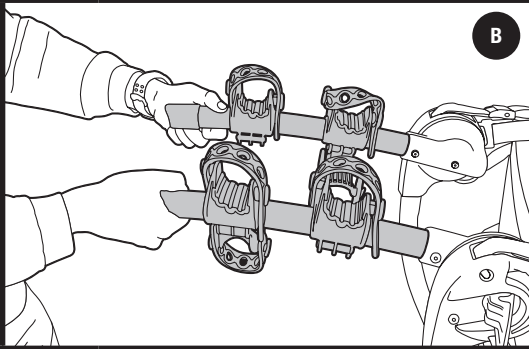

B


- One other hint to help raise or lower arms is to grab both ends of arms and push both toward middle to disengage teeth in hubs as shown. Arms should be level or pointing slightly skyward. Then spin lever clockwise to tighten.

9

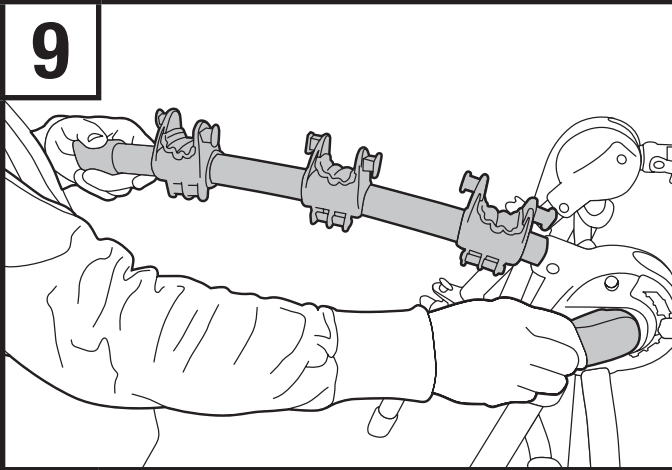

- Close lever so it rests in hub cut-out channel. Lever should snap shut. If there is still a noticeable gap between the hub and the bike arm hub, unstrap lever and tighten further clockwise before closing again. Repeat for other bike arm setting.


10

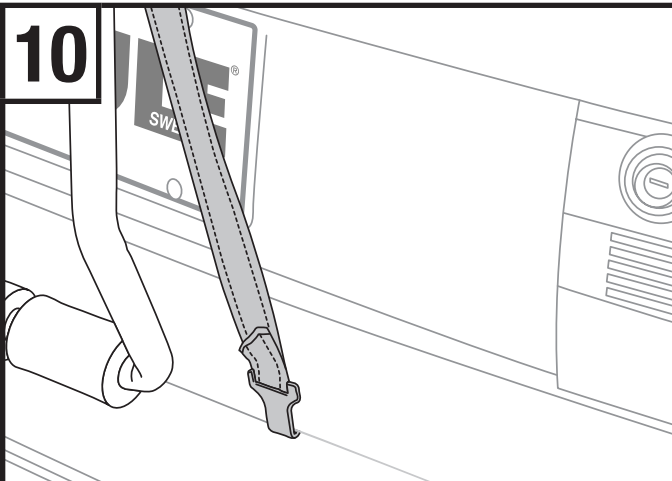

- Attach bottom straps (narrow, grey hooks) according to the Fit Tips for your car. Always make sure that straps are out of the way of hot exhaust gases and not in contact with the muffler or exhaust pipe.


- Be sure lower bumper legs are in correct position. It is recommended to rest the lower leg tube pads on the bumper.

11

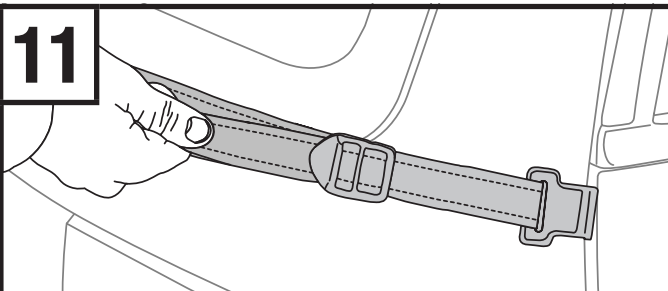


- Attach side straps to side seams of trunk, hatch, or door.

12

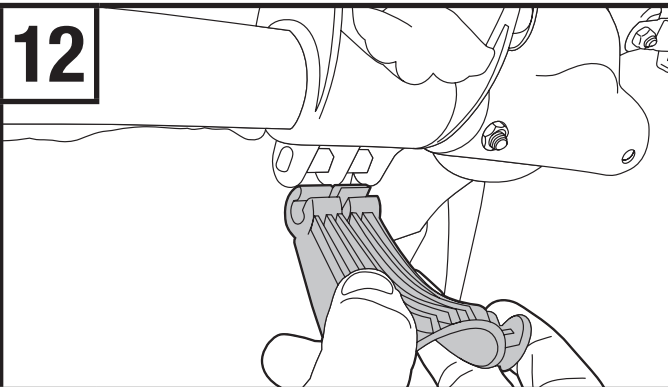


- Insert anti-sway cages onto cradle bottoms by aligning open end of "C" slot as shown. Smooth curved surface of cage should face outwards away from strap rack. Once it is attached, rotate cage to vertical position.

13

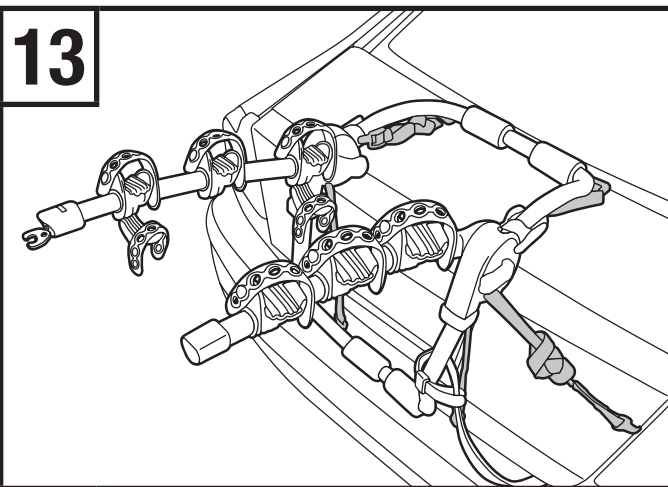


- Retighten all straps to ensure a snug fit to vehicle.
- Roll up loose strap ends and secure.

14

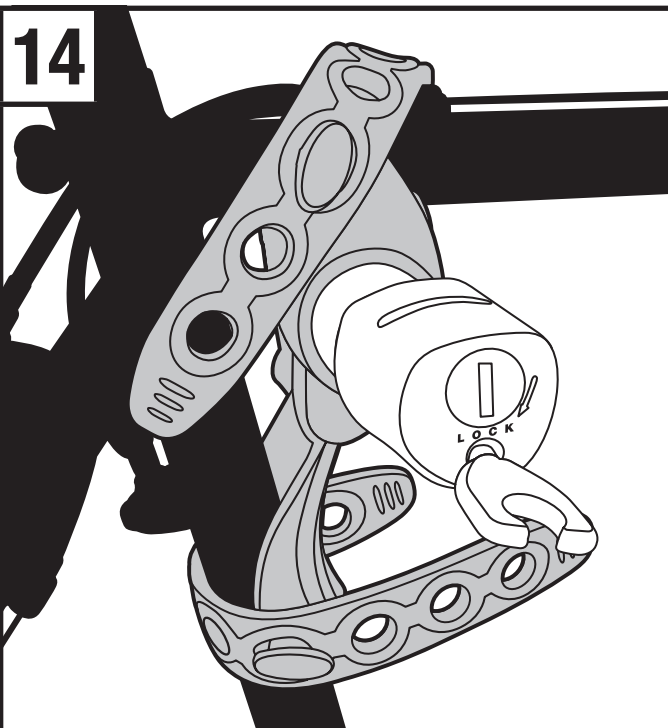

- Cradles can be either rotated or shifted on bars to accommodate different bike geometries.
- Alternate direction of bikes when loading.
- Ensure straps are tightened securely around bike.
- Place smooth curved surface of anti-sway cage against the bike's down tube and tighten strap around bike tube.

15

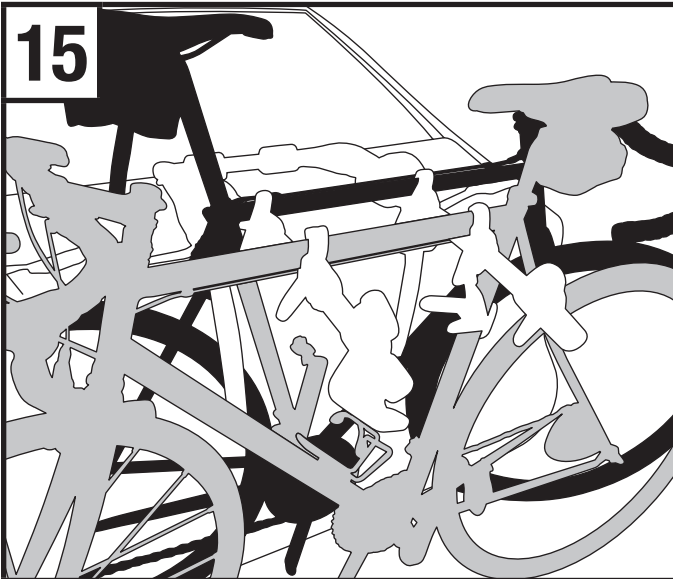



- Mount second and third bike in the opposite directions. Ensure cradle straps are tightened securely around each bike.

- Use the strap provided to secure the bikes to each other and to lower arms of rack.

brazos de la parrilla.

- After bikes are mounted re-check the tightness of all straps.


16

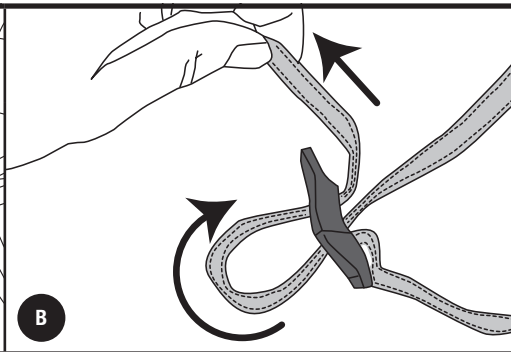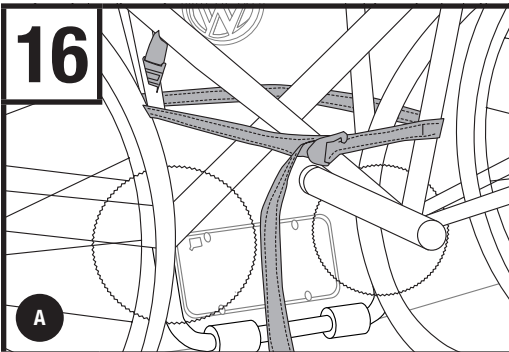


- Using blue load strap provided secure all bikes to the frame of the rack as illustrated.

17


VERSA CLIP USE

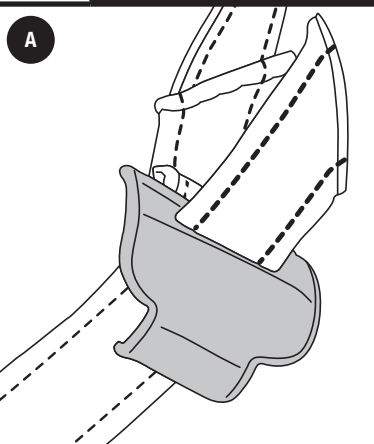


- Remove upper strap from carrier buckle. Thread loose end through slot in hook.

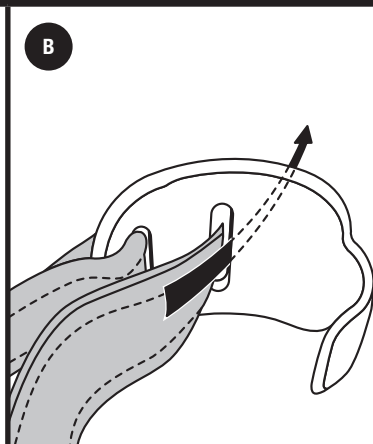

- Pull strap through.

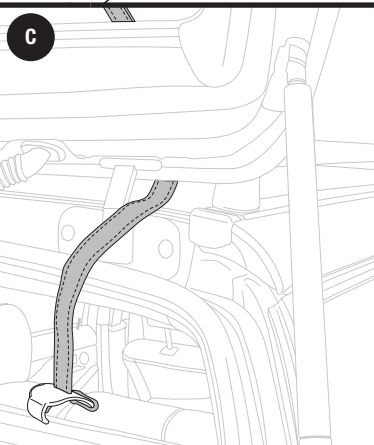


- Open hatch/trunk. Hang hook inside trunk or vehicle.

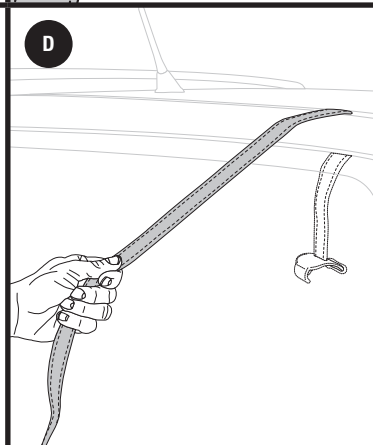

- Close hatch, pull strap tight and install carrier.

18

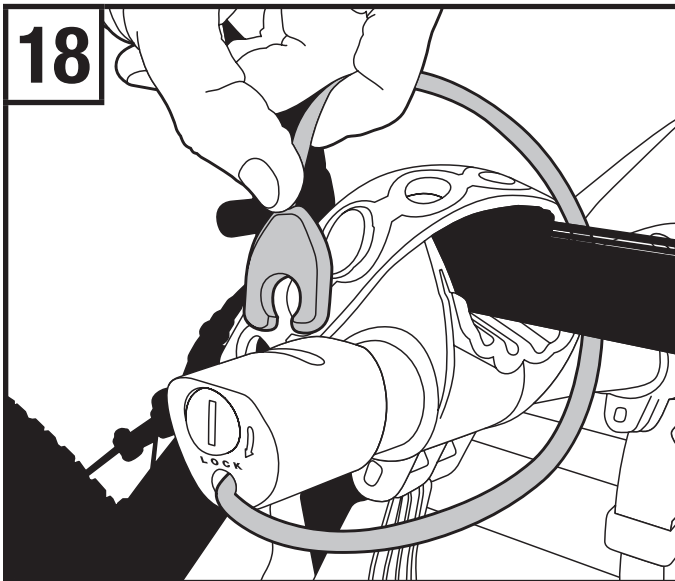


- To insert lock cylinder into bike arm end cap, first place change key into the cylinder. Then push cylinder into end cap hole and remove change key while holding cylinder in place.
- Pull out locking bike cable. Wrap cable around the bike top tube resting on the end cradles. Push locking claw into slot on top of end cap. Turn key to lock.

19


USING STRAP MANAGEMENT DEVICE

A

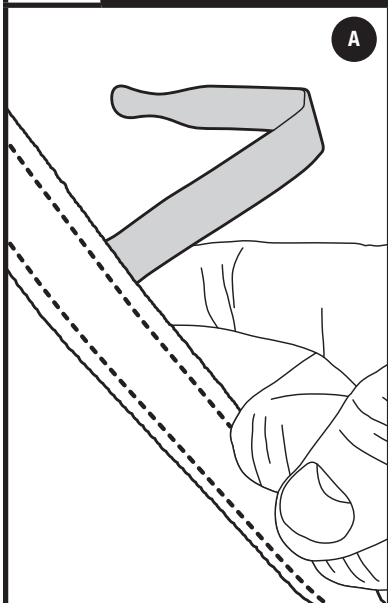


- Attach strap management device to any of 4 tight straps approximately three inches behind buckle.

B

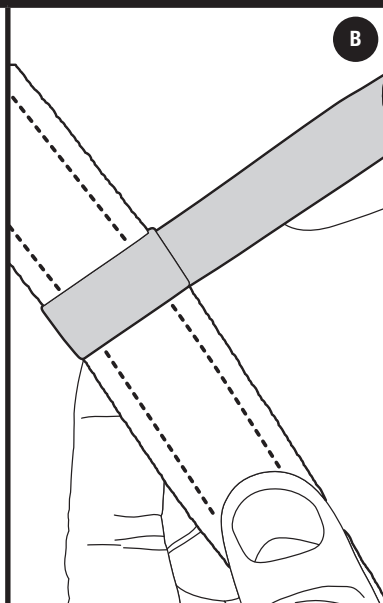


- Wrap strap management device once around tight strap fastening it onto itself.

20

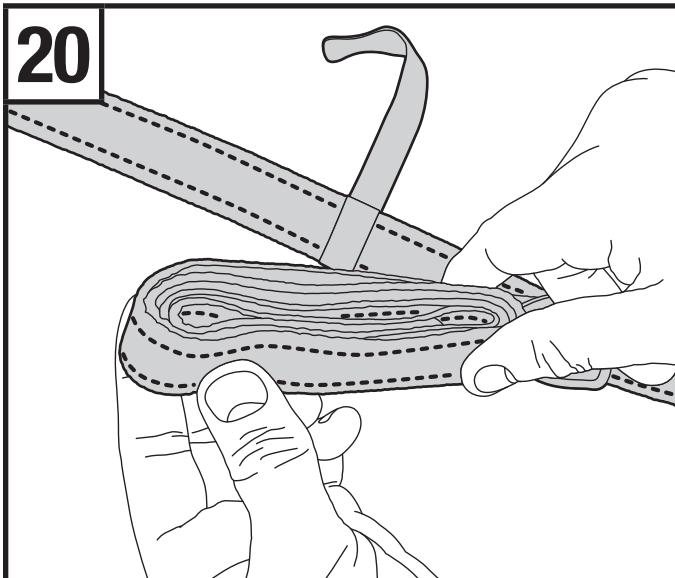

- Roll up excess strap into four-inch loops.

21

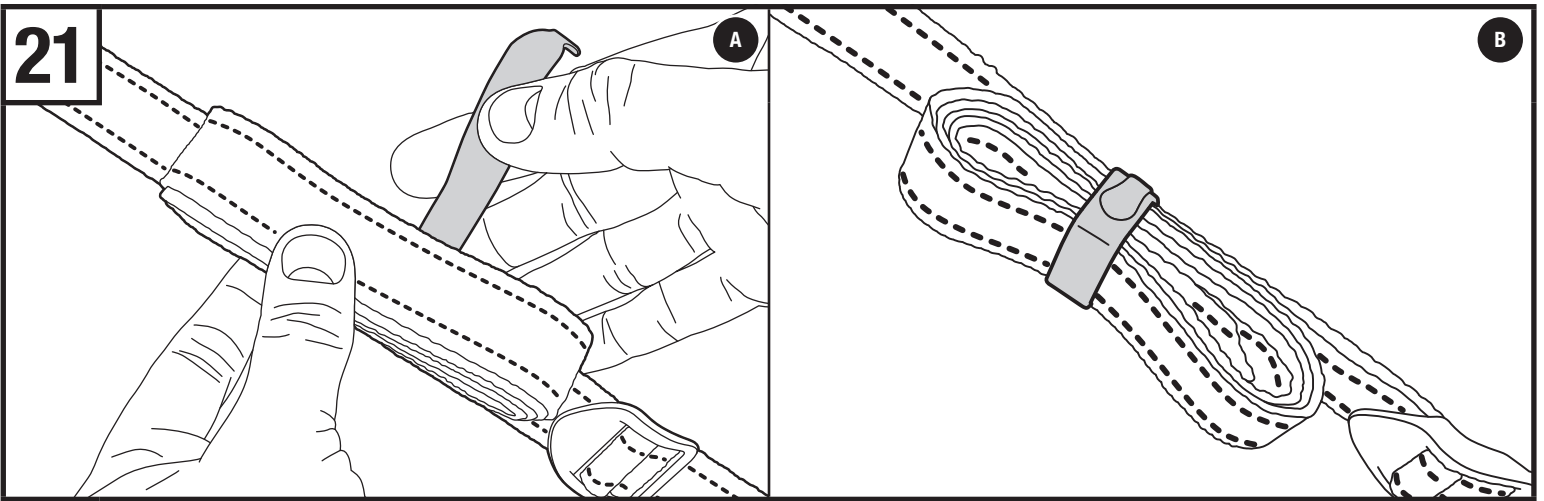

- Wrap strap management device once around excess strap loops and fasten onto itself.
- Repeat last three steps for other three strap management devices.

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	---------------------------	---------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

ACURA

CL 2DR	'01-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
	'96-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,104,125,128
CSX 4DR (Canada)	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
EL 4DR	'01-06	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
	'96-00	✓			6	✓		6	✓		6	✓		6	101,102
Integra 3DR	'94-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,125,128
	'90-93														135,136
Integra 4DR	'94-01	✓			5	✓		5	✓		5	✓		5	101,102,110,140
	'90-93														135,136
Legend 2DR	'91-95	✓			5	✓		5	✓		5	✓		5	101,102,140
	'87-90	✓			5	✓		5	✓		5	✓		5	101,102,140
Legend 4DR	'91-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102
	'86-90	✓			5	✓		5	✓		5	✓		5	101,103,125,140
MDX	'07-13														137
	'01-06	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,127,128
RDX	'13														133
	'07-12														133
RL 4DR	'05-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'96-04	✓			6	✓		6	✓		6	✓		6	101,110
RLX 4DR	'14														CHECK FOR UPDATE
RSX	'02-06	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
SLX	'96-99														
TL	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'09-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'95-98	✓			5	✓		5	✓		5	✓		5	101,102
TSX	'09-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TSX Sport Wagon	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Vigor	'91-95	✓			5	✓		5	✓		5	✓		5	101,102
ZDX	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
ZDX	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138

AUDI

80 & 90 Series	'93-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'88-92	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,104
100 & 200 Series	'92-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'89-91	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,131
A3 Sportback 5DR	'06-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
A4 4DR	'09-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'02-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'95-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
A4 Allroad	'13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'01-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A4 (Avant) Wagon	'09-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'02-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'97-01	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A4 Wagon	'97-01	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A5 2DR	'08-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	---------------------------	---------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

AUDI continued

A6 4DR	'12-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'05-11	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'95-97														133
A6 Wagon	'06-11	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'99-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'97-98														137
	'95-96	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102
A7 Sportback	'12-13														CHECK FOR UPDATE
A8	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'96-03														135
Q5	'09-13														134
Q7	'07-13														134
Quattro 2DR	'90-92														135
RS4 4DR	'09-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'04-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
RS7 Sportback	'12-13														CHECK FOR UPDATE
S4 4DR	'09-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'02-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'95-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
S4 Wagon	'01-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
S5 2DR	'08-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
S6 4DR	'12-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'05-11	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'95-97														133
S6 Wagon	'02-03	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
S7 Sportback	'12-13														CHECK FOR UPDATE
S8	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'01-03														135
TT	'07-13														133
	'00-06														133

BMW

1 Series 3DR	'08-13					✓		7	✓		7	✓		7	101,102,128
1 Series 3DR Convertible	'08-13					✓		7	✓		7	✓		7	101,102,128,156
3 Series 2DR	'06-13	✓			7	✓		7	✓		7	✓		7	101,102,128,
	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'92-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'76-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,109
3 Series 2DR Convertible	'06-13														NO FIT
	'00-05														NO FIT
	'92-99														NO FIT
	'76-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,109
3 Series 4DR	'12-13	✓			7	✓		7	✓		7	✓		7	101,102,128,
	'06-11	✓			7	✓		7	✓		7	✓		7	101,102,128,
	'99-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year

9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
---------------------------	---------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

CHEVROLET continued

Camaro	'93-02												134
	'82-92												134
Caprice 4DR	'91-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,105
Caprice Wagon	'91-96												134
Captiva	'11-13												134
Cavalier	'82-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,105
Cavalier 2DR	'95-04	✓			7	✓		7	✓		7	✓	101,142
Cavalier 4DR	'95-04	✓			7	✓		7	✓		7	✓	101,142
Cavalier Wagon	'88-94	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,105,127
Cavalier Z24	'82-94												134
Celebrity Wagon	'90-91	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,105,125,138
Celebrity	'88-91												135
Cobalt 2DR	'05-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
Cobalt 4DR	'05-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,110,128
Colorado	'04-13												153
Corsica 4DR	'87-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,105,127
Corsica Hatchback	'90-95												134
Corvette	'05-13												134
	'99-04												134
Cruze 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
Cruze Eco 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
Equinox	'10-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,112,121,138
	'05-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,112,121,138
EuroSport	'88-91												135
HHR	'06-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
Impala	'06-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'00-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,116,128,142
Lumina 2DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,108
Lumina 4DR	'90-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,108
Lumina APV Van	'90-96												134
Malibu	'13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,127,128
	'08-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,127,128
	'04-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'97-03	✓			6	✓		6	✓		6	✓	101,102,116,125,128,129,
Malibu Maxx Wagon	'04-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,128
Metro 3DR	'98-01	✓			8	✓		8	✓		8	✓	101,102
Metro 4DR	'98-01	✓			6	✓		6	✓		6	✓	101,102,140
Monte Carlo	'06-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'00-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,128
	'95-99												135
Orlando 5DR (Canada)	'12-13												CHECK FOR UPDATE
Prizm	'98-02	✓			7	✓		7	✓		7	✓	101,102,116,128
S-10 Blazer 2DR	'83-94												135
S-10 Blazer 4DR	'83-94												135
Sonic 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
Sonic 5DR	'12-13	✓	✓		8	✓	✓	9	✓	✓	9	✓	101,102,128
Spectrum 2DR	'85-88	✓			7	✓		7	✓		7	✓	101,102,138
Spectrum 4DR	'85-88	✓			6	✓		6	✓		6	✓	101,102
Suburban	'07-13												134
	'00-06	✓			10	✓		10	✓		10	✓	101,106,121,138

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2			9002 / 900XT RACEWAY 3			9003 / 9003XT RACEWAY PLATFORM			FIT DIAL SETTING			9009 / 9009XT ARCHWAY 2			9010 / 9010XT ARCHWAY 3			FIT DIAL SETTING			9006 / 9006XT GATEWAY 2			9007 / 9007XT GATEWAY 2			FIT DIAL SETTING			910XT PASSAGE 2			91XT PASSAGE 3 933 VENTURE			FIT DIAL SETTING		
	✓			✓			✓			✓			✓			✓			✓			✓			✓			✓			✓			✓			✓		

CHEVROLET continued

Suburban	'92-99	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			101,106,128
Tahoe	'07-13																																				134
	'00-06	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			101,106,121,138
Tahoe 2DR	'95-99	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			101,106,128
Tahoe 4DR	'95-99	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			101,106,128
Tracker	'99-04																																				
Trax (Canada)	'13	✓	✓	✓	8	✓	✓	✓	8	✓	✓	✓	8	✓	✓	✓	8	✓	✓	✓	8	✓	✓	✓	8	✓	✓	✓	8	✓	✓	✓	8	✓	✓	✓	101,102,121,128
TrailBlazer 4DR	'02-09																																				135,137
TrailBlazer EXT 4DR	'02-06																																				135,137
Traverse	'09-13	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	101,102,121,128
Uplander	'05-08	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	101,102,121,128
Venture	'97-04	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	101,106,121,138
Volt	'11-13	✓	✓		8	✓	✓		8	✓	✓		8	✓	✓		8	✓	✓		8	✓	✓		8	✓	✓		8	✓	✓		8	✓	✓		101,102,128

CHRYSLER

200 4DR	'11-13	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	101,102,128
300	'11-13	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	101,102,128
	'05-10	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	101,102,128
300M	'98-04	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	101,102,128
Aspen	'07-09	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	101,102,121,128
Cirrus	'95-00	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	101,106,125
Concorde	'98-04	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	101,102,128
	'93-97																																				133
Conquest	'85-89																																				134,135
Crossfire	'04-08																																				135
LeBaron Coupe	'85-89	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			101,105,138
LeBaron 4DR	'94-96	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			101,105
LHS	'98-02	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	6	✓	✓	✓	101,102,128
	'91-97																																				133
New Yorker	'91-96																																				133
New Yorker 5th Ave.	'91-93																																				133, 135
Pacifica	'04-08	✓			9	✓			9	✓			9	✓			9	✓			9	✓			9	✓			9	✓			9	✓			101,102,121,138
PT Cruiser	'01-10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	101,102,121,128,129
Sebring 2DR (Hardtop)	'01-06	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			101,102,116,128
	'95-00																																				133,135
Sebring 4DR	'07-10	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			101,102,116,128
	'01-06	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			6	✓			101,102,116,128
Town & Country	'11-13	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	101,102,121,128
	'08-10	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	11	✓	✓	✓	101,102,121,128
	'01-07	✓	✓		10	✓	✓		10	✓	✓		10	✓	✓		10	✓	✓		10	✓	✓		10	✓	✓		10	✓	✓		10	✓	✓		101,102,121
	'96-00	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			101,102,121,139
	'91-95	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			10	✓			101,102,121,139
Voyager / Grand Voyager	'01-03	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	10	✓	✓	✓	101,102,121

DODGE

Aries	'81-89																																				135
Avenger	'07-13	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	7	✓	✓	✓	101,102,128
	'95-00																																				133,135
Caliber	'07-12	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	9	✓	✓	✓	101,102,121,128
Caliber SRT4	'07-12																																				NO FIT - SPOILER

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

DODGE continued

Caliber SXT	'07-12													NO FIT - SPOILER	
Caravan / Grand Caravan	'11-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'08-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'96-00	✓			10	✓		10	✓		10	✓		10	101,102,121,139
	'90-95	✓			10	✓		10	✓		10	✓		10	101,102,121,139
Challenger	'09-13													NO FIT	
Charger	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Colt 2DR	'93-95													133	
	'84-92	✓			9	✓		9	✓		9	✓		9	101,102,140
Colt 4DR	'93-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Colt Hatchback	'90-92	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102
Colt Vista Wagon	'92-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,105,121
	'88-91	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121
Dart 4DR	'13													CHECK FOR UPDATE	
Daytona	'84-93	✓			6	✓		6	✓		6	✓		6	101,105,121,138
Durango	'11-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,125,128
	'04-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,125,128
	'98-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Dynasty	'88-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105
Intrepid	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
	'93-97	✓			6	✓		6	✓		6	✓		6	101,102
Journey	'13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'08-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Magnum	'05-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Neon 2DR	'95-99	✓			6	✓		6	✓		6	✓		6	101,102
Neon 4DR	'00-05	✓			7	✓		7	✓		7	✓		7	101,102
	'95-99	✓			6	✓		6	✓		6	✓		6	101,102
Nitro	'07-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Omni	'78-90	✓			7	✓		7	✓		7	✓		7	101,109,121
Shadow 2DR	'87-94													135	
Shadow 4DR	'87-94													135	
Spirit	'89-94	✓			6	✓		6	✓		6	✓		6	101,112
Stratus 2DR	'01-06	✓			6	✓		6	✓		6	✓		6	101,102,116,128
Stratus 4DR	'01-06	✓			6	✓		6	✓		6	✓		6	101,102,116,128
	'95-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,106,125

FIAT

500 3DR	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,138
500 Abarth 3DR	'12-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,138
500C 3DR Convertible	'12-13													NO FIT	
500L 5DR	'13													CHECK FOR UPDATE	

FORD

Aerostar	'85-97	✓			10	✓		10	✓		10	✓		10	101,102,128
Aspire 3DR	'95-97	✓			6	✓		6	✓		6	✓		6	101,102,138
Aspire 5DR	'95-97	✓			6	✓		6	✓		6	✓		6	101,102,138
C-Max	'13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Contour	'95-00	✓			6	✓		6	✓		6	✓		6	101,103,118

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 9002XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	---------------------------	----------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

FORD continued

Crown Victoria	'92-10	✓			6	✓		6	✓		6	✓		6	101,102
Crown Victoria, LTD	'88-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108
Edge	'11-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Edge Sport	'11-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Escape	'13														NO FIT
	'08-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Escort 3DR	'91-96	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,138
Escort 4DR	'97-02	✓			7	✓		7	✓		7	✓		7	101,103,116,125,128,
	'91-96	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,138
Escort Hatchback	'87-90	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,105,138
Escort Wagon	'91-99	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Escort GT 2DR	'88	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,103,125,138
Excursion	'00-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121
Expedition	'05-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
	'97-04	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
Expedition EL	'05-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
	'97-04	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
Explorer 2DR	'96-00	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,108,121,139
	'91-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Explorer 4DR	'11-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'02-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
	'96-01	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,108,121,138
	'91-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Explorer Sport	'01-03	✓			9	✓		9	✓		9	✓		9	101,108,121,139
Explorer Sport Trac	'01-10														153
Fiesta 4DR	'11-13	✓			7	✓		7	✓		7	✓		7	101,102,128
Fiesta 5DR	'11-13	✓			10	✓		10	✓		10	✓		10	101,102,128
Fiesta Sport 5DR	'12-13														NO FIT - SPOILER
Five Hundred	'05-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,116,128
Flex	'08-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Focus 2DR	'08-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Focus 3DR	'00-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Focus 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,116,125,126,128
	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,116,125,126,128
	'00-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103,116,125,126,128
Focus 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
	'02-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Focus Wagon	'00-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Freestar	'04-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,106,121,128
Freestyle	'05-07														137
Fusion	'13	✓			8	✓		8	✓		8	✓		8	101,102,128
	'06-12	✓			8	✓		8	✓		8	✓		8	101,102,116,128
Mustang	'05-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-04														135
	'95-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,112
Probe	'93-97														133
	'91-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,138



THULE 2013 REAR MOUNTED FIT GUIDE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING

FORD continued

Taurus 4DR	'13-14	✓			8	✓		8	✓		8	✓		8	101,102,116,128
	'10-12	✓			8	✓		8	✓		8	✓		8	101,102,116,128
	'08-09	✓			8	✓		8	✓		8	✓		8	101,102,116,128
	'96-07	✓			6	✓		6	✓		6	✓		6	101,106,126
	'92-95														135
	'86-91	✓			6	✓		6	✓		6	✓		6	101,103,138
Taurus Wagon	'96-06	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,106,121
	'86-95	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Taurus X	'08-09														137
Tempo 2DR	'84-94	✓			6	✓		6	✓		6	✓		6	101,108,138
Tempo 4DR	'84-94	✓			6	✓		6	✓		6	✓		6	101,108,138
Thunderbird	'02-05														135
	'89-97	✓			6	✓		6	✓		6	✓		6	101,103,138
	'86-87														135
Tracker	'89-97														
Transit Connect	'09-13														137
Windstar	'99-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'98														135
	'95-97														135
Vans (E-Series)	'79-13														NO FIT
ZX2	'98-03	✓			7	✓		7	✓		7	✓		7	101,103,116,125,128

GMC

Acadia	'07-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Canyon	'04-12														148
Denali	01-04	✓			10	✓		10	✓		10	✓		10	101,106,121,138
Denali XL	'00-04	✓			10	✓		10	✓		10	✓		10	101,106,121,138
Envoy	'98-01														137
Envoy/Denali 4DR	'02-09														135,137
Envoy XL	'02-06														135,137
Envoy XUV	'04-05														135,137
Jimmy 2DR	'95-01														134,135
Jimmy 4DR	'95-01														134,135
S-15 Jimmy	'92-94														134
S-15	'85-93														135
Safari Van	'90-05														137
Suburban	'92-99	✓			10	✓		10	✓		10	✓		10	101,106,128
Terrain	'10-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,112,121,138
Terrain Denali	'12-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,112,121,138
Yukon	'07-13														134
	'00-06	✓			10	✓		10	✓		10	✓		10	101,106,121,138
	'99	✓			10	✓		10	✓		10	✓		10	101,106,128
Yukon Denali	'07-13														134
Yukon XL	'07-13														134
	'00-06	✓			10	✓		10	✓		10	✓		10	101,106,121,138

HONDA

Accord 2DR	'13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,132
	'08-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'03-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,147



THULE 2013 REAR MOUNTED FIT GUIDE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

HONDA continued

Pilot	'09-13													133
	'03-08													133
Prelude	'97-01													135
	'92-96	✓			4	✓	4	✓		4	✓		4	101,102,138
	'88-91	✓			6	✓	6	✓		6	✓		6	101,103,125
	'83-87	✓	✓	✓	6	✓	✓	✓	✓	6	✓	✓	6	101,103,125
Ridgeline	'06-13													153
Ridgeline Sport	'12-13													153
S2000	'00-09													135

HUMMER

H1/Hummer	'93-08													NO FIT
-----------	--------	--	--	--	--	--	--	--	--	--	--	--	--	--------

HYUNDAI

Accent 3DR	'07-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'00-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'95-99	✓			7	✓		7	✓		7	✓		7	101,108,138
Accent 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'95-99	✓			6	✓		6	✓		6	✓		6	101,108,126,138
Accent 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Azera	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Elantra 2DR	'13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Elantra 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'07-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-00	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,126,128
	'92-98														133
Elantra 5DR	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
Elantra GT 5DR	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Elantra Touring	'09-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
	'01-05														134,137
	'97-00														134
Entourage	'07-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Equus	'11-13														CHECK FOR UPDATE
Excel 2DR	'90-94	✓			7	✓		7	✓		7	✓		7	101,108,138
Excel 4DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'86-89	✓			8	✓		8	✓		8	✓		8	101,102,121
Excel 5DR	'86-89	✓			8	✓		8	✓		8	✓		8	101,102,121,138
Genesis 2DR	'09-13														146
Genesis 4DR	'09-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Santa Fe	'13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'07-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'01-06	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Santa Fe Sport	'13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
S Coupe	'91-96	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Sonata	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

HYUNDAI continued

Sonata	'02-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-01	✓			7	✓		7	✓		7	✓		7	101,102,126,128
	'95-98	✓			6	✓		6	✓		6	✓		6	101,108,126,138
	'89-94														133
Tiburon	'02-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
	'97-01														133
Tuscon	'10-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,119,121
	'05-09	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Velostar 3DR	'12-13														137
Veracruz	'07-12														134
XG300/350	'01-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128

INFINITI

EX35	'08-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,151
EX37	'13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,151
FX35	'07-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,141
FX45	'03-08	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,141
FX50	'09-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,141
G20	'99-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
	'91-96	✓			6	✓		6	✓		6	✓		6	101,103,138
G25 4DR	'11-12	✓			7	✓		7	✓		7	✓		7	101,102,116,128
G35 2DR	'03-08					✓		7	✓		7	✓		7	101,102,138
G35 4DR	'07-08	✓			7	✓		7	✓		7	✓		7	101,102,116,128
	'03-06	✓			7	✓		7	✓		7	✓		7	101,102,116,128
G37 2DR	'09-12					✓		7	✓		7	✓		7	101,102,138
G37 4DR	'09-13	✓			7	✓		7	✓		7	✓		7	101,102,116,128
G37 Convertible	'09-12														NO FIT
I30	'00-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125,128
	'95-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110,128
I35	'02-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125,128
J30	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,126
JX	'12-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
M	'11-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
M30	'90-92														134
M35	'06-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
M45	'06-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,103,128
Q45	'03-04														135
	'02-07														133
	'97-01														133
QX4 w/o spare tire	'90-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
	'97-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
QX56	'11-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
	'04-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128

ISUZU

Amigo	'99-01														
Ascender	'03-10														135,137
Axiom	'02-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Hombre	'96-01														135
I-280/I-290	'06-09														153

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	
------------------------------	---------------------------	---------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------	--

KIA continued

Cadenza 4DR	'12-14													CHECK FOR UPDATE	
Carens	'07-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Credos	'98-99														135
Forte 2DR	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Forte 4DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Forte 5DR	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Optima 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Rio 4DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'06-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'01-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Rio5 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Rio Cinco Wagon	'06-11	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'02-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Rondo	'07-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sedona	'11-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121
	'06-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121
	'02-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Sephia	'98-01	✓			7	✓		7	✓		7	✓		7	101,102,128
	'94-97														135
Soul	'10-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sorento	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,125,128
	'03-09	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,125,128
Spectra 4DR	'07-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'04.5-06														137
	'00-04.5	✓			6	✓		6	✓		6	✓		6	101,102,128
Spectra5	'05-09														134
Sportage	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,119,121
	'05-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

LAND ROVER

Evoque Coupe 3DR	'12-13														CHECK FOR UPDATE
Evoque 5DR	'12-13														CHECK FOR UPDATE
LR2	'07-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
LR3	'05-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,128,147
LR4	'10-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,128,147
Range Rover	'13														137
	'03-12														137
	'87-02														137
Range Rover Sport	'13														137
	'03-12														137

LEXUS

CT200H 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
CT200H F Sport 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
ES250	'90-91														135
ES300	'02-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'97-01	✓			6	✓		6	✓		6	✓		6	101,103,125,126,138
	'92-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103



THULE 2013 REAR MOUNTED FIT GUIDE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	
------------------------------	---------------------------	---------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------	--

MITSUBISHI continued

Outlander	'07-13													134	
	'03-06													134	
Outlander Sport	'11-13													134	
Precis 2DR	'90-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108,138
RVR (Canada)	'11-13													134	
Starion	'85-89													134,135	

NISSAN

200SX	'95-98	✓			6	✓		6	✓		6	✓		6	101,102,138
240SX Coupe	'93-93														134
300ZX	'90-93	✓			6	✓		6	✓		6	✓		6	101,103,128
350Z	'03-09														133
370Z	'09-13														133
Altima 2DR	'13					✓		7	✓		7	✓		7	101,102,138
	'08-12					✓		7	✓		7	✓		7	101,102,138
Altima 4DR	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'07-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'02-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
	'98-01	✓			6	✓		6	✓		6	✓		6	101,102,139,140
	'93-97	✓			5	✓		5	✓		5	✓		5	101,102,140
Armada	'08-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
	'04-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
Cube	'09-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,119,121
GT-R	'08-12														NO FIT
Juke 5DR	'11-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Leaf 5DR	'11-13														CHECK FOR UPDATE
Maxima 4DR	'09-13	✓			7	✓		7	✓		7	✓		7	101,102,116,128
	'04-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'00-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125,128
	'95-99														135
	'87-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Maxima Wagon	'87-88	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Murano	'03-12	✓			10	✓		10	✓		10	✓		10	101,102,121,141
Murano CrossCabriolet	'11-12														NO FIT
NX 1600, 2000	'92-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,121
NV200 Van	'12-13														NO FIT
NV 1500 / 2500 / 3500 Van	'12-13														NO FIT
Pathfinder	'13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'05-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'96-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Pathfinder w/o Spare	'92-95	✓			10	✓		10	✓		10	✓		10	101,103,121,127,138
Pulsar	'87-88	✓			6	✓		6	✓		6	✓		6	101,105
Quest	'12-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'04-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'99-02	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'93-98	✓			10	✓		10	✓		10	✓		10	101,102,126,138
Rogue	'08-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,151
Sentra 2DR	'95-99	✓			6	✓		6	✓		6	✓		6	101,102,138
	'91-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138



THULE 2013 REAR MOUNTED FIT GUIDE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

NISSAN continued

Sentra 4DR	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'07-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'00-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
	'95-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'91-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'82-90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
Stanza 4DR	'91-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Versa 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'07-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Versa 5DR	'13														CHECK FOR UPDATE
Versa 5DR	'07-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Xterra	'05-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'00-04	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,121,125,128,130

OLDSMOBILE

98 Regency	'92-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,126,130
Achieva 4DR	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Alero 2DR	'99-04	✓			5	✓		5	✓		5	✓		5	101,126,128,142
Alero 4DR	'99-04	✓			5	✓		5	✓		5	✓		5	101,126,128,142
Aurora	'01-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'95-00														135
Bravada	'02-04														135,137
	'96-01														135,137,144
	'91-94														134
Custom Cruiser Wagon	'92-95														135
Cutlass	'97-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,142
Cutlass Ciera 4DR	'82-96														133
Cutlass Cruiser Wagon	'83-94														134
Cutlass Supreme 2DR	'88-96														135
Cutlass Supreme 4DR	'90-97	✓			6	✓		6	✓		6	✓		6	101,108
Delta 88 Royale	'92-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105
Intrigue 4DR	'97-02														135
LSS	'96-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,128
Silhouette	'97-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Silhouette	'90-96														137

PONTIAC

Aztec	'01-05	✓			10	✓		10	✓		10	✓		10	101,112,121,125,138
Bonneville	'00-05	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,138,142
	'94-99	✓			6	✓		6	✓		6	✓		6	101,110,116
	'86-93														135
Firebird	'79-02														134
G3 5DR	'08-10	✓			9	✓		9	✓		9	✓		9	101,128,147
G3 Wave 5DR (Canada)	'08-10	✓			9	✓		9	✓		9	✓		9	101,128,147
G5 2DR	'07-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
G5 4DR	'07-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,110,128
G6 Coupe	'06-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
G6 4DR	'05-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
G8 4DR	'08-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Grand Am 2DR	'99-05	✓			5	✓		5	✓		5	✓		5	101,126,128,142

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

PONTIAC continued

Grand Am 2DR	'92-98													135	
	'85-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109
Grand Am 4DR	'99-05	✓			5	✓		5	✓		5	✓		5	101,126,128,142
	'92-98														135
Grand Prix 2DR	'97-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'88-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108
Grand Prix 4DR	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'97-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'88-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108
GTO	'04-06														146
LeMans	'88-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
Montana	'99-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Montana SV6	'05-06	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Solstice	'06-09														137
Sunbird 2DR	'85-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110
Sunbird 4DR	'85-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110
Sunfire 2DR	'95-05	✓			7	✓		7	✓		7	✓		7	101,142
Sunfire 4DR	'95-05	✓			7	✓		7	✓		7	✓		7	101,142
Torrent	'06-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
Trans Sport	'97-98	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
	'90-96														137
Vibe	'03-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128

PORSCHE

Boxter	'96-13														135
Cayenne	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'03-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Cayman	'06-13														135
Panamera 4DR	'10-13														134

SAAB

9-2x	'05-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128
9-3 3DR	'99-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
9-3 4DR	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'03-05	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
9-3 Convertible	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'03-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-3 5DR	'99-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
9-3 Sport Combi	'06-12	✓			7	✓		7	✓		7	✓		7	101,102,121,141
9-3x	'10-12														134
9-4X	'10-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,129
9-5 4DR	'10-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-5 Wagon	'99-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
9-7x	'05-09														135,137
900 2DR	'69-93														135
900 3DR	'94-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
900 4DR	89-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103
900 5DR	'94-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
900 Convertible	'95	✓			6	✓		6	✓		6	✓		6	101,102,138

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

SAAB continued

9000 4DR	'86-98	✓			6	✓		6	✓		6	✓		6	101,102
9000 Hatchback	'86-98														134

SATURN

Astra 3DR	'08-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Astra 5DR	'08-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Aura	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Ion 2DR	'03-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Ion 4DR	'03-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LS 4DR	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LW Wagon	'00-04	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,121,128,142
Outlook	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Relay	'05-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
SC 2DR	'97-02														135
	'91-96														133
SC 3DR	'97-02														135
Sky	'07-10														146
SL 4DR	'96-02	✓			6	✓		6	✓		6	✓		6	101,108
	91-95	✓			6	✓		6	✓		6	✓		6	101,105
SW Wagon	'93-01	✓			8	✓		8	✓		8	✓		8	101,102,121,126
Vue	'08-10														134
	'02-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128

SCION

FR-S	'12-13														NO FIT
IQ	'12-13														CHECK FOR UPDATE
tC	'11-13														CHECK FOR UPDATE
	'04-10														134
xA	'04-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
xB	'08-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'04-07														135
xD	'08-13	✓			10	✓		10	✓		10	✓		10	101,102,116,121,128,

SMART

Fortwo	'08-13														135
--------	--------	--	--	--	--	--	--	--	--	--	--	--	--	--	-----

SUBARU

Baja	'03-07														146
Forester	'09-13														CHECK FOR UPDATE
	'03-08	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'98-02	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,128
Impreza 2DR	'95-01	✓			6	✓		6	✓		6	✓		6	101,111
Impreza 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'02-07	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
	'93-01	✓			5	✓		5	✓		5	✓		5	101,102,139
Impreza WRX / WRX STI 4DR (w/o Spoiler)	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'02-07	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
	'93-01	✓			5	✓		5	✓		5	✓		5	101,102,139



THULE 2013 REAR MOUNTED FIT GUIDE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year

9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
---------------------------	---------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

SUBARU continued

Impreza 5DR	'12-13	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'08-11	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'02-07	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'93-99	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,128,	
Impreza Sport 5DR	'12-13	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128	
	Impreza WRX / WRX STI 5DR (w/o Spoiler)	'12-13	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128
		'08-11	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128
		'02-07	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128
'93-99	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,128,		
Justy	'87-94	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,121	
Legacy 4DR	'10-13	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,128	
	'05-09	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,128,147	
	'00-04	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,128,129	
	'95-99	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103,138	
	'90-94	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103	
Legacy Wagon (Canada)	'09-12	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,128	
Legacy Wagon	'05-07	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,128	
	'00-04	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,128	
	'89-94	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,138	
Legacy/Outback Wagon	'95-99	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,138	
Loyale 2DR	'90-92	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103	
Loyale 4DR	'90-92	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,103	
Loyale Wagon	'90-94	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,138	
Outback 4DR	'05-07	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,128,147	
	'00-04	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,128,129	
Outback Sport	'02-11	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'00-01	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,128,	
Outback Wagon	'10-13	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,138	
	'05-09												135	
	'00-04	✓	✓	✓	9	✓	✓	✓	9	✓	✓	9	101,102,121,128	
SUS 4DR	'98-99												136	
SVX	'92-97												135	
Tribeca	'06-13	✓	✓	✓	10	✓	✓	✓	10	✓	✓	10	101,102,121,128	
XV Crosstrek (w/o Spoiler)	'13	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,121,127,128	

SUZUKI

Aerio 4DR	'02-07												101,102,128
Aerio SX 5DR	'02-06												134
Esteem 4DR	'95-02	✓			6	✓			6	✓		6	101,102,138
Esteem Wagon	'98-02	✓			9	✓			9	✓		9	101,102,121,128
Forenza 4DR	'05-08												135
Forenza Wagon	'05-08	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,128
Grand Vitara	'06-13												
Kizashi 4DR	'10-13	✓	✓	✓	7	✓	✓	✓	7	✓	✓	7	101,102,128
Reno	'05-08	✓	✓	✓	8	✓	✓	✓	8	✓	✓	8	101,102,128
Swift 2DR	'91-94	✓			5	✓			5	✓		5	101,102,138
Swift 3DR	'95-01	✓			8	✓			8	✓		8	101,102
Swift 4DR	'91-94	✓			5	✓			5	✓		5	101,102,138
SX4 4DR	'07-13	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,102,128
SX4 Sport 4DR	'07-13	✓	✓	✓	6	✓	✓	✓	6	✓	✓	6	101,102,128

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

TOYOTA continued

Prius 5DR	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
	'04-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
Prius C 5DR	'12-13	✓			8	✓		8	✓		8	✓		8	101,102,121,128
Prius V 5DR Wagon	'12-13	✓			9	✓		9	✓		9	✓		9	101,102,121,138
RAV 4	'13														NO FIT - SPOILER
Sequoia	'08-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,127,138
	'01-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,127,138
Sienna	'11-13														NO FIT - SPOILER
	'10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'04-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'98-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Solara	'04-08	✓			7	✓		7	✓		7	✓		7	101,102,128
	'99-03	✓			5	✓		5	✓		5	✓		5	101,102,128
Supra	'84-92														135
Tercel 2DR	'91-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
	'90	✓			8	✓		8	✓		8	✓		8	101,103
Tercel 4DR	'91-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
Tercel Wagon	'80-88	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,139
Vans	'84-90	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,138
Venza	'09-13	✓			9	✓		9	✓		9	✓		9	101,102,121,138
Yaris 3DR (Hatchback)	'12-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'07-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Yaris 4DR (Sedan)	'07-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
Yaris 5DR (Hatchback)	'12-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'07-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

VOLKSWAGEN

Beetle	'12-14	✓			6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128,155
	'98-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Beetle Convertible	'03-10														135
Beetle Turbo	'12-14	✓			5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,128,155
Cabriolet	'84-98														137
Corrado	'90-94	✓			6	✓		6	✓		6	✓		6	101,112,121,125,138
Eos	'07-13														137
Eurovan	'92-03														133
Fox	'87-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
GLI	'08-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Golf (Type VI) 3DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf (Type V) 3DR	'06-09	see "Volkswagen Rabbit 3DR, 06-09"													
Golf (Type IV) 3DR	'99-05	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf (Type III) 3DR	'93-99	✓			8	✓		8	✓		8	✓		8	101,102,138
Golf (Type VI) 5DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf (Type V) 5DR	'06-09	see "Volkswagen Rabbit 5DR, 06-09"													
Golf (Type IV) 5DR	'99-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf (Type III) 5DR	'93-99	✓			8	✓		8	✓		8	✓		8	101,102,138
Golf	'85-92	✓			7	✓		7	✓		7	✓		7	101,102,121,138
Golf City 5DR (Canada)	'08-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf R 3DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf R 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Golf Wagon (Canada)	'10-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	91XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
------------------------------	---------------------------	---------------------------	-----------------------------------	------------------	----------------------------	----------------------------	------------------	----------------------------	----------------------------	------------------	--------------------	-------------------------------	------------------

VOLKSWAGEN continued

GTI (Type VI) 3DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
GTI (Type V) 3DR	'06-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
GTI (Type VI) 5DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
GTI (Type V) 5DR	'06-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
GTI (Type IV) 3DR	'99-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
GTI (Type III) 3DR	'93-99	✓			8	✓		8	✓		8	✓		8	101,102,138
GTI 3DR	'89-92	✓			7	✓		7	✓		7	✓		7	101,102,121,138
Jetta (Type VI)	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Jetta (Type V)	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Jetta (Type IV) 4DR	'99-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Jetta (Type III) 4DR	'93-99	✓			6	✓		6	✓		6	✓		6	101,102,138
Jetta	'85-92	✓			6	✓		6	✓		6	✓		6	101,103,140
Jetta SportWagen / Clean Diesel TDI	'09-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Jetta Wagon	'01-08	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Passat 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'98-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'92-97														133
	'90-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,103,138
Passat CC	'09-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
Passat Wagon	'90-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Phaeton	'04-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,112,128
Rabbit 3DR	'06-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Rabbit 5DR	'06-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Routan	'11-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'09-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Scirocco	'87-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,121,138
Tiguan	'12-13														137
	'08-11														137
Touareg	'08-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'04-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Vanagon Van (T3)	80-02	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,123

VOLVO

240/260 4DR	'79-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
240/260 Wagon	'79-93	✓			10	✓		10	✓		10	✓		10	101,102,121,130
740/760 4DR	'90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
	'84-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109
740/760/940/960 Wagon	'84-97	✓			10	✓		10	✓		10	✓		10	101,102,121,130
740/960 4DR	'91-97	✓			6	✓		6	✓		6	✓		6	101,102,138
850 4DR	'93-97	✓			6	✓		6	✓		6	✓		6	101,102,138
850 Wagon	'94-97														137
C30	'08-13														137
C70 Convertible	'06-13														137
	'98-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110,128
S40	'05-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108,128
S60	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'01-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
S70	'98-00	✓			6	✓		6	✓		6	✓		6	101,102,138

THULE 2013 REAR MOUNTED FIT GUIDE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule

Vehicle make, model and year	9001 / 900XT RACEWAY 2	9002 / 900XT RACEWAY 3	9003 / 9003XT RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 2	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

VOLVO continued

S80	'07-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
S90	'98-00	✓			6	✓		6	✓		6	✓		6	101,102,138
V40	'00-04	✓	✓	✓	11	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
V50	'05-11	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
V70	'98-10	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
V70 XC	'01-10	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
V90	'98-00	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
XC60	'09-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
XC70	'01-13	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
XC90	'03-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128

- 101 Place top clips in the gap at the front edge of the top of the trunk, hatch or door.
- 102 Place lower clips in the bottom edge of trunk or hatch.
- 103 Set lower clips/hooks into vehicle's left and right tow loops under the rear of the vehicle.
- 104 Set lower clips/hooks into tow loop on the right and frame hole on the left.
- 105 Set lower clips into bottom edge of internal metal bumper.
- 106 Set lower clips/hooks into frame holes.
- 107 Set lower clips into bottom edge of rear doors.
- 108 Set lower clips into frame holes in back of bumper.
- 109 Set lower clips onto bottom edge of bumper.
- 110 Set lower clip/hook onto edge of structural bumper located behind plastic bumper.
- 111 Frame holes are located up high on the backside of bumper.
- 112 Set lower clip/hooks into frame holes in chassis behind bumper.
- 114 Chafe guards required.
- 115 To minimize contact between carrier tow hooks and the bumper, slide the strap through only one end of the chafe guard leaving the other end free to rest between the tow hook and the bumper.
- 116 Bumper cover may deform with the use of this carrier. Remove carrier when not in use.
- 117 The upper arm of carrier, between rubber pads, may contact the center ridge in the trunk lid when carrier is fully mounted.
- 118 Lower arm of the carrier will mount against the license plate and the lights to the left and right of it.
- 119 Lower arm of the carrier will mount on the ridge on the bottom of the rear door, just above the bottom edge of the rear door.
- 121 Caution: Rear wiper can not be used when carrier is mounted.
- 122 Offset carrier to the right.
- 123 Lower arm of the carrier will mount higher on the rear door, so that the upper arm rests against the metal above the rear window.
- 124 Rear wiper must be positioned through the upper arm of carrier.
- 125 Always check to make sure there is no contact between the lower straps and the muffler and/or exhaust pipe.
- 126 Caution: The trunk lid may deform slightly with the use of this carrier. Remove carrier when not in use.
- 127 Route top strap under the spoiler on top of the hatch.
- 128 Lower arm of carrier should be positioned on upper tier of bumper.
- 129 Rubber weather stripping at top door/hatch will deform over time. Remove carrier when not in use.
- 130 Set lower clips/hooks into frame holes in bumper located by the right and left bumper strut.
- 131 Set lower clips/hooks into tow loop on the right and edge of bumper, by the bumper strut, on the left.
- 132 Thule cannot recommend the use of 3-bike carriers on this vehicle.
- 133 Carrier is not recommended because lower straps can not be mounted in a safe place.
- 134 Carrier is not recommended because top straps should not be mounted directly to glass or plastic trim covering glass.
- 135 Carrier is not recommended because vehicle is unable to support carrier weight.
- 136 Carrier is not recommended because upper arm of carrier could damage trunk lid.
- 137 Carrier is not recommended because top straps can not be mounted in a safe place.
- 138 Lower arm of carrier will rest in the bottom of the license plate well.
- 139 Lower arm of carrier will rest above license plate well.
- 140 Lower arm of carrier will rest at bottom of trunk lip.
- 141 Lower arm of carrier will rest in the area between the license plate well and upper tier of the bumper.
- 142 Set lower clips/hooks on top edge of the metal bumper struts.
- 143 When installing a Freeway or Speedway rack the use of a versa clip is required.
- 144 Vehicle can have an externally mounted spare tire prohibiting the use of any strap rack.
- 145 Set lower clips/hooks into tow loop on the left and frame hole on the right.
- 146 Carrier is not recommended because it cannot be installed without unwanted contact.
- 147 Set lower clips/hooks in tow loop located in the center of the vehicle behind the bumper.
- 148 Please verify vehicle cargo area will accept bicycle wheelbase prior to purchase.
- 149 Due to a factory incorporated "tire hanger" on some models, the 963 "Spare Me" cannot be used on this vehicle. Please check your vehicle's configuration before buying this product.
- 150 Only the "963XT, 963XTR, and 963PRO" can be used with this vehicle, due to mounting limitations on the original "963 Spare Me". If you have the "963 Spare Me" and would like to fit one of these vehicles - you need part # 753-3532.
- 151 If this vehicle has a spoiler installed, it is a "NO FIT"
- 152 If this vehicle has a spare tire mounted back-up camera, the 963XT will not fit.
- 153 Truck bed is not long enough to carry bikes using the 501 Insta-Gater.
- 154 All instances of this vehicle come with a factory spoiler which is not strong enough to take the weight of our strap carriers.
- 155 Place side clips in the bottom edge of trunk or hatch next to the lower clips
- 156 Do not operate convertible roof while rack is in place.