



PARTS INCLUDED

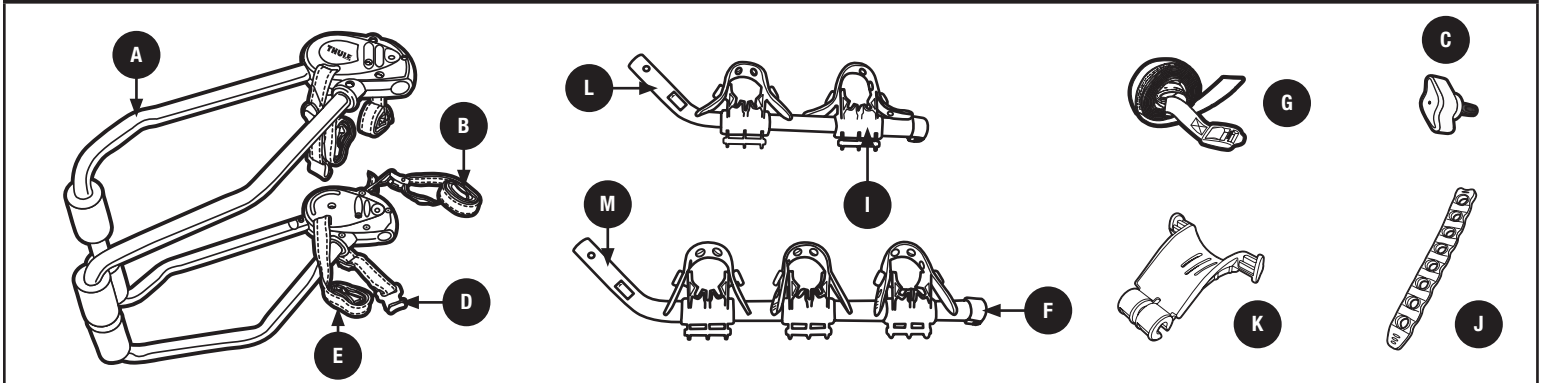


part	description	part number	910XT qty.	911XT qty.
A	910XT/911XT 2 or 3 bike carrier /	-----	1	1
B	top strap assembly /	753-2184	2	2
C	2 wing adjustment knob /	753-3095	2	2
D	slide hook assembly w/ buckle /	753-2877	2	2
E	bottom strap (narrow) w/ buckle /	753-0035-07	2	2
F	end cap /	853-2181	2	2
G	tie down strap /	753-1492	1	1
H	screw /	853-5753	2	2
I	stay-put cradle /	853-7887	4	6
J	ripple strap /	852-3006-001	6	9
K	anti sway cage /	852-2903-001	2	3
L	910XT complete bike arms /	752-1096-001	2	-
M	911XT complete bike arms /	752-1097-001	-	2

WARNINGS / LIMITATIONS •


- Number of bicycles carried should not exceed designated carrying capacity for your specific Passage model.
- 910XT (2 bike) max carrying capacity = 70lbs.
- 911XT (3 bike) max carrying capacity = 105lbs.
- Check tightness of all bolts and knobs periodically.
- Check straps for wear and replace if worn.
- Not intended for off-road use.
- Not intended for tandems or recumbents.
- Do not install on a trailer or other towed vehicle.
- Failure to use blue safety strap may result in loss of bicycles.

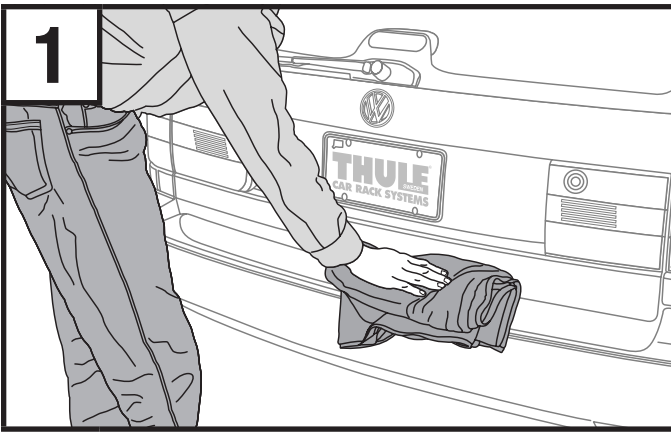


- Clean trunk/hatch and rear of car.

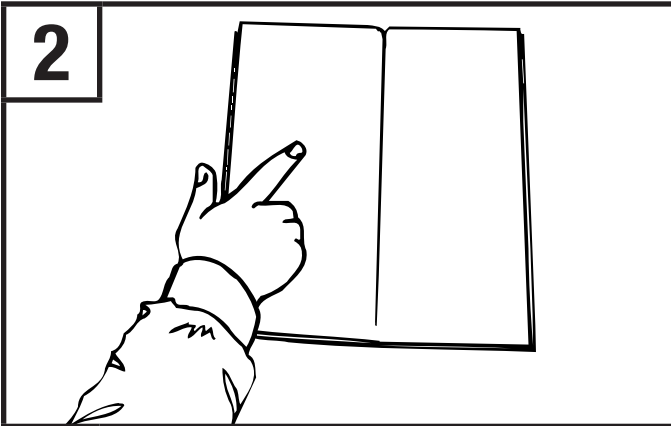


- Look up your vehicle in the Fit Guide (included with these instructions) for recommended fit number. **BE SURE TO READ THE FIT TIPS THAT APPLY TO YOUR VEHICLE.**

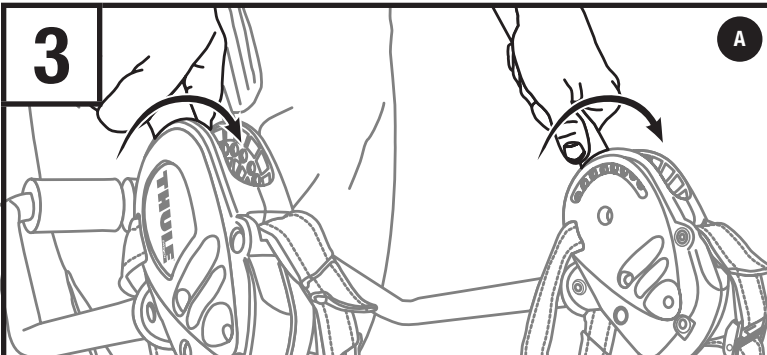

- Remove both 2 Wing Adjustment Knobs and adjust to correct fit numbers.

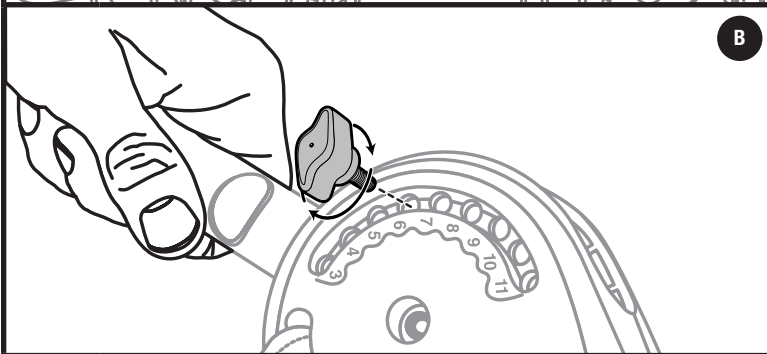


- Insert both 2 Wing Adjustment Knobs and tighten until knobs are fully seated against fit dial. Be careful not to cross thread.

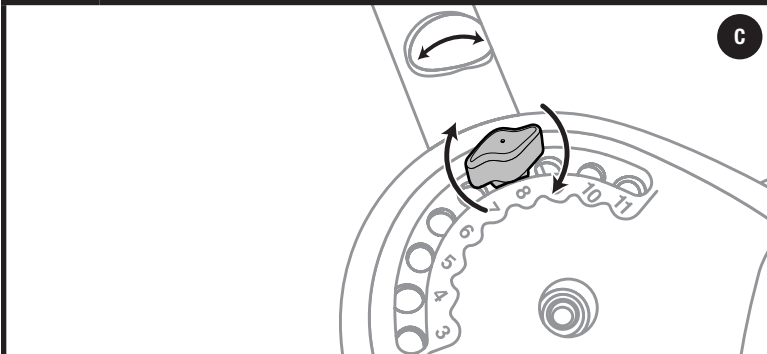


- Check 2 Wing Adjustment Knobs periodically during use and retighten if needed.

4

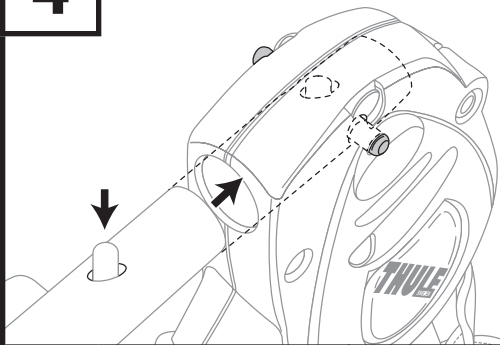


A

- With buttons squeezed in, firmly slide carrier arms into the hub.

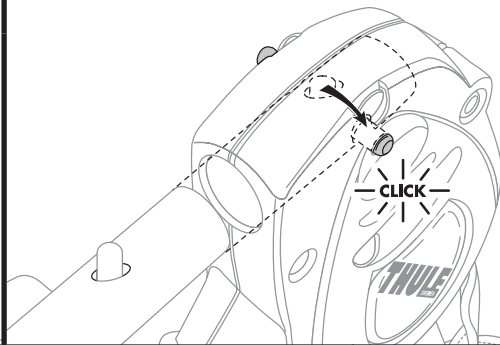

B


- Rotate arm until button engages in the hub.

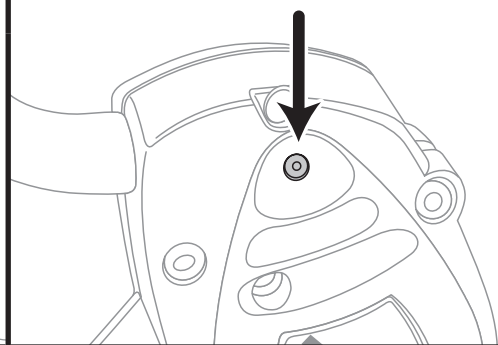

C


- Ensure that buttons are visibly engaged in the hub when finished.

5

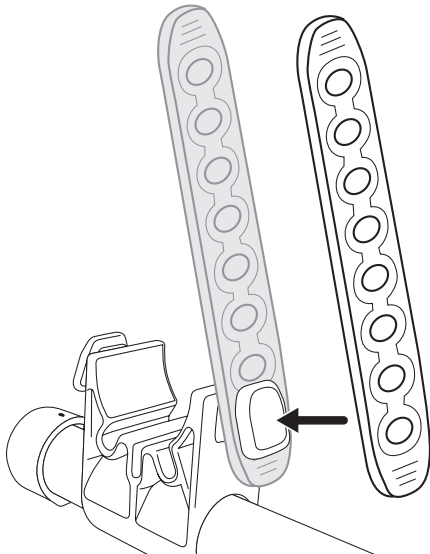

- Install cradle strap as illustrated.

6

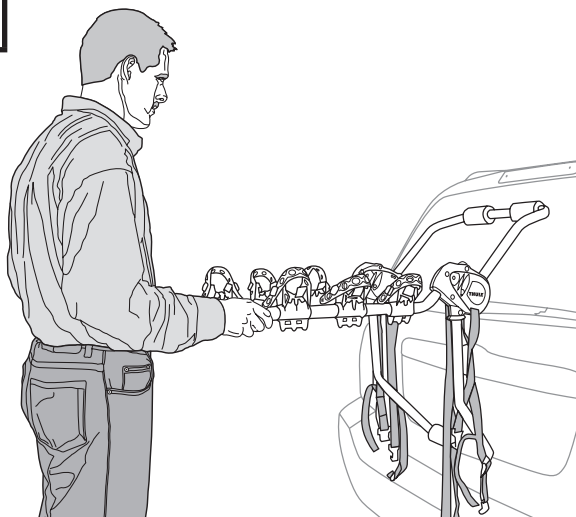


- Mount carrier to the back of vehicle. Refer to Fit Tips for specific placement instructions.

NOTE: Arms should be level or pointing slightly upward.

7


A

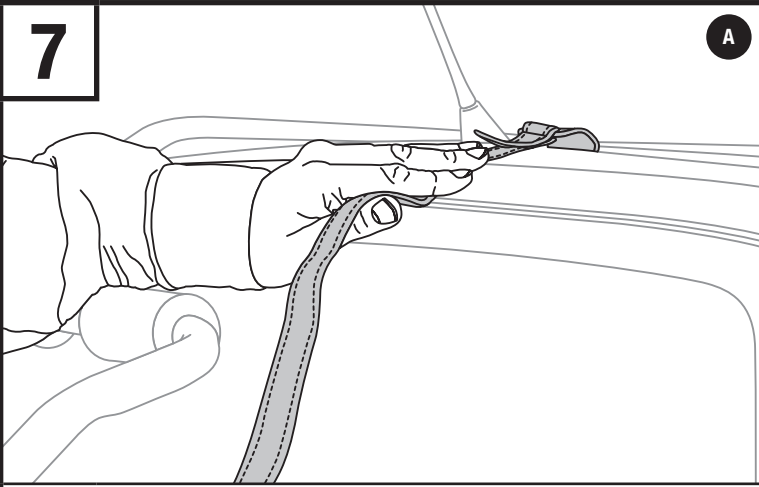

- Attach top strap according to the Fit Tips for your car.

NOTE: If versa clip is required for proper mounting, go to step 15 before continuing.


B

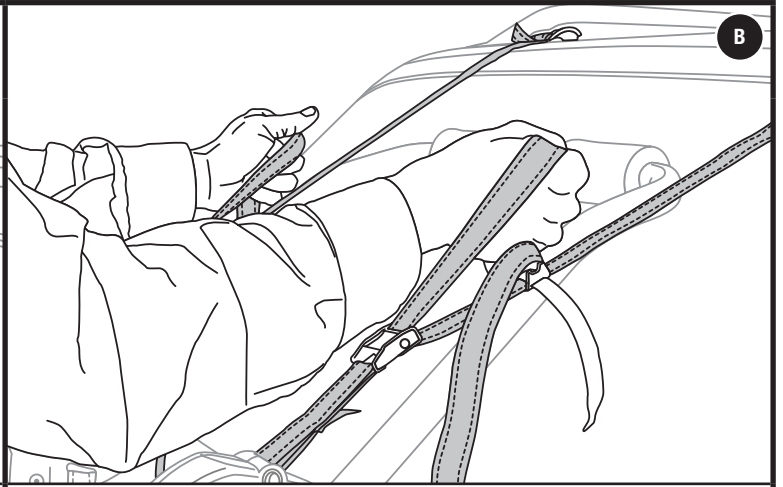

- Tighten top straps, by pulling on the loose end, so the carrier stays in position.

NOTE: Tighten straps only enough to hold rack in place without changing its position as instructed in the fit tips.


8

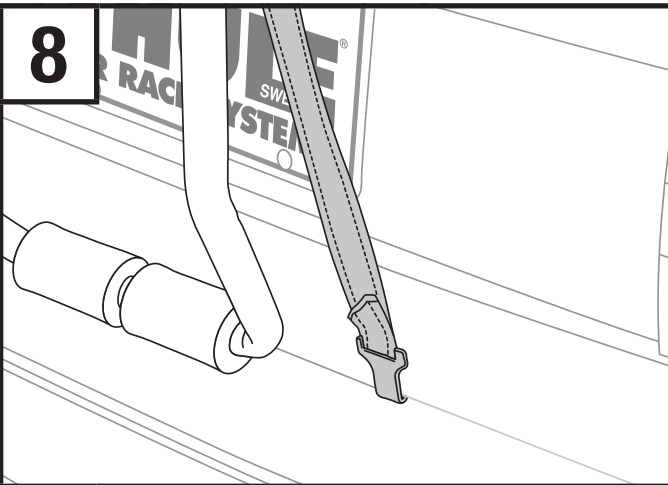

- Attach bottom straps (narrow, grey hooks) according to the Fit Tips for your car. Always make sure that straps are out of the way of hot exhaust gases and not in contact with the muffler or exhaust pipe.


- Be sure lower arm is in correct position.

9

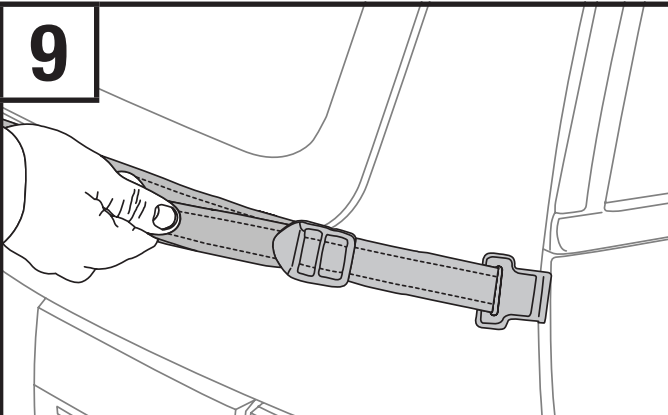

- Attach side straps to side seams of trunk, hatch, or door.


10

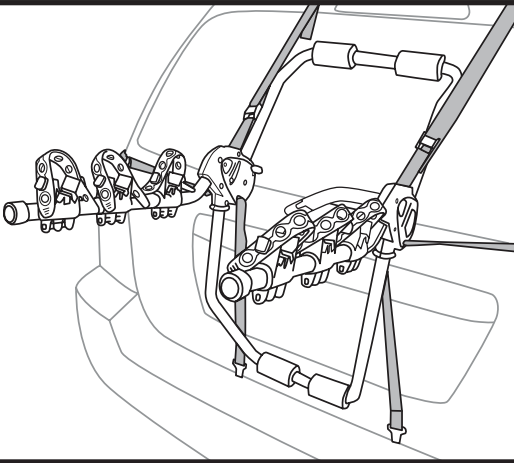

- Retighten all straps to ensure a snug fit to vehicle.
- Roll up loose strap ends and secure.


11

LOADING/SECURING BIKES

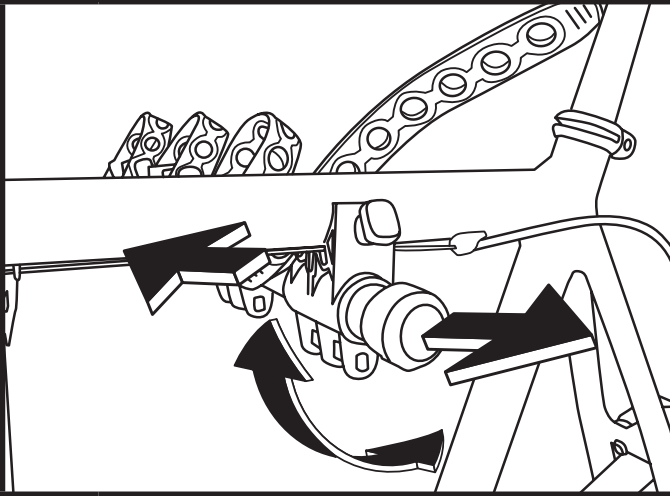

- Load heaviest bike first onto inner most cradle.
- Cradles can be either rotated or shifted on bars to accommodate different bike geometries.
- Alternate direction of bikes when loading.

12

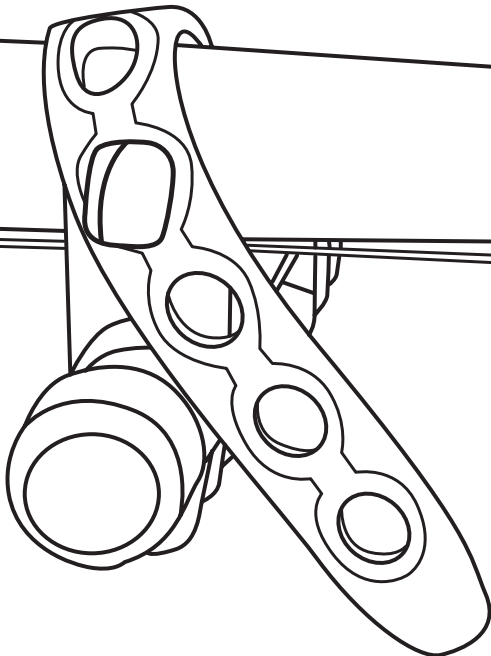


- Ensure straps are tightened securely around bike frame.
- Ensure adequate ground clearance for bicycle wheels.
- Position bicycles on rack in order to prevent bike to car contact.

NOTE: Cradles can be either rotated or shifted on bars to accommodate different bike geometries.

NOTE: Alternate direction of bikes when loading.


13

ATTACHING STAY-PUT ANTI-SWAY CAGES

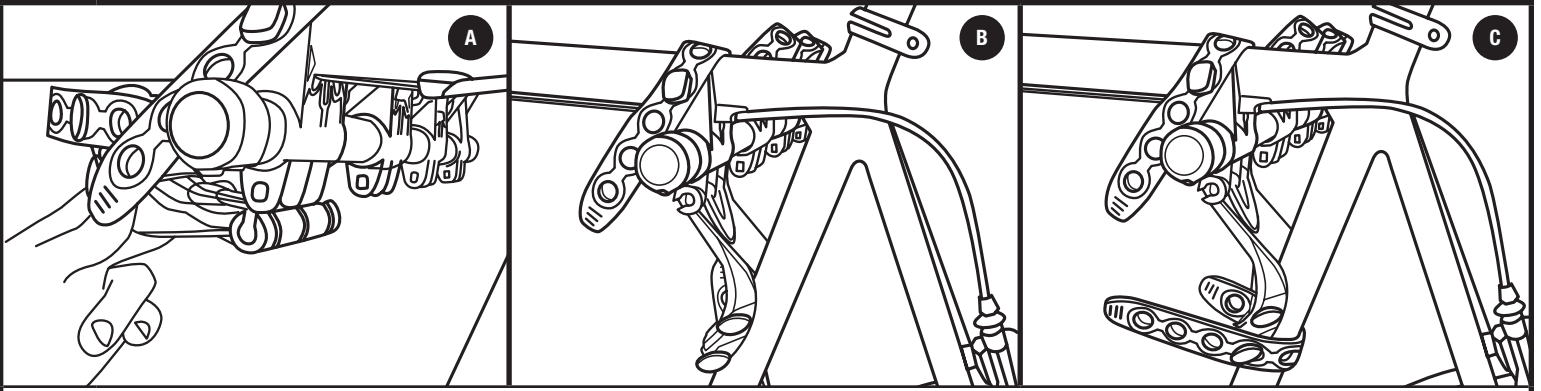

- To attach anti-sway cradle, hold horizontal with smooth edge facing down and slide C-slot opening onto bottom cradle bar. Swing down to vertical position. Place smooth curved surface against bicycle down-tube and attach strap as shown.


14

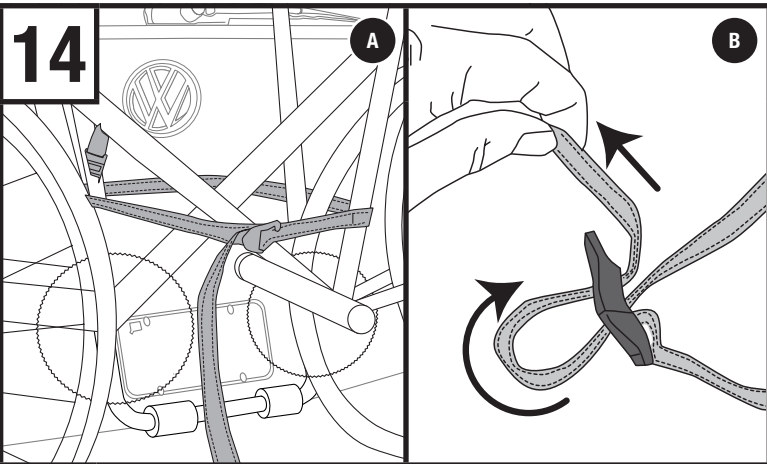


- Using blue load strap provided secure all bikes to the frame of the rack as illustrated.

15

BIKE ARM STORAGE

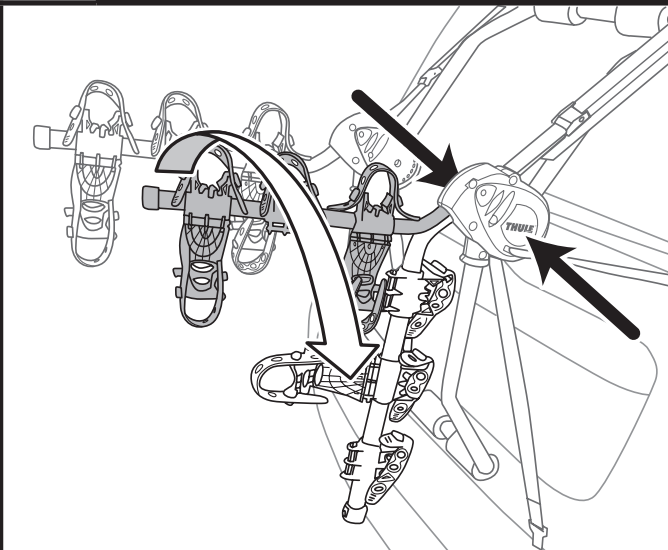


- Squeeze buttons on hub to release arms.
- Rotate arms down.
- Ensure buttons are engaged in hub when finished.

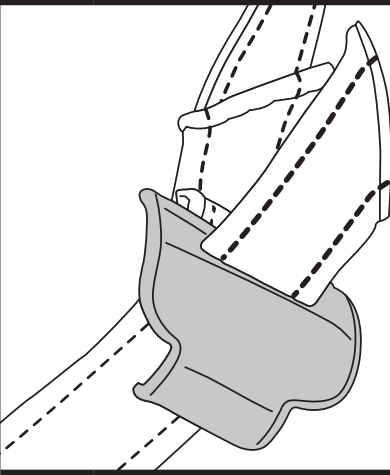


A

- Remove upper strap from carrier buckle. Thread loose end through slot in hook.

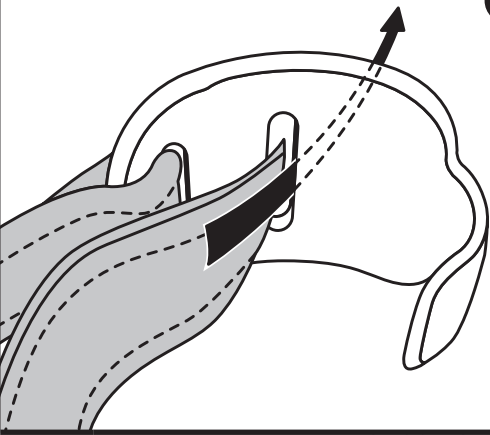


B

- Pull strap through.

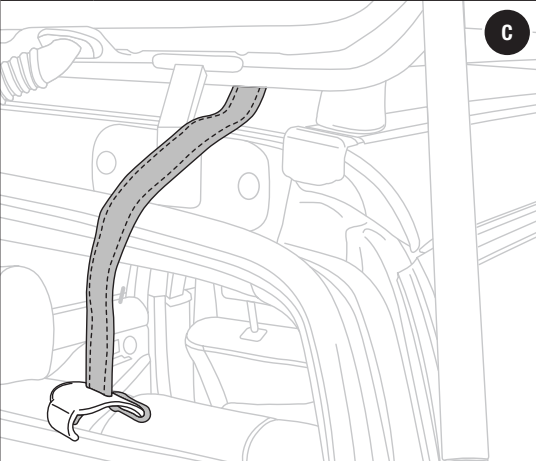

C

- Open hatch/trunk. Hang hook inside trunk or vehicle.

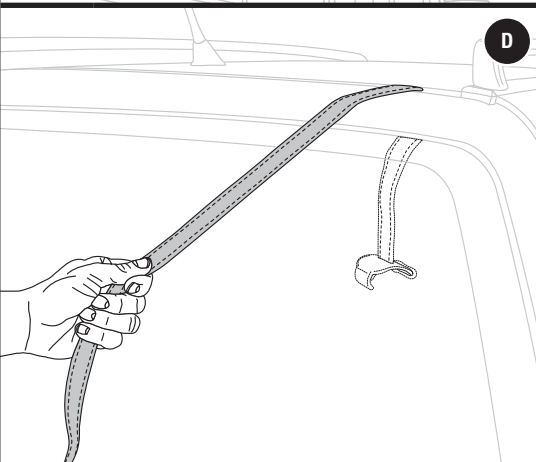

D

- Close hatch, pull strap tight and install carrier (steps 6–9).

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year	9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

ACURA

CL 2DR	'01-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
	'96-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,104,125,128
CSX 4DR (Canada)	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
EL 4DR	'01-06	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
	'96-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,132
Integra 3DR	'94-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,105,125,128
	'90-93														135,136
Integra 4DR	'94-01	✓			5	✓		5	✓		5	✓		5	101,102,110,132,140
	'90-93														135,136
Legend 2DR	'91-95	✓			5	✓		5	✓		5	✓		5	101,102,140
	'87-90	✓			5	✓		5	✓		5	✓		5	101,102,140
Legend 4DR	'91-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102
	'86-90	✓			5	✓		5	✓		5	✓		5	101,103,125,140
MDX	'07-13														137
	'01-06	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,127,128
RDX	'13														133
	'07-12														133
RL 4DR	'05-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'96-04	✓			6	✓		6	✓		6	✓		6	101,110,132
RLX 4DR	'14														CHECK FOR UPDATE
RSX	'02-06	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128
SLX	'96-99														
TL	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'09-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'95-98	✓			5	✓		5	✓		5	✓		5	101,102,132
TSX	'09-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
TSX Sport Wagon	'12-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Vigor	'91-95	✓			5	✓		5	✓		5	✓		5	101,102,132
ZDX	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138

AUDI

80 & 90 Series	'93-95	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'88-92	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,104
100 & 200 Series	'92-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'89-91	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,131
A3 Sportback 5DR	'06-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
A4 4DR	'09-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'02-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'95-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
A4 Allroad	'13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'01-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A4 Wagon	'09-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'02-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'97-01	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
A5 2DR	'08-13														NO FIT
A6 4DR	'12-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year	9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

AUDI continued

A6 4DR	'05-11	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'95-97														133
A6 Wagon	'06-11	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'99-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'97-98														137
	'95-96	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102
A7 Sportback	'12-13														CHECK FOR UPDATE
A8	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'96-03														135
Q5	'09-13														134
Q7	'07-13														134
Quattro 2DR	'90-92														135
RS4 4DR	'09-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128,132
	'04-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128,132
RS7 Sportback	'12-13														CHECK FOR UPDATE
S4 4DR	'09-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'02-08	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,116,128
	'95-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
S4 Wagon	'01-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
S5 2DR	'08-13														NO FIT
S6 4DR	'12-13	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'05-11	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'95-97														133
S6 Wagon	'02-03	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
S7 Sportback	'12-13														CHECK FOR UPDATE
S8	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'04-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'01-03														135
TT	'07-13														133
	'00-06														133

BMW

1 Series 3DR	'08-13					✓		7	✓		7	✓		7	101,102,128
1 Series 3DR Convertible	'08-13					✓		7	✓		7	✓		7	101,102,128,156
3 Series 2DR	'06-13	✓			7	✓		7	✓		7	✓		7	101,102,128,132
	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'92-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'76-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,109
3 Series 4DR	'12-13	✓			7	✓		7	✓		7	✓		7	101,102,128,132
	'06-11	✓			7	✓		7	✓		7	✓		7	101,102,128,132
	'99-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'76-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,109
3 Series Compact Ti	'95-99														134
3 Series Wagon	'11-13	✓			9	✓		9	✓		9	✓		9	101,102,121,128,132
	'00-10	✓			9	✓		9	✓		9	✓		9	101,102,121,128,132
5 Series 4DR	'11-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

CHEVROLET continued

Silverado / Silverado Classic	'99-07												148
Sonic 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
Sonic 5DR	'12-13												CHECK FOR UPDATE
Spectrum 2DR	'85-88	✓			7	✓	✓	7	✓	✓	7	✓	101,102,132,138
Spectrum 4DR	'85-88	✓			6	✓	✓	6	✓	✓	6	✓	101,102,132
Suburban	'07-13												134
	'00-06	✓			10	✓	✓	10	✓	✓	10	✓	101,106,121,132,138
	'92-99	✓			10	✓	✓	10	✓	✓	10	✓	101,106,128,132
Tahoe	'07-13												134
	'00-06	✓			10	✓	✓	10	✓	✓	10	✓	101,106,121,132,138
Tahoe 2DR	'95-99	✓			10	✓	✓	10	✓	✓	10	✓	101,106,128,132
Tahoe 4DR	'95-99	✓			10	✓	✓	10	✓	✓	10	✓	101,106,128,132
Tracker	'99-04												
Trax (Canada)	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,121,128
TrailBlazer 4DR	'02-09												135,137
TrailBlazer EXT 4DR	'02-06												135,137
Traverse	'09-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,128
Uplander	'05-08	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
Venture	'97-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,106,121,138
Volt	'11-13	✓	✓		8	✓	✓	8	✓	✓	8	✓	101,102,128

CHRYSLER

200 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
300	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'05-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
300M	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,128
Aspen	'07-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
Cirrus	'95-00	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,106,125
Concorde	'98-04	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,128
	'93-97												133
Conquest	'85-89												134,135
Crossfire	'04-08												135
LeBaron Coupe	'85-89	✓			6	✓	✓	6	✓	✓	6	✓	101,105,132,138
LeBaron 4DR	'94-96	✓			6	✓	✓	6	✓	✓	6	✓	101,105,132
LHS	'98-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,128
	'91-97												133
New Yorker	'91-96												133
New Yorker 5th Ave.	'91-93												133, 135
Pacifica	'04-08	✓			9	✓	✓	9	✓	✓	9	✓	101,102,121,138
PT Cruiser	'01-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128,129
Sebring 2DR (Hardtop)	'01-06	✓			6	✓	✓	6	✓	✓	6	✓	101,102,116,128,132
	'95-00												133,135
Sebring 4DR	'07-10	✓			6	✓	✓	6	✓	✓	6	✓	101,102,116,128,132
	'01-06	✓			6	✓	✓	6	✓	✓	6	✓	101,102,116,128,132
Town & Country	'11-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'08-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121
	'96-00	✓			10	✓	✓	10	✓	✓	10	✓	101,102,121,139
	'91-95	✓			10	✓	✓	10	✓	✓	10	✓	101,102,121,139
Voyager / Grand Voyager	'01-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

FORD continued

Vans (E-Series)	'79-13												NO FIT	
ZX2	'98-03	✓			7	✓		7	✓		7	✓	7	101,103,116,125,128,132

GMC

Acadia	'07-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Canyon	'04-12														148
Classic Sierra	'88-00														148
Denali	01-04	✓			10	✓		10	✓		10	✓		10	101,106,121,132,138
Denali XL	'00-04	✓			10	✓		10	✓		10	✓		10	101,106,121,132,138
Envoy	'98-01														137
Envoy/Denali 4DR	'02-09														135,137
Envoy XL	'02-06														135,137
Envoy XUV	'04-05														135,137
Full Size Jimmy	'79-91														148
Full Size Pickup	'79-87														148
Jimmy 2DR	'95-01														134,135
Jimmy 4DR	'95-01														134,135
S-15 Jimmy	'92-94														134
S-15	'85-93														135
Safari Van	'90-05														137
Sierra	'07-13														148
	'99-06														148
Sonoma	'94-04														148
Suburban	'92-99	✓			10	✓		10	✓		10	✓		10	101,106,128,132
Terrain	'10-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,112,121,138
Terrain Denali	'12-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,112,121,138
Yukon	'07-13														134
	'00-06	✓			10	✓		10	✓		10	✓		10	101,106,121,132,138
	'99	✓			10	✓		10	✓		10	✓		10	101,106,128,132
Yukon XL	'07-13														134
	'00-06	✓			10	✓		10	✓		10	✓		10	101,106,121,132,138

HONDA

Accord 2DR	'13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'08-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'03-07	✓		✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,147
	'98-02	✓			6	✓		6	✓		6	✓		6	101,110,128,132
	'94-97	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'90-93	✓			6	✓		6	✓		6	✓		6	101,102,132
	'86-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
Accord 4DR	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'08-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'03-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'98-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'94-97	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'90-93	✓			6	✓		6	✓		6	✓		6	101,102,132
	'86-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,138
Accord Hatchback	'86-89														134
Accord Wagon	'91-93	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Civic 2DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

HUMMER continued

H3T	'09-10												153
-----	--------	--	--	--	--	--	--	--	--	--	--	--	-----

HYUNDAI

Accent 3DR	'07-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'00-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'95-99	✓			7	✓		7	✓		7	✓		7	101,108,132,138
Accent 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'00-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'95-99	✓			6	✓		6	✓		6	✓		6	101,108,126,132,138
Accent 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Azera	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'10-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Elantra 2DR	'13														CHECK FOR UPDATE
Elantra 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'07-10	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-00	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,126,128
	'92-98														133
Elantra 5DR	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
Elantra GT 5DR	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Elantra Touring	'09-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
	'01-05														134,137
	'97-00														134
Entourage	'07-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Equus	'11-13														CHECK FOR UPDATE
Excel 2DR	'90-94	✓			7	✓		7	✓		7	✓		7	101,108,132,138
Excel 4DR	'90-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'86-89	✓			8	✓		8	✓		8	✓		8	101,102,121,132
Excel 5DR	'86-89	✓			8	✓		8	✓		8	✓		8	101,102,121,132,138
Genesis 2DR	'09-13														146
Genesis 4DR	'09-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Santa Fe	'13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'07-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'01-06	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138
Santa Fe Sport	'13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
S Coupe	'91-96	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
Sonata	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'06-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'02-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-01	✓			7	✓		7	✓		7	✓		7	101,102,126,128,132
	'95-98	✓			6	✓		6	✓		6	✓		6	101,108,126,132,138
	'89-94														133
Tiburon	'02-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,128
	'97-01														133
Tuscon	'10-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,119,121
	'05-09	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Velostar 3DR	'12-13														137
Veracruz	'07-12														134



THULE 2012 REAR MOUNTED FIT GUIDE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year	9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	

ISUZU continued

Stylus '91-93	✓			6	✓		6	✓		6	✓		6	101,102,132
Trooper '92-02														144, 149
'84-91														

JAGUAR

F-Type Convertible '13														135
S-Type '00-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
VDP Vanden Plas '96-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,130
XF 4DR '12-13														135
'09-11														135
XFR 4DR '12-13														135
'10-11														135
XJ12 4DR '94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
XJ 4DR '10-13														135
XJR 4DR '10-13														135
XJ6 4DR '96-97	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,130
'89-95	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
XJ8 '97-09	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,128,130
XJS 2DR '92-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
XK 2DR '12-13														135
'09-11														135
XKR 2DR '12-13														135
'10-11														135
XK8 2DR '97-11														135
X-Type 4DR '02-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
X-Type Wagon '05-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128

JEEP

Cherokee '91-01	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,109,121,139
CJ-7 '79-95														
Comanche '86-94														148
Commander '06-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Compass '11-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Grand Cherokee '11-13	✓	✓		9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
'05-10	✓	✓		9	✓	✓	9	✓	✓	9	✓	✓	9	101,105,121,128
'99-04	✓			10	✓		10	✓		10	✓		10	101,102,121,132,138
'93-98	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,105,121,138
Grand Wagoneer '84-92														137
Liberty '08-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
'02-07														
Liberty Renegade '05-07														
Patriot '07-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Wrangler '87-13														
Wrangler Unlimited '04-13														

KIA

Amanti '04-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Borrego '09-12														NO FIT
Cadenza 4DR '12-14														CHECK FOR UPDATE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

KIA continued

Carens	'07-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Credos	'98-99														135
Forte 2DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Forte 4DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
Forte 5DR	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Optima 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'01-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Rio 4DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'06-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'01-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Rio5 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
Rio Cinco Wagon	'06-11	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'02-05	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Rondo	'07-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Rondo EX	'09-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sedona	'11-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121
	'06-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121
	'02-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,138
Sephia	'98-01	✓			7	✓		7	✓		7	✓		7	101,102,128,132
	'94-97														135
Soul	'10-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Sorento	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,125,128
	'03-09	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,103,121,125,128
Spectra 4DR	'07-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'04.5-06														137
	'00-04.5	✓			6	✓		6	✓		6	✓		6	101,102,128,132
Spectra5	'05-09														134
Sportage	'11-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,119,121
	'05-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'95-02														

LAND ROVER

Discovery	'94-98														
Discovery II	'98-04														
Evoque Coupe 3DR	'12-13														CHECK FOR UPDATE
Evoque 5DR	'12-13														CHECK FOR UPDATE
Freelander	'02-05														
LR2	'07-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
LR3	'05-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,128,147
LR4	'10-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,128,147
Range Rover	'13														137
	'03-12														137
	'87-02														137
Range Rover Sport	'13														137
	'03-12														137

LEXUS

CT200H 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
CT200H F Sport 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

MAZADA continued

300 Wagon	'88-98	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
300 CD	'87-87	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
300 CE	'88-88	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
300 SDL 4DR	'87-87	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109,138
300 SE	'92-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
420 SEL	'88-88	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109,138
560 SEC	'89-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109,138
560 SEL	'92-96														133
560 SL 2DR	'87-87														133
B Class 5DR	'10-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,116,121,128
C Class 2DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'05-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
	'02-04														134
C Class 4DR	'07-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
	'05-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,116,128
	'01-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'92-00														133
C Class Wagon	'08-12														134
	'05-06														134
	'02-04														134
CL Class	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
CLS Class 2DR	'06-12														135
CLS Class 4DR	'11-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
E Class 2DR	'10-13														135
E-Class 4DR	'10-13	✓	✓	✓	7	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
	'96-09	✓	✓	✓	7	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
E Class Wagon	'11-13														134
	'04-10														134
	'98-03														134
G Class	'02-13														151
GL Class	'13														135
	'06-12														135
GLK	'09-13														134
M Class	'12-13	✓	✓		9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'06-11	✓	✓		9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
	'98-05														134,137
R Class	'11-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'06-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
S Class	'00-13														NO FIT
SL Class	'05-13														NO FIT
SLK Class	'05-13														NO FIT

MERCURY

Cougar	'99-02														135
	'89-98	✓			6	✓		6	✓		6	✓		6	101,103,125,132,138
	'87-88														NO FIT
Grand Marquis	'92-09	✓			6	✓		6	✓		6	✓		6	101,105,116,132
	'88-89	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108
Mariner	'05-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

MERCURY continued

Marauder	'03-04	✓			6	✓		6	✓		6		101,105,116,132
Milan	'06-10	✓			8	✓		8	✓		8		101,102,116,128,132
Montego	'05-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,116,128
Monterey	'04-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,138
Mountaineer	'02-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128
	'96-01	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121
Mystique	'95-00	✓			6	✓		6	✓		6		101,103,118
Sable 4DR	'08-09	✓			8	✓		8	✓		8		101,102,116,128,132
	'00-05	✓			6	✓		6	✓		6		101,106,126,132
	'96-99	✓			6	✓		6	✓		6		101,106,126,132
	'92-95												135
Sable Wagon	'86-91	✓			6	✓		6	✓		6		101,103,132,138
	'96-05	✓	✓	✓	9	✓	✓	9	✓	✓	9		101,106,121
Sable Wagon	'85-95	✓	✓	✓	8	✓	✓	8	✓	✓	8		101,102,121,138
	'90-94	✓			6	✓		6	✓		6		101,108,132,138
Tracer 4DR	'97-99												135
Tracer Wagon	'91-96	✓	✓	✓	6	✓	✓	6	✓	✓	6		101,102,138
	'91-99	✓	✓	✓	9	✓	✓	9	✓	✓	9		101,102,121,138
Villager	'99-02	✓	✓	✓	10	✓	✓	10	✓	✓	10		101,102,121,128
	'93-98	✓			10	✓		10	✓		10		101,102,121,126,132,138

MINI

Clubman	'08-13												135
Clubvan	'13												135
Cooper (includes JCW models)	'03-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128
Cooper Coupe	'12-13												NO FIT
Countryman	'11-13												135
Cooper Roadster	'12-13												CHECK FOR UPDATE

MITSUBISHI

3000GT	'91-99												134,135
Diamante 4DR	'97-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'91-96	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	101,108,126,138
Diamante Wagon	'92-96	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,121,127
Eclipse	'10-12												134,135
	'06-09												134,135
	'95-03												134,135
Endeavor	'04-11	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128
Expo/Expo LRV	'92-95	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,138
Galant	'04-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'97-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,128
	'94-96	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	101,102,138
	'89-93	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	101,102,138
	'85-88	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	101,108,114
	'99-03												135
Lancer 4DR	'08-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'02-07	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
Lancer Sportback	'10-13												137
	'04-05												134
MiEV	'12-13												CHECK FOR UPDATE

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

MITSUBISHI continued

Mirage 2DR	'00-02	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,128
	'97-99														133
	'93-96														133
	'89-92	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102
	'85-88														133
Mirage 4DR	'00-01	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,108,128
	'97-99														133
	'93-94	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'89-92	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,102,138
	'87-88														133
Montero	'90-06														
Montero 2DR	'84-90														137
Montero Sport	'97-04	✓			9	✓		9	✓		9	✓		9	101,102,121,132,138
Outlander	'07-13														134
	'03-06														134
Outlander Sport	'11-13														134
Pickup	'83-96														
Precis 2DR	'90-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108,138
Raider	'06-10														148
RVR (Canada)	'11-13														134
Starion	'85-89														134,135

NISSAN

200SX	'95-98	✓			6	✓		6	✓		6	✓		6	101,102,132,138
240SX Coupe	'93-93														134
300ZX	'90-93	✓			6	✓		6	✓		6	✓		6	101,103,128,132
350Z	'03-09														133
370Z	'09-13														133
Altima 2DR	'13					✓		7	✓		7	✓		7	101,102,138
	'08-12					✓		7	✓		7	✓		7	101,102,138
Altima 4DR	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'07-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'02-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,138
	'98-01	✓			6	✓		6	✓		6	✓		6	101,102,139,140
	'93-97	✓			5	✓		5	✓		5	✓		5	101,102,140
Armada	'08-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
	'04-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128
Cube	'09-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,119,121
Frontier	'05-13														148
	'98-04														148
GT-R	'08-12														NO FIT
Juke 5DR	'11-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Leaf 5DR	'11-13														CHECK FOR UPDATE
Maxima 4DR	'09-13	✓			7	✓		7	✓		7	✓		7	101,102,116,128
	'04-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
	'00-03	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,125,128
	'95-99														135
	'87-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103
Maxima Wagon	'87-88	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138
Murano	'03-12	✓			10	✓		10	✓		10	✓		10	101,102,121,141

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

NISSAN continued

Murano CrossCabriolet	'11-12												NO FIT
NX 1600, 2000	'92-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,103,121
NV200 Van	'12-13												NO FIT
NV 1500 / 2500 / 3500 Van	'12-13												NO FIT
Pathfinder	'13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'05-12	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'96-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128
Pathfinder w/ Spare	'96-01												
Pathfinder w/o Spare	'92-95	✓			10	✓		10	✓		10	✓	101,103,121,127,132,138
Pulsar	'87-88	✓			6	✓		6	✓		6	✓	101,105,132
Quest	'12-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'04-11	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'99-02	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128
	'93-98	✓			10	✓		10	✓		10	✓	101,102,126,132,138
Rogue	'08-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128,151
Sentra 2DR	'95-99	✓			6	✓		6	✓		6	✓	101,102,132,138
	'91-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,138
	'90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,138
Sentra 4DR	'13												CHECK FOR UPDATE
	'07-12	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,128
	'00-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,116,128
	'95-99	✓			6	✓		6	✓		6	✓	101,102,132,138
	'91-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,138
	'82-90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102,138
Stanza 4DR	'91-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,103
Titan Pick-up	'04-13												148
Versa 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'07-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,128
Versa 5DR	'13												CHECK FOR UPDATE
Versa 5DR	'07-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,128
Xterra	'05-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'00-04	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,121,125,128,130

OLDSMOBILE

98 Regency	'92-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,126,130
Achieva 4DR	'92-98	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102
Alero 2DR	'99-04	✓			5	✓		5	✓		5	✓	101,126,128,132,142
Alero 4DR	'99-04	✓			5	✓		5	✓		5	✓	101,126,128,132,142
Aurora	'01-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'95-00												135
Bravada	'02-04												135,137
	'96-01												135,137,144
	'91-94												134
Custom Cruiser Wagon	'92-95												135
Cutlass	'97-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,128,142
Cutlass Ciera 4DR	'82-96												133
Cutlass Cruiser Wagon	'83-94												134
Cutlass Supreme 2DR	'88-96												135
Cutlass Supreme 4DR	'90-97	✓			6	✓		6	✓		6	✓	101,108,132
Delta 88 Royale	'92-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,105

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

OLDSMOBILE continued

Intrigue 4DR	'97-02												135
LSS	'96-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,105,128
Silhouette	'97-04	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,138
Silhouette	'90-96												137

PONTIAC

Aztec	'01-05	✓			10	✓		10	✓		10	✓	101,112,121,125,132,138
Bonneville	'00-05	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	101,138,142
	'94-99	✓			6	✓		6	✓		6	✓	101,110,116,132
	'86-93												135
Firebird	'79-02												134
G3 5DR	'08-10	✓			9	✓		9	✓		9	✓	101,128,132,147
G3 Wave 5DR (Canada)	'08-10	✓			9	✓		9	✓		9	✓	101,128,132,147
G5 2DR	'07-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
G5 4DR	'07-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,110,128
G6 Coupe	'06-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
G6 4DR	'05-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
G8 4DR	'08-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
Grand Am 2DR	'99-05	✓			5	✓		5	✓		5	✓	101,126,128,132,142
	'92-98												135
	'85-91	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,109
Grand Am 4DR	'99-05	✓			5	✓		5	✓		5	✓	101,126,128,132,142
	'92-98												135
Grand Prix 2DR	'97-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'88-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,108
Grand Prix 4DR	'04-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'97-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'88-96	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,108
GTO	'04-06												146
LeMans	'88-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,138
Montana	'99-05	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,138
Montana SV6	'05-06	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
Solstice	'06-09												137
Sunbird 2DR	'85-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,110
Sunbird 4DR	'85-94	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,110
Sunfire 2DR	'95-05	✓			7	✓		7	✓		7	✓	101,132,142
Sunfire 4DR	'95-05	✓			7	✓		7	✓		7	✓	101,132,142
Torrent	'06-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,112,121,128
Trans Sport	'97-98	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,138
	'90-96												137
Vibe	'03-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,128

PORSCHE

Cayenne	'03-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128
Panamera 4DR	'10-13												134

SAAB

9-2x	'05-06	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,121,127,128
9-3 3DR	'99-02	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,121,138
9-3 4DR	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

SAAB continued

9-3 4DR	'03-05	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
9-3 Convertible	'06-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'03-05	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-3 5DR	'99-03	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
9-3 Sport Combi	'06-12	✓			7	✓		7	✓		7	✓		7	101,102,121,141
9-3x	'10-12														134
9-4X	'10-12	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128,129
9-5 4DR	'10-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
9-5 Wagon	'99-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
9-7x	'05-09														135,137
900 2DR	'69-93														135
900 3DR	'94-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
900 4DR	89-93	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,103
900 5DR	'94-98	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121,138
900 Convertible	'95	✓			6	✓		6	✓		6	✓		6	101,102,132,138
9000 4DR	'86-98	✓			6	✓		6	✓		6	✓		6	101,102,132
9000 Hatchback	'86-98														134

SATURN

Astra 3DR	'08-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Astra 5DR	'08-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Aura	'07-10	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,127,128
Ion 2DR	'03-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
Ion 4DR	'03-08	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LS 4DR	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
LW Wagon	'00-04	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,121,128,142
Outlook	'07-10	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Relay	'05-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
SC 2DR	'97-02														135
	'91-96														133
SC 3DR	'97-02														135
Sky	'07-10														146
SL 4DR	'96-02	✓			6	✓		6	✓		6	✓		6	101,108,132
	91-95	✓			6	✓		6	✓		6	✓		6	101,105,132
SW Wagon	'93-01	✓			8	✓		8	✓		8	✓		8	101,102,121,126,132
Vue	'08-10														134
	'02-07	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,112,121,128

SCION

FR-S	'12-13														NO FIT
IQ	'12-13														CHECK FOR UPDATE
iC	'11-13														CHECK FOR UPDATE
	'04-10														134
xA	'04-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
xB	'08-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'04-07														135
xD	'08-13	✓			10	✓		10	✓		10	✓		10	101,102,116,121,128,132

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

SMART

Fortwo	'08-13												135
--------	--------	--	--	--	--	--	--	--	--	--	--	--	-----

SUBARU

Vehicle make, model and year	9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING	Notes		
Baja														146		
Forester	'09-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128	
	'03-08	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128	
	'98-02	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,128	
Impreza 2DR	'95-01	✓			6	✓		6	✓		6	✓		6	101,111,132	
Impreza 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128	
	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128	
	'02-07	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128	
	'93-01	✓			5	✓		5	✓		5	✓		5	101,102,132,139	
Impreza WRX / WRX STI 4DR (w/o Spoiler)	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128	
	'08-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128	
	'02-07	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,128	
	'93-01	✓			5	✓		5	✓		5	✓		5	101,102,132,139	
Impreza 5DR	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'08-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'02-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'93-99	✓			9	✓		9	✓		9	✓		9	101,102,121,128,132	
Impreza WRX / WRX STI 5DR (w/o Spoiler)	'12-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'08-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'02-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'93-99	✓			9	✓		9	✓		9	✓		9	101,102,121,128,132	
Justy	'87-94	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,121	
	Legacy 4DR	'10-13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,128
		'05-09	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,128,147
		'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128,129
		'95-99	✓			6	✓		6	✓		6	✓		6	101,103,132,138
'90-94	✓			6	✓		6	✓		6	✓		6	101,103,132		
Legacy Wagon (Canada)	'09-12	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128	
Legacy Wagon	'05-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128	
	'00-04	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128	
	'89-94	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,138	
Legacy/Outback Wagon	'95-99	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,138	
Loyale 2DR	'90-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103	
Loyale 4DR	'90-92	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103	
Loyale Wagon	'90-94	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,138	
Outback 4DR	'05-07	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,128,132,147	
	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128,129	
Outback Sport	'02-11	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	
	'00-01	✓			9	✓		9	✓		9	✓		9	101,102,121,128,132	
Outback Wagon	'10-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128	
	'05-09														135	
	'00-04	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128	
SUS 4DR	'98-99														136	
SVX	'92-97														135	
Tribeca	'06-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128	
XV Crosstrek (w/o Spoiler)	'13	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,127,128	

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

SUZUKI

Aerio 4DR	'02-07												101,102,128
Aerio SX 5DR	'02-06												134
Esteem 4DR	'95-02	✓			6	✓	6	✓	6	✓		6	101,102,132,138
Esteem Wagon	'98-02	✓			9	✓	9	✓	9	✓		9	101,102,121,128,132
Equator	'09-13												
Forenza 4DR	'05-08												135
Forenza Wagon	'05-08	✓	✓	✓	8	✓	✓	8	✓	✓	✓	8	101,102,128,132
Grand Vitara	'06-13												
Kizashi 4DR	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	✓	7	101,102,128
Reno	'05-08	✓	✓	✓	8	✓	✓	8	✓	✓	✓	8	101,102,128
Sidekick 2DR	'91-98												
Sidekick 4DR	'91-98												
Swift 2DR	'91-94	✓			5	✓	5	✓	5	✓		5	101,102,132,138
Swift 3DR	'95-01	✓			8	✓	8	✓	8	✓		8	101,102,132
Swift 4DR	'91-94	✓			5	✓	5	✓	5	✓		5	101,102,132,138
SX4 4DR	'07-13	✓	✓	✓	6	✓	✓	6	✓	✓	✓	6	101,102,128
SX4 Sport 4DR	'07-13	✓	✓	✓	6	✓	✓	6	✓	✓	✓	6	101,102,128
SX4 Sportback 5DR	'07-13	✓			9	✓	9	✓	9	✓		9	101,102,121,128
SX4 Hatchback	'07-13	✓			9	✓	9	✓	9	✓		9	101,102,121,128
Verona	'04-07	✓	✓	✓	7	✓	✓	7	✓	✓	✓	7	101,102,128
Vitara	'99-05												
XL-7	'07-09 '01-06	✓	✓	✓	11	✓	✓	11	✓	✓	✓	11	101,112,121,128

TOYOTA

4 Runner 2DR	'90-95												137
4 Runner 4DR	'03-13	✓	✓	✓	10	✓	✓	10	✓	✓	✓	10	101,102,121,128,145
4 Runner 4DR	'96-02	✓	✓	✓	10	✓	✓	10	✓	✓	✓	10	101,102,121,127,128
Avalon	'13	✓			7	✓	7	✓	7	✓		7	101,102,128,132
	'05-12	✓			7	✓	7	✓	7	✓		7	101,102,116,128,132
	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	✓	7	101,102,128
	'95-99												133
Camry 2DR	'92-96	✓	✓	✓	6	✓	✓	6	✓	✓	✓	6	101,103,125
Camry 4DR	'12-13	✓	✓	✓	7	✓	✓	7	✓	✓	✓	7	101,102,128
	'07-11	✓	✓	✓	7	✓	✓	7	✓	✓	✓	7	101,102,128
	'02-06	✓	✓	✓	7	✓	✓	7	✓	✓	✓	7	101,102,128
	'97-01	✓			6	✓	6	✓	6	✓		6	101,106,125,132,138
	'92-96	✓	✓	✓	6	✓	✓	6	✓	✓	✓	6	101,103,125
	'87-91	✓	✓	✓	5	✓	✓	5	✓	✓	✓	5	101,108,138
Camry Wagon	'92-96	✓	✓	✓	9	✓	✓	9	✓	✓	✓	9	101,102,121
	'87-91	✓	✓	✓	9	✓	✓	9	✓	✓	✓	9	101,108,121
Celica	'00-05												135,136
Celica 2DR	'94-99	✓			5	✓	5	✓	5	✓		5	101,103,121,132,138
	'90-93	✓	✓	✓	6	✓	✓	6	✓	✓	✓	6	101,103,126,138
Celica 3DR	'94-99	✓			5	✓	5	✓	5	✓		5	101,103,121,132,138
	'90-93	✓	✓	✓	6	✓	✓	6	✓	✓	✓	6	101,103,126,138
Celica Coupe	'82-89	✓	✓	✓	6	✓	✓	6	✓	✓	✓	6	101,103
Corolla 4DR	'09-13	✓	✓	✓	7	✓	✓	7	✓	✓	✓	7	101,102,128
	'03-08	✓	✓	✓	8	✓	✓	8	✓	✓	✓	8	101,102,128
	'98-02	✓			7	✓	7	✓	7	✓		7	101,102,128,132

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

TOYOTA continued

Corolla 4DR	'93-97	✓			6	✓		6	✓		6		101,102,126,132
	'89-92	✓			6	✓		6	✓		6		101,102,132
Corolla S 4DR	'09-12	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,128
	'03-08	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,102,128
Corolla Wagon	'93-96	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,103,121,138
	88-92	✓	✓	✓	8	✓	✓	8	✓	✓	8	✓	101,103,121,138
Echo 2DR	'00-06												135
Echo 4DR	'00-06												135
FJ Cruiser	'07-13												150,152
Highlander	'08-13												134
	'01-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,127,128
Land Cruiser	'98-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
Matrix	'09-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,128
	'03-08	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,128
MR-2	'90-93												133
MR2 Spyder	'00-05												135
Paseo	'91-97	✓			6	✓		6	✓		6	✓	101,102,132,138
Paseo Convertible	'97												135
Pickup	'79-89												148
Pickup (Small)	'89-96												148
Pickup (Standard)	'89-96												148
Previa	'91-97	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,103,125,138
Prius 4DR	'01-03												135
Prius 5DR	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,121,128
	'04-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	101,102,121,128
Prius C 5DR	'12-13	✓			8	✓		8	✓		8	✓	101,102,121,128
Prius V 5DR Wagon	'12-13	✓			9	✓		9	✓		9	✓	101,102,121,138
RAV 4	'13												NO FIT - SPOILER
	'07-12												150, 152
	'01-06												
	'96-00												
Sequoia	'08-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,127,138
	'01-07	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,121,127,138
Sienna	'11-13												NO FIT - SPOILER
	'10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'04-09	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	101,102,121,128
	'98-03	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,102,121,128
Solara	'04-08	✓			7	✓		7	✓		7	✓	101,102,128,132
	'99-03	✓			5	✓		5	✓		5	✓	101,102,128,132
Supra	'84-92												135
T100	'93-98												148
Tacoma	'05-13												148
	'96-04												148
Tercel 2DR	'91-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102
	'90	✓			8	✓		8	✓		8	✓	101,103,132
Tercel 4DR	'91-99	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	101,102
Tercel Wagon	'80-88	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	101,102,139
Tundra	'07-13												148
	'99-06												148
Vans	'84-90	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	101,103,121,138

NOTE: If your vehicle is not listed below, it may be a NO FIT. For the most up to date information consult Thule Fit

Vehicle make, model and year

9001 RACEWAY 2	9002 RACEWAY 3	9003 RACEWAY PLATFORM	FIT DIAL SETTING	9009 / 9009XT ARCHWAY 2	9010 / 9010XT ARCHWAY 3	FIT DIAL SETTING	9006 / 9006XT GATEWAY 2	9007 / 9007XT GATEWAY 3	FIT DIAL SETTING	910XT PASSAGE 2	911XT PASSAGE 3 933 VENTURE	FIT DIAL SETTING
----------------	----------------	-----------------------	------------------	-------------------------	-------------------------	------------------	-------------------------	-------------------------	------------------	-----------------	-----------------------------	------------------

VOLKSWAGEN continued

Passat 4DR	'90-91	✓	✓	✓	5	✓	✓	5	✓	✓	5	✓	✓	5	101,103,138
Passat CC	'09-13														135
Passat Wagon	'90-10	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Phaeton	'04-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,112,128
Rabbit 3DR	'06-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Rabbit 5DR	'06-09	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
Routan	'11-13	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
	'09-10	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,128
Scirocco	'87-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,103,121,138
Tiguan	'12-13														137
	'08-11														137
Touareg	'08-13	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
	'04-07	✓	✓	✓	10	✓	✓	10	✓	✓	10	✓	✓	10	101,102,121,128
Vanagon Van (T3)	80-02	✓	✓	✓	11	✓	✓	11	✓	✓	11	✓	✓	11	101,102,121,123

VOLVO

240/260 4DR	'79-93	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102,138
240/260 Wagon	'79-93	✓			10	✓		10	✓		10	✓		10	101,102,121,132,130
740/760 4DR	'90	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,102
	'84-89	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,109
740/760/940/960 Wagon	'84-97	✓			10	✓		10	✓		10	✓		10	101,102,121,132,130
740/960 4DR	'91-97	✓			6	✓		6	✓		6	✓		6	101,102,132,138
850 4DR	'93-97	✓			6	✓		6	✓		6	✓		6	101,102,132,138
850 Wagon	'94-97														137
C30	'08-13														137
C70 Convertible	'06-13														137
	'98-05	✓	✓	✓	6	✓	✓	6	✓	✓	6	✓	✓	6	101,110,128
S40	'05-11	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'00-04	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,108,128
S60	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'01-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
S70	'98-00	✓			6	✓		6	✓		6	✓		6	101,102,132,138
S80	'10-13	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'07-09	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
	'99-06	✓	✓	✓	7	✓	✓	7	✓	✓	7	✓	✓	7	101,102,128
S90	'98-00	✓			6	✓		6	✓		6	✓		6	101,102,132,138
V40	'00-04	✓	✓	✓	11	✓	✓	8	✓	✓	8	✓	✓	8	101,102,121,128
V50	'05-11	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
V70	'98-10	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
V70 XC	'01-10	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
V90	'98-00	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
XC60	'09-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
XC70	'01-13	✓	✓	✓	11	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128
XC90	'03-13	✓	✓	✓	9	✓	✓	9	✓	✓	9	✓	✓	9	101,102,121,128

- 101 Place top clips in the gap at the front edge of the top of the trunk, hatch or door.
- 102 Place lower clips in the bottom edge of trunk or hatch.
- 103 Set lower clips/hooks into vehicle's left and right tow loops under the rear of the vehicle.
- 104 Set lower clips/hooks into tow loop on the right and frame hole on the left.
- 105 Set lower clips into bottom edge of internal metal bumper.
- 106 Set lower clips/hooks into frame holes.
- 107 Set lower clips into bottom edge of rear doors.
- 108 Set lower clips into frame holes in back of bumper.
- 109 Set lower clips onto bottom edge of bumper.
- 110 Set lower clip/hook onto edge of structural bumper located behind plastic bumper.
- 111 Frame holes are located up high on the backside of bumper.
- 112 Set lower clip/hooks into frame holes in chassis behind bumper.
- 114 Chafe guards required.
- 115 To minimize contact between carrier tow hooks and the bumper, slide the strap through only one end of the chafe guard leaving the other end free to rest between the tow hook and the bumper.
- 116 Bumper cover may deform with the use of this carrier. Remove carrier when not in use.
- 117 The upper arm of carrier, between rubber pads, may contact the center ridge in the trunk lid when carrier is fully mounted.
- 118 Lower arm of the carrier will mount against the license plate and the lights to the left and right of it.
- 119 Lower arm of the carrier will mount on the ridge on the bottom of the rear door, just above the bottom edge of the rear door.
- 121 Caution: Rear wiper can not be used when carrier is mounted.
- 122 Offset carrier to the right.
- 123 Lower arm of the carrier will mount higher on the rear door, so that the upper arm rests against the metal above the rear window.
- 124 Rear wiper must be positioned through the upper arm of carrier.
- 125 Always check to make sure there is no contact between the lower straps and the muffler and/or exhaust pipe.
- 126 Caution: The trunk lid may deform slightly with the use of this carrier. Remove carrier when not in use.
- 127 Route top strap under the spoiler on top of the hatch.
- 128 Lower arm of carrier should be positioned on upper tier of bumper.
- 129 Rubber weather stripping at top door/hatch will deform over time. Remove carrier when not in use.
- 130 Set lower clips/hooks into frame holes in bumper located by the right and left bumper strut.
- 131 Set lower clips/hooks into tow loop on the right and edge of bumper, by the bumper strut, on the left.
- 132 Thule cannot recommend the use of 3-bike carriers on this vehicle.
- 133 Carrier is not recommended because lower straps can not be mounted in a safe place.
- 134 Carrier is not recommended because top straps should not be mounted directly to glass or plastic trim covering glass.
- 135 Carrier is not recommended because vehicle is unable to support carrier weight.
- 136 Carrier is not recommended because upper arm of carrier could damage trunk lid.
- 137 Carrier is not recommended because top straps can not be mounted in a safe place.
- 138 Lower arm of carrier will rest in the bottom of the license plate well.
- 139 Lower arm of carrier will rest above license plate well.
- 140 Lower arm of carrier will rest at bottom of trunk lip.
- 141 Lower arm of carrier will rest in the area between the license plate well and upper tier of the bumper.
- 142 Set lower clips/hooks on top edge of the metal bumper struts.
- 143 When installing a Freeway or Speedway rack the use of a versa clip is required.
- 144 Vehicle can have an externally mounted spare tire prohibiting the use of any strap rack.
- 145 Set lower clips/hooks into tow loop on the left and frame hole on the right.
- 146 Carrier is not recommended because it cannot be installed without unwanted contact.
- 147 Set lower clips/hooks in tow loop located in the center of the vehicle behind the bumper.
- 148 Please verify vehicle cargo area will accept bicycle wheelbase prior to purchase.
- 149 Due to a factory incorporated "tire hanger" on some models, the 963 "Spare Me" cannot be used on this vehicle. Please check your vehicle's configuration before buying this product.
- 150 Only the "963XT, 963XTR, and 963PRO" can be used with this vehicle, due to mounting limitations on the original "963 Spare Me". If you have the "963 Spare Me" and would like to fit one of these vehicles - you need part # 753-3532.
- 151 If this vehicle has a spoiler installed, it is a "NO FIT"
- 152 If this vehicle has a spare tire mounted back-up camera, the 963XT will not fit.
- 153 Truck bed is not long enough to carry bikes using the 501 Insta-Gater.
- 154 All instances of this vehicle come with a factory spoiler which is not strong enough to take the weight of our strap carriers.
- 155 Place side clips in the bottom edge of trunk or hatch next to the lower clips
- 156 Do not operate convertible roof while rack is in place.