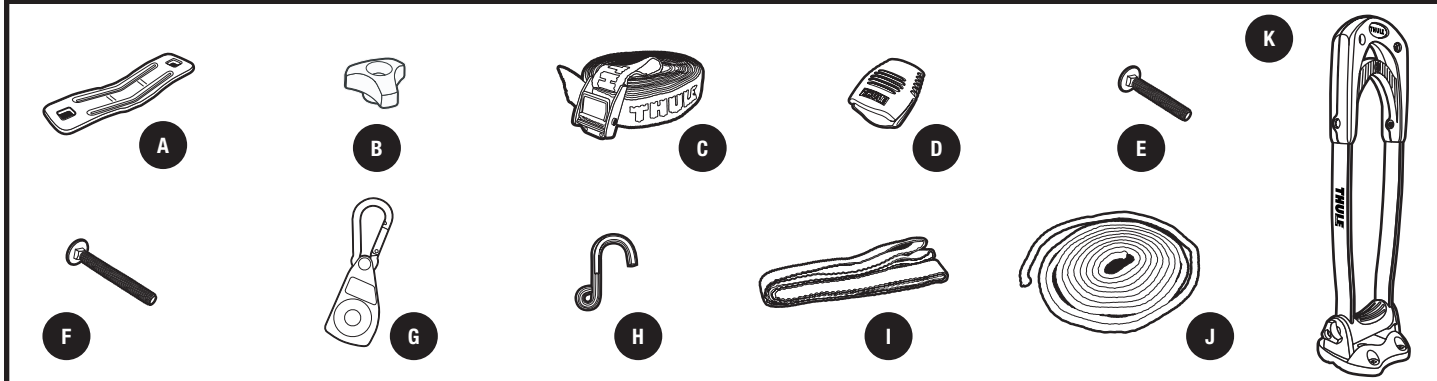
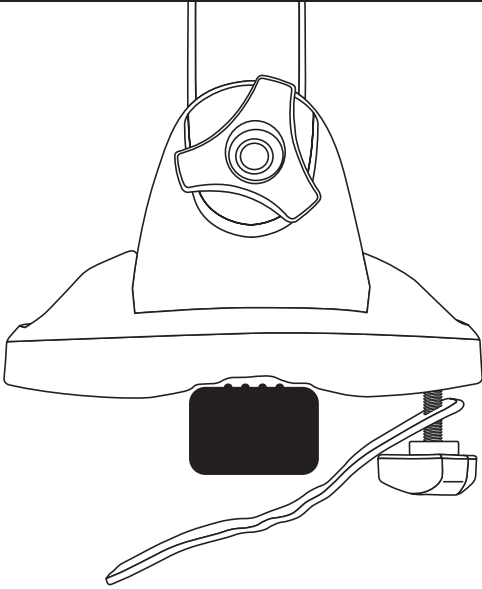
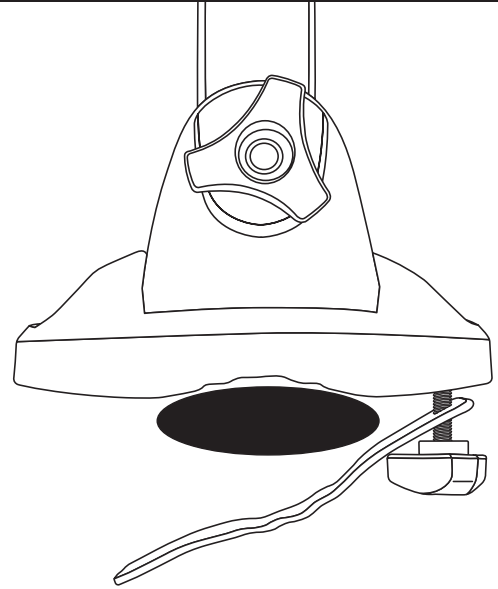


**PARTS INCLUDED**


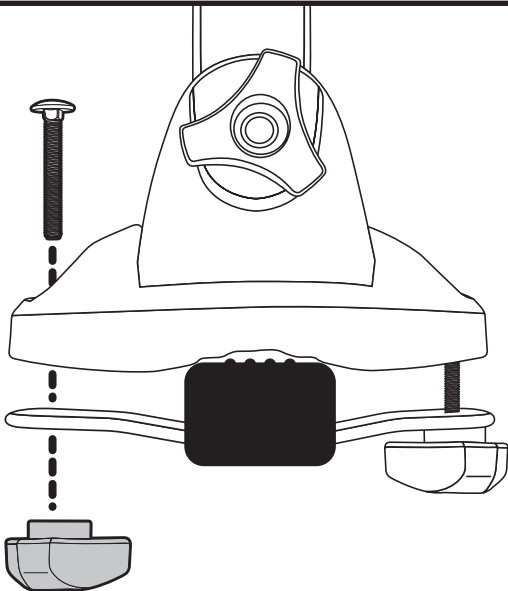
part	description	part number	qty.
A	metal bracket	853-5513	4
B	knob M6 low	753-0783	8
C	strap	753-2030-02	2
D	buckle bumper	853-5593	2
E	carriage bolt M6 x 50 mm	915-0650-31	8
F	carriage bolt M6 x 60mm	915-0660-31	8
G	ratchet with carabineer hook	8522883001	2
H	hook	853-5465	2
I	attachment strap	853-5467	2
J	1/4" rope	853-5466	2
K	stacker assembly	753-3247	2

**1****FOR USE ON AFTERMARKET ROOF RACKS**

- Thule square and Xsporter load bar and Yakima round load bar.
- Loosely attach 60mm carriage bolts (F) and knobs (B) as shown.


**OR**

- Look up your vehicle in the included Hardware Fit Guide. Identify the proper bolt length for your vehicle.
- Loosely attach carriage bolts and knobs (B) as shown.

**2**


- Place carrier on bars and loosely attach bolt and knob as shown.
- Load bars must be at least 24" (610mm) apart for safe use.
- Tighten all knobs firmly and evenly.

3

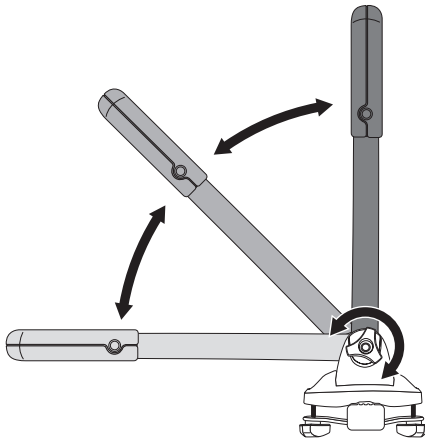


- Adjust stacker to upright position.
- Tighten side knob.
- Loosen knob to fold down when not in use.

4


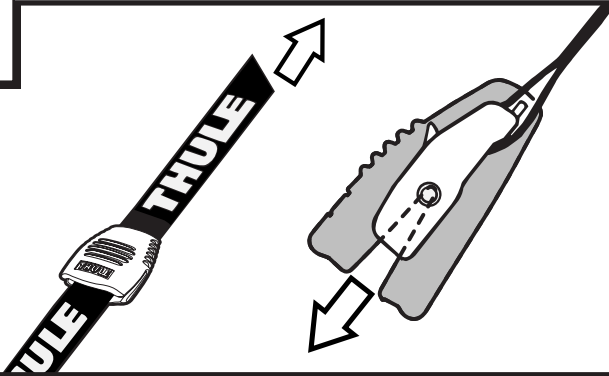


- Route free end of strap, with logo side up, through the Buckle Bumper as shown. Pull Buckle Bumper over buckle to protect boat and vehicle while strapping down boat.

5

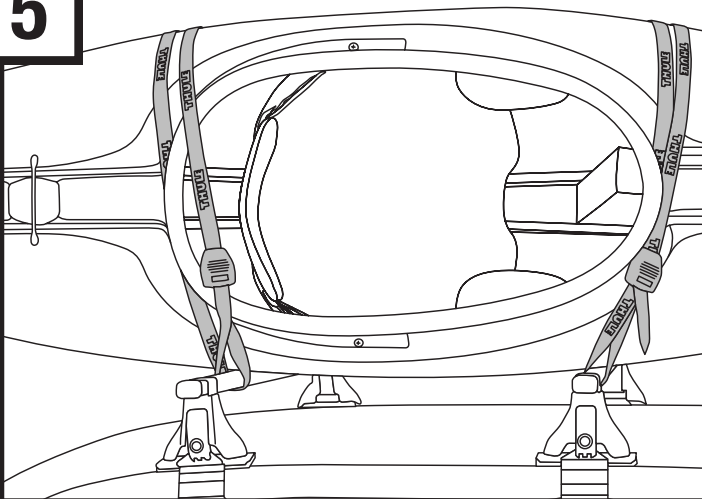

- Upon use, periodically check that the load is tied down firmly. Cinch strap through buckle tightly. Position strap away from all areas with exposed sharp edge.

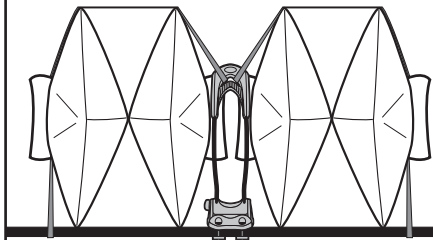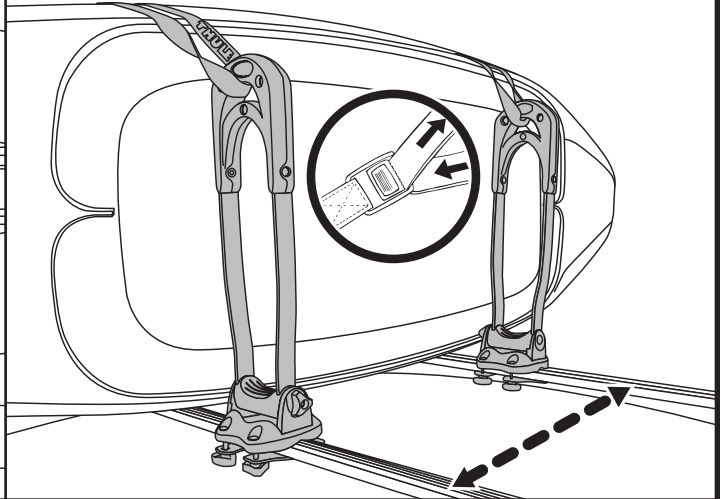


Max load: 4 kayaks.

Additional straps required

# 6


## BOW / STERN TIE DOWN

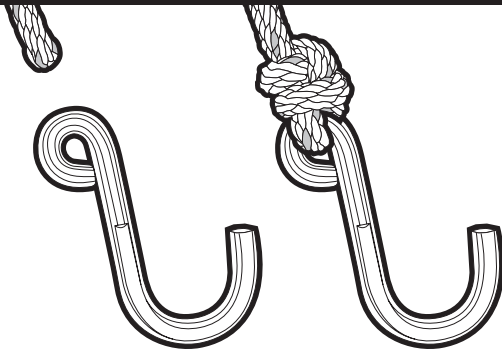


- Carefully attach hook to end of rope.

# 7

- Feed end of rope up through the bottom while rotating the spool clockwise.

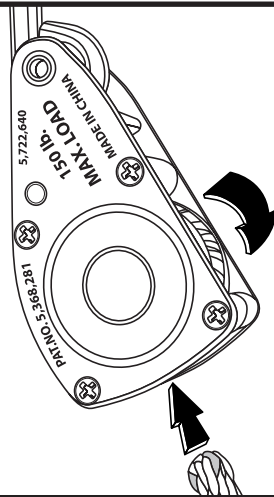


- Keep rotating the spool until rope exits at the bottom.

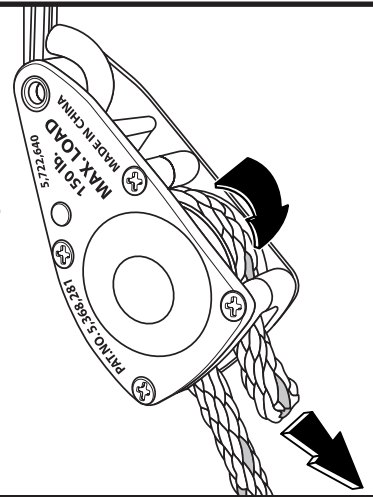


# 8

- Attach carabineer hook to boat strap or roof top cargo.
- Attach bottom hook to vehicle bumper or tow hook.

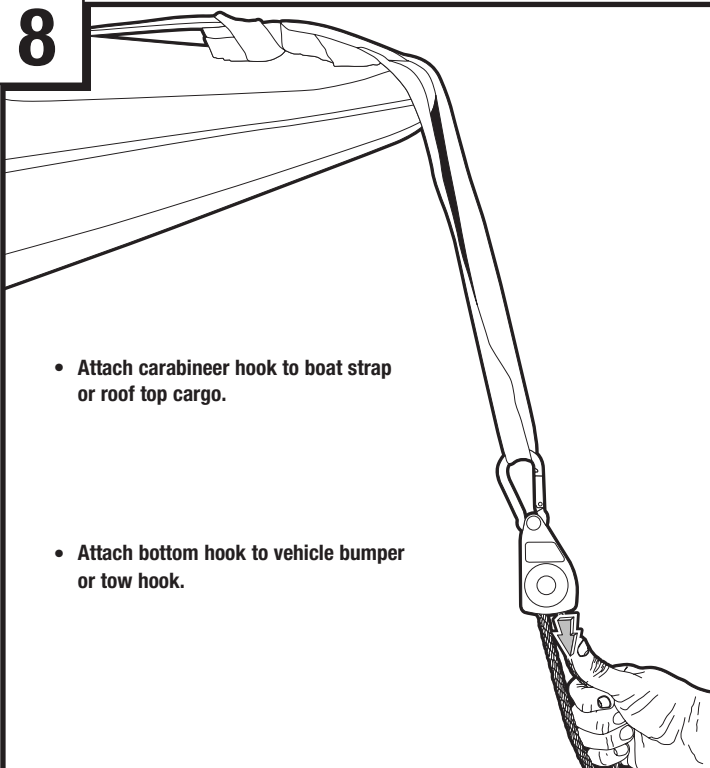


- Use attachment strap for better load clearance, if necessary.

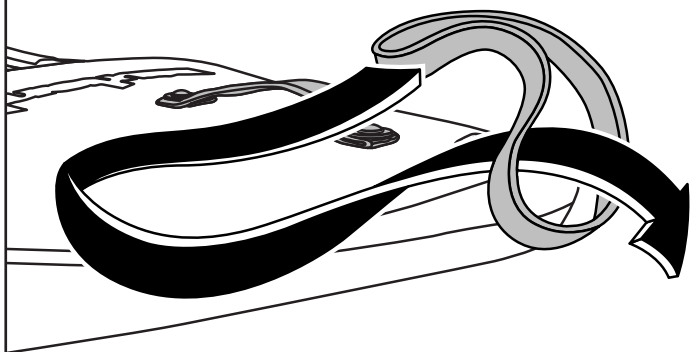


# 9

- Pull free end of rope until desired tightness is reached.
- Do not over tighten as this could deform boat.
- Each tie down will secure up to two kayaks.

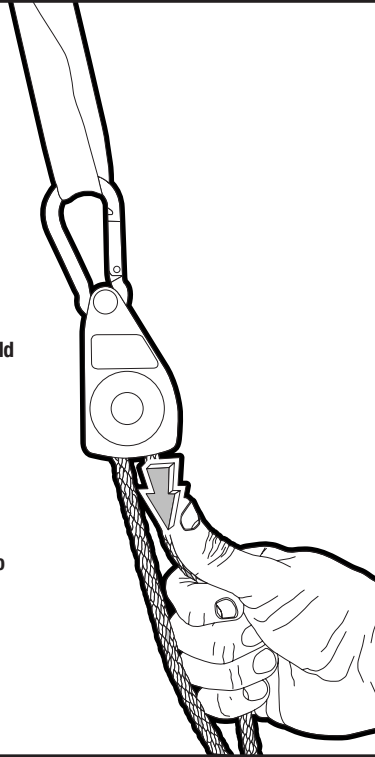


- To release, press lever located above ratchet spool.

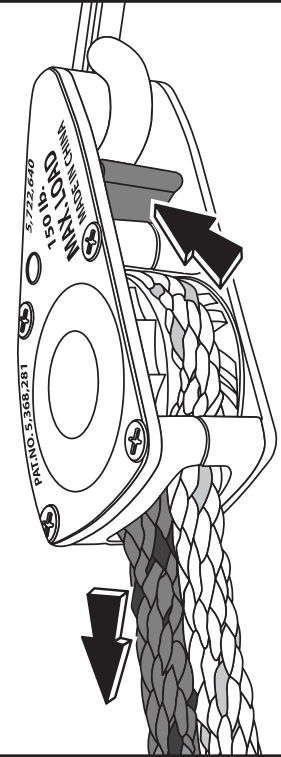


## WARNING:

Do not exceed load 150lb. limit of QuickDraw. Inspect rope and ratchet before each use. Do NOT use if damaged. Avoid sharp edges, pinch points, abrasive or hot surfaces.

# 10

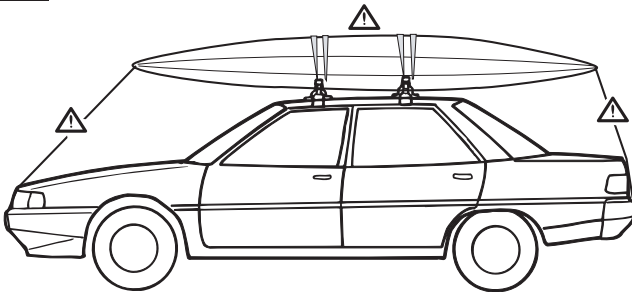

- Be sure to tie down bow & stern of boat to vehicle bumpers or tow hooks.

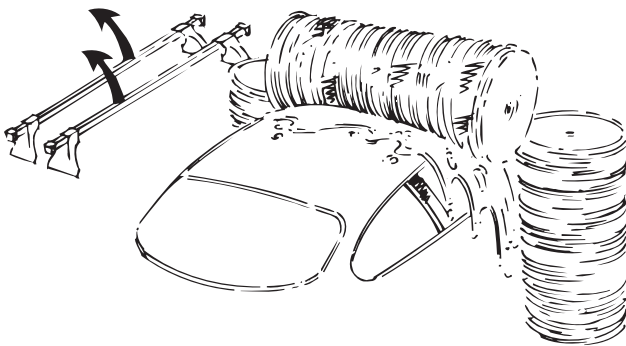

- Always remove the load carrier before putting the vehicle through a car-wash.