

ABSJRC01



Rear suspension package

INSTALLATION INSTRUCTIONS

- Raise vehicle allowing the axle to hang freely.
- Remove existing bump stop assembly.
- Assemble Aeon rubber spring and bracket as shown in the adjacent diagram.
- Mount Timbren assembly using existing holes & Timbren supplied fasteners.
- Lower vehicle.

Notes:

If vehicle has box frame, use OEM fasteners.
When removing OEM fasteners, use penetrating fluid.

Do not exceed vehicle manufacturer's recommended axle weight rating. Check for AEON® interference with vehicle components - Under load AEON® will "expand" in diameter.

| PART NUMBER | DESCRIPTION | QTY | LOCATION |
|-------------------|--------------------------------|-----|----------|
| F31003-150 | NYLOCK LOCKNUT 3/8 UNF GR 5 Z | 4 | G1C |
| F40031-020 | WASHER FLAT USS 3/8 x 1 GR 2 Z | 4 | G1C |
| F11063-150 | HCS 3/8 x 1-1/2 UNF GR 5 Z | 4 | G1C |
| F11102-150 | HCS 1/2 x 1-1/2 UNF GR 5 Z | 2 | G1D |



| | | | |
|---------------------|----------------------|---|-----|
| A00515-55F60 | Hollow Rubber Spring | 2 | C5B |
|---------------------|----------------------|---|-----|

| | | | |
|--------------------|--|---|------|
| K10048-003 | JRC01 WELDMENT PAINTED | 2 | E1A |
| A1602BA-003 | STEEL CUP 3-7/8 od x 13/32 id x 1/2" dp. PTD | 2 | D21A |

| | | | |
|-------------------|--------------------------|---|-----|
| B90215 | Carton 8.5 x 6.5 x 5 | 1 | A5A |
| B10000 | 8" x 12" BUBBLE FOR KITS | 1 | |
| B00029-010 | BARCODE LABEL FOR KIT | 1 | |
| B90121-010 | OFFROAD KIT BOX LABEL | 1 | |

Ref. = Reference
Part = Part #.
Qty. = Quantity

| Ref | Part | Qty |
|-----|--------------|-----|
| 1 | F11063-150 | 4 |
| 2 | K10048-003 | 2 |
| 3 | F40031-020 | 4 |
| 4 | F31003-150 | 4 |
| 5 | A1602BA-003 | 2 |
| 6 | A00515-55F60 | 2 |
| 7 | F11102-150 | 2 |

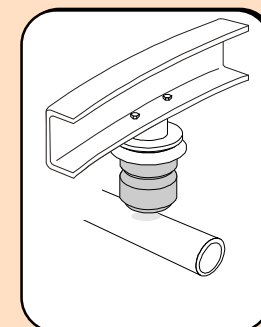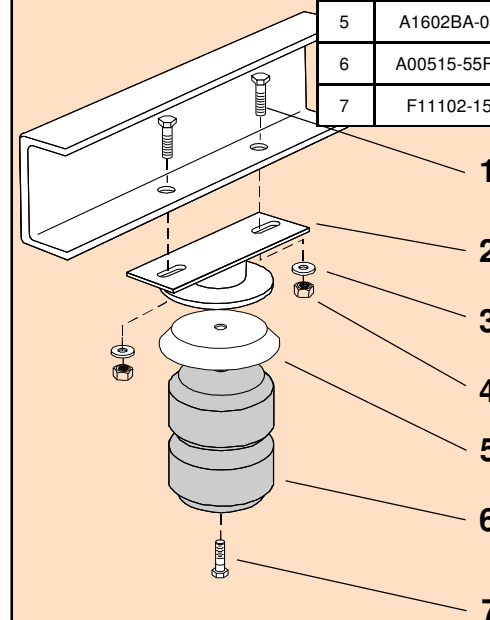

ABSJRC01

