



Thank you for your  
Tonno Pro purchase!



## Please Read Before Installing!

Your satisfaction is important to us, please let us help!

If you are having any problems with your Tonno Pro Tonneau Cover, please read the following steps to help us quickly respond to your requests.

Please take care in saving the box until after your installation is complete. If you have ordered incorrectly, having the original box and packaging materials will save you time and prevent possible return damages.

**ORDERED INCORRECTLY** - Please contact the store from which you purchased the cover and allow them to contact us to issue a Return Authorization number. The retailer will contact us immediately and we will respond promptly.

**SHIPPING DAMAGE** - Please inspect your cover carefully and do not install if you see any damage. Report the damage to the retailer where you purchased it from. They will contact us and we will take the necessary steps to send a new replacement cover.

**BROKEN OR DAMAGE PART(S)** - All parts are available for purchase on our website. Select the "PARTS" option in the menu bar at the top of the page. We have included images of all the different parts that are available for your cover. Your order will be shipped within 24 hours after your order is placed.

**WARRANTY ISSUES** - If you believe you have a warranty issue that may be considered a manufacturing defect, please follow these instructions. For warranty details please see page 4 of this instruction booklet.

- Make sure the product is registered on the Tonno Pro website.
- Contact the Tonno Pro retailer where you purchased the cover.
- Please have your serial number and digital images readily available to email to the Tonno Pro Retailer upon request. This will help expedite the warranty process.
- Please allow up to 72 business hours for further instructions on how the claim will be processed.


For easy reference please write the serial number in the boxes below. Serial numbers can be found on the driver's side front crossbeam.

Write serial  
number here.


--	--	--	--	--	--	--	--

### Hardware:

Everything comes pre-assembled. No hardware or tools are needed for this installation. The Front & Rear Clamps are the main moving components. Please be sure you have 2 of each attached to the cover before you begin your installation.


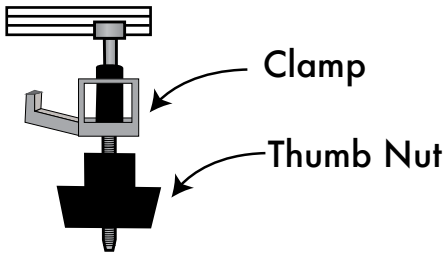


Front Slide-Clamp Mechanism

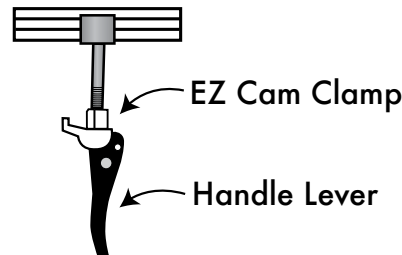


Rear Slide EZ-Clamp Mechanism


1. Center the cover on the front end of the bed and the side rails, and begin to tighten the clamps until they are snug. **Do not tighten completely.** Repeat on the opposite side of the truck.

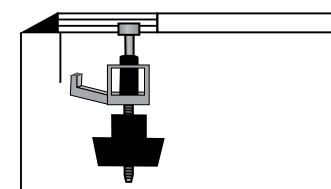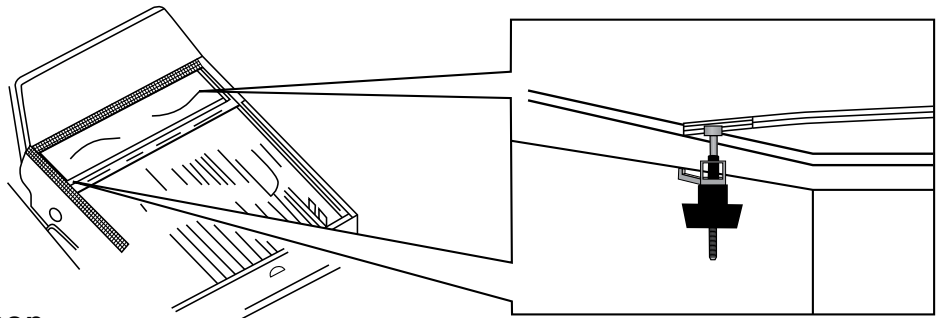

Adjust front slide-clamp to proper height.

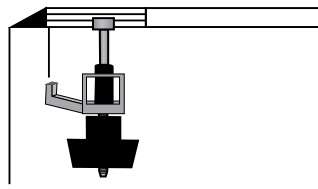


Slide front clamp holder under truck bed rail.

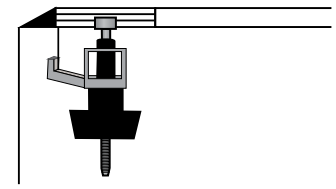


Rotate thumb nut to tighten clamp enough (not too tight).

2. Unclip the snap clips located in the front of the cover allowing the cover to unfold. The cover has retaining straps with quick-release buckles to keep it from being damaged when bulk hauling or when it is not on the vehicle. **Failure to install the front slide-clamps properly will result in cover fly-off which is not covered by Manufacturer's Warranty.**

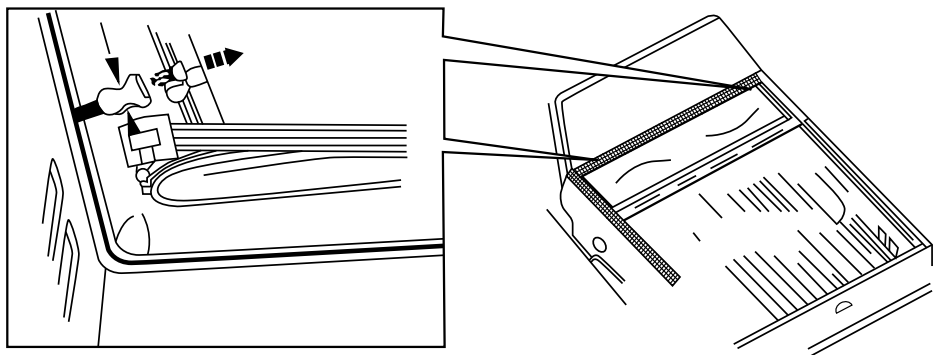


3. Unfold the cover completely and begin to adjust the rear EZ-Clamps at the rear of the bed. Again, make sure they are snug but **not tightened completely**. (Both front and rear clamps will be tightened completely in a later step.)

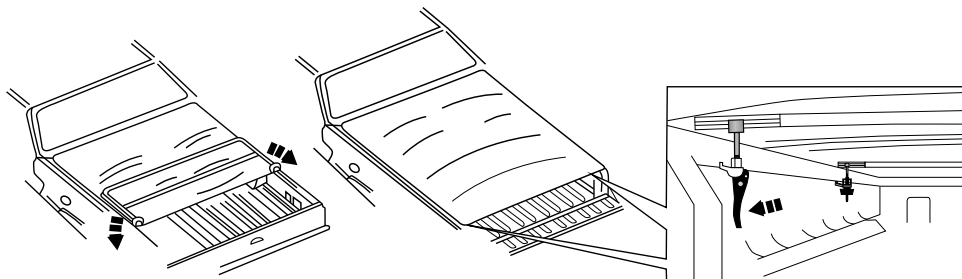


 **Tighten**  
"Counter Clockwise"


 **Loosen**  
"Clockwise"

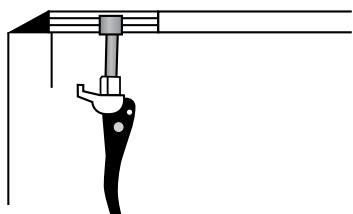

Rotate handle lever down from its storage position. Adjust clamps to proper height.

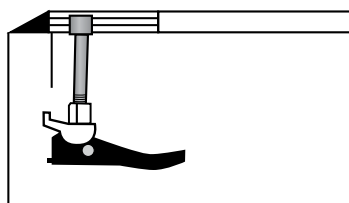

Slide handle lever to edge of truck bed rail.

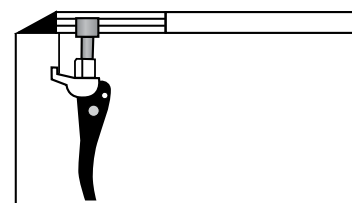

Rotate handle lever to locking position. Repeat for opposite side.

4. Shut the tailgate and make sure the cover is centered around the perimeter of the top of the truck bed. Being sure that the clamps are just snug, you should be able to gently adjust the cover from front to rear or side to side as needed to center the cover over the bed of your truck.
5. Once you have the cover in the desired position, pull the cover back into the open position in order to firmly tighten the front clamps. **When you pull the cover to the open position, it is important to make sure you secure your rear clamping handles into the lock position to avoid damage to your cover.**



**WARNING:** Rear EZ-Clamps must be locked in the closed position before folding the cover. Failure to do so could cause damage to cover.

**NON-WARRANTY!**

6. Once you have tightened the front clamps and your Q gaskets are sealed, unfold the cover and make the necessary adjustments to tighten and secure the rear clamps.

**WARNING:** Prior to vehicle operation, clamps must be secured so that the clamp's lips tightly grip the inner bedwall structure.

#### Limited Lifetime Warranty

- ▶ Tonno Pro offers a limited lifetime warranty against defective materials or workmanship on all aluminum rails, aluminum components, clamps, hinges, bows and hardware.
- ▶ 10 Year Vinyl – Tonno Pro uses the highest quality 24 oz vinyl in the industry. We offer a full 10 year warranty against defective materials or workmanship on the vinyl cover.

#### Warranty Conditions

This warranty is against defective materials or workmanship. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, improper service or installation. Any modification, acts of God, normal wear and tear or other causes not arising from defective materials or workmanship is not considered under this warranty.

#### Examples of Conditions That Void Our Warranty:

- ▶ **Wind Whip Damage** – The cover must be secure to truck when vehicle is in motion.
- ▶ **Improper Cleaning** – The use of cleaning chemicals not approved for cleaning vinyl. Do not use products such as Armor All. These are vinyl conditioners and will cause the vinyl to shrink or to fade prematurely.
- ▶ **Overloading of Cargo** – Cargo must not be allowed to touch the cover in any position. Protrusions in the vinyl will cause stress in the fabric and cause unnecessary weak spots in the material.
- ▶ **Securing the Rear EZ-Clamps** - Failure to properly close the rear EZ-Clamp handles will allow the cover to open and flap in the wind. This will cause the hinges to slam on the truck and break.

#### Execution and Performance

Tonno Pro reserves the right to determine if all warranty conditions have been met. Upon determination, Tonno Pro may require the product to be returned postage prepaid to further inspect the warranty claim. Given that all conditions are met, Tonno Pro will either repair or replace (at Tonno Pro's determination) the product or the component. In the event that a product must be returned, our Return Authorization # must be obtained through our customer service department and must be on the returned parcel for it to be accepted. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

## TONNEAU COVER MAINTENANCE

To prolong the usage and function of your tonneau cover, you should check it regularly for wear, proper fit, and debris caught on the cover. Check mounting hardware regularly to insure that all clamping mechanisms are tight and secure.

1. When cleaning your tonneau cover, make sure to clean your vehicle and cover in a shaded place like under a tree or in an open garage.
2. First flood the cover with water to remove surface grit that will scratch the finish when wiped. Wash your cover with cool, clean water and a mild soap.
3. Next, using a hose, rinse the cover well making sure to remove all traces of soap and wipe off excess water using a sponge. Be careful to hose down the entire truck to prevent soap from streaking your truck's paint finish. Do not use chemicals like detergents, dish washing liquids, bleaches, harsh cleansers, strong cleaners, dry-cleaning solvents, or any other strong chemicals as a cleanser.
4. Apply some quality vinyl cleaner that you can find in the nearest auto shop. Using a white all-cotton towel, wash the entire tonneau cover with the cleaner. **Never spot clean** your tonneau cover to avoid rings or bright spots on your tonneau cover. Make sure that you only use a **soft cotton cloth** or **sponge** as a cleaning tool. Do not use rough, abrasive cleaning pads because these can scratch the vinyl, creating pores that allow dirt and other unwanted particles to stick. **Do not use vinyl protectants that contain petroleum, silicone or citrus-based additives to ensure your cover looks its best!**

Learn more about tonneau covers we have.