

#### **OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.** IMPORTANT OWNER-OPERATOR INSTALLATION INSTRUCTIONS

# M9003 20K(9072kg) MAGNUM

## **PINTLE ADAPTER**

#### **APPLICATION FITS**

-ORIGINAL 17K(7711kg) SUPERHITCH -MAGNUM 20K(9072kg) SUPERHITCH -ORIGINAL 20K(9072kg) SUPERHITCH - 30K(13,608kg) SUPERHITCH

Minor movement (or settling) can occur in some incidental harsh driving conditions (On or off road). A rubber bed mat is not a requirement to maintain the lifetime warranty on a Torklift system, but a strong recommendation, simply as a safety precaution to protect the truck bed, the bottom of the camper and to give the camper additional support.

Warning!!


TORKLIFT <u>DOES NOT</u> RECOMMEND: Installing your truck camper in your truck on top of a drop in plastic bed liner!!! <u>THIS WILL VOID YOUR WARRANTY</u>!

The drop in plastic bed liners can slide on top of the truck bed surface, and the camper can slide on top of the slick surface of the bed liner. The liner can also act as a spring causing a trampoline effect increasing vertical truck camper movement, independent of the vehicle, possibly resulting in truck bed damage and/or camper damage!

### **M9003 PARTS INVENTORY**

- 1-20K(9072kg) MAGNUM PINTLE ADAPTER
- 4- 1/2"X2-1/2" GRADE 8 BOLT
- 4-1/2" NUT GRD 8
- 4-1/2" FLATWASHERS SAE
- 4-1/2" LOCKWASHERS

#### NOTE- PARTS THAT ARE FADED SOLD SEPERATELY.

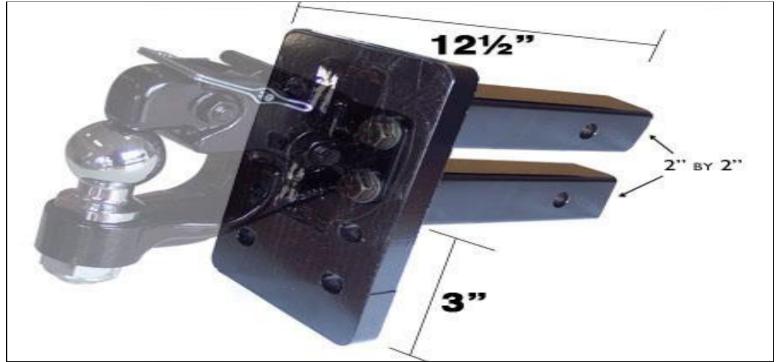

NOTE: ALL HARDWARE MUST BE TIGHTENED TO 100 FT POUNDS(135nm)

#### <u>ALSO AVAILABLE:</u> M9003 BALLMOUNT ACCESSORIES-(SOLD SEPERATELY

M9004 MAGNUM 20K BALLMOUNT ADAPTER





