



OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

IMPORTANT OWNER-OPERATOR INSTALLATION INSTRUCTIONS

M9010/30K (13607Kg) MAGNUM SHANK

1" HOLES

APPLICATION FITS

-ORIGINAL SUPERHITCH

-SUPERHITCH MAGNUM

Minor movement (or settling) can occur in some incidental harsh driving conditions (On or off road). A rubber bed mat is not a requirement to maintain the lifetime warranty on a Torklift system, but a strong recommendation, simply as a safety precaution to protect the truck bed, the bottom of the camper and to give the camper additional support.


Warning!!

TORKLIFT DOES NOT RECOMMEND: Installing your truck camper in your truck on top of a drop in plastic bed liner!!! THIS WILL VOID YOUR WARRANTY!

The drop in plastic bed liners can slide on top of the truck bed surface, and the camper can slide on top of the slick surface of the bed liner. The liner can also act as a spring causing a trampoline effect increasing vertical truck camper movement, independent of the vehicle, possibly resulting in truck bed damage and/or camper damage!

M9010 PARTS INVENTORY

1- DOUBLE SHANK 30K(13607kg) MAGNUM
BALL MOUNT W/ 1" HOLES

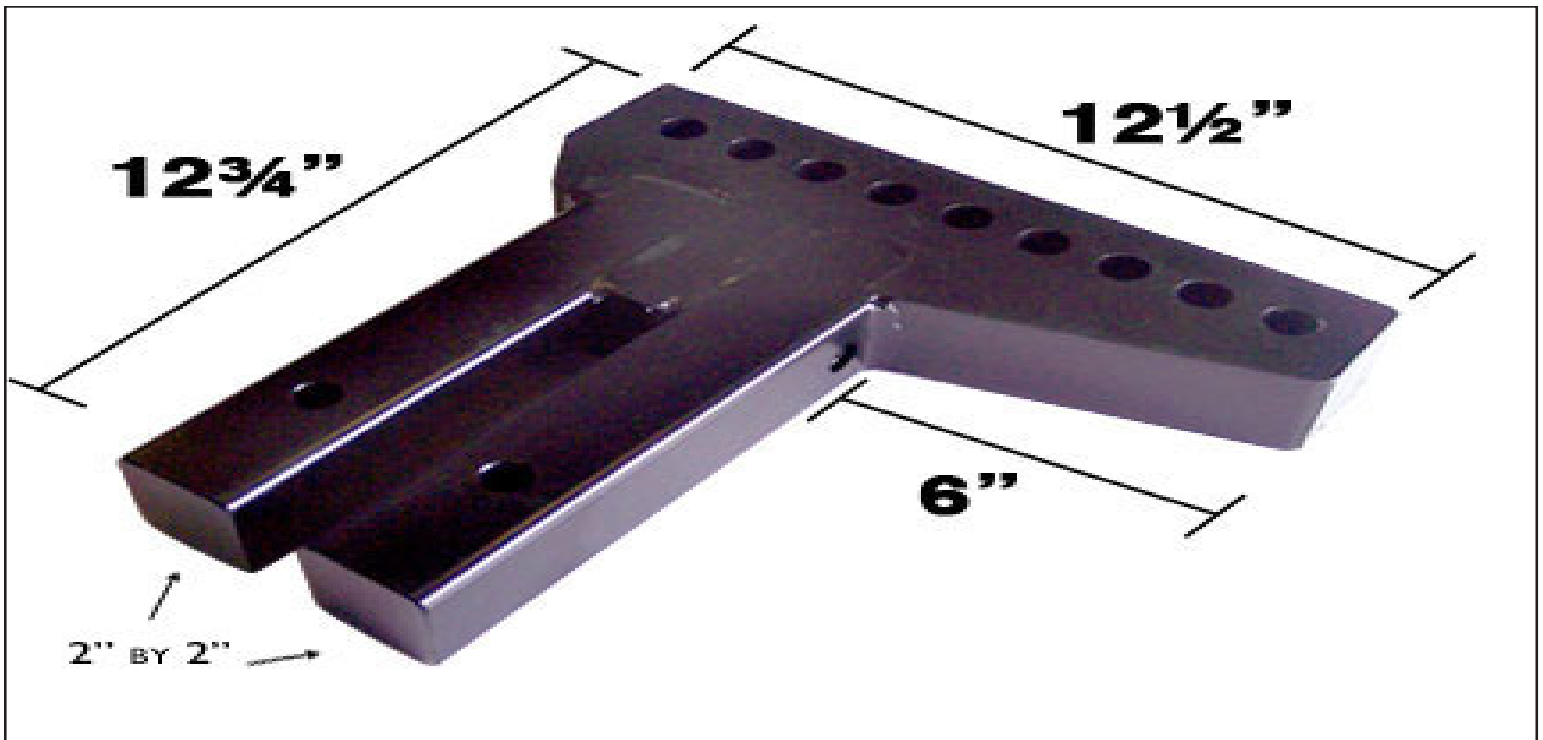

ONLY USED WITH THE EVEREST WEIGHT DISTRIBUTION SYSTEM (WD1000) DUE TO THE 1" HOLES. THIS WILL NOT WORK WITH ANY OTHER AFTERMARKET BALL MOUNT WITH 3/4" HOLES.