




## 3" Side Bar

Part No. A0005S/B




Fits: **2005-Current**

**Nissan Frontier Crew Cab**



60-180 min



CUTTING NOT  
REQUIRED




DRILLING NOT  
REQUIRED



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM **45** TO **65** FOOT POUND.


### PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Passenger/Right Side Bar	12	8-1.25mm x 30mm Hex Head Bolts
1	Driver/Left Side Bar	24	8X24mm O.D.X2mm Flat Washers
1	Front Passenger/Right Side Mounting Bracket	24	8mm Lock Washers
1	Rear Passenger/Right Side Mounting Bracket	12	8-1.25mm Nuts
1	Front Driver/Left Side Mounting Bracket	1	Rear Driver/Left Side Mounting Bracket
2	Middle Brackets		

### INSTALLATION PROCEDURE

1. On the passenger/right side, if equipped, remove the existing running board by removing the four nuts holding mount to inside of body. Install the two passenger/right side mounting brackets with the removed stock nuts, leave nuts loose for now. **NOTE:** Holes in brackets are off set, install with holes towards front of truck, passenger/right side shown. See Fig. #1
2. If not equipped with factory running boards – then use the four supplied 8mm nuts, washers & lock washers to install mounting brackets to truck.
3. Repeat procedures 1 & 2 for driver/left side.
4. Install side bar onto mounting brackets using four 8X30mm hex head bolts, four 8mm lock washers & four 8mm flat washers. Leave bolts loose – short end whole pattern installs towards the front of truck, passenger/right side shown.
5. Repeat procedure #4 on driver/left side.
6. Level and adjust side bars as desired and tighten.
7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**FIG. #1 PASSENGER SIDE SHOWN**

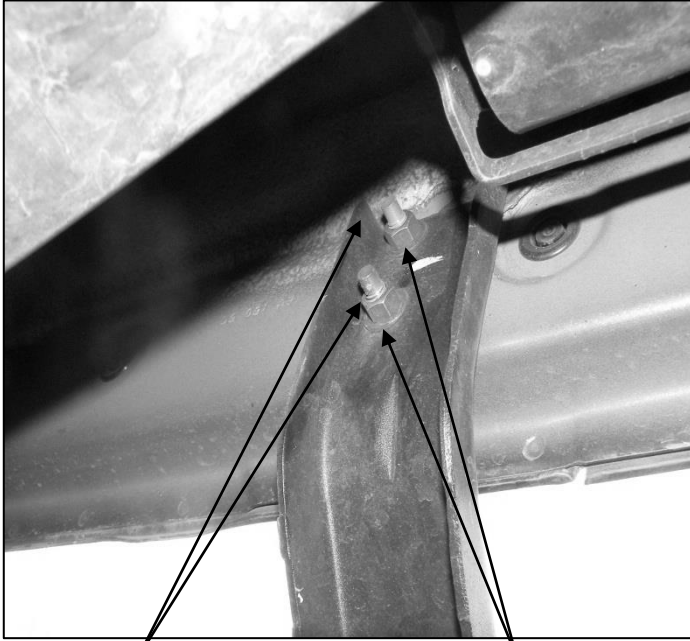

**FIG. #2 PASSENGER SIDE SHOWN**



**SHORT END HOLE PATTERN**

**EXISTING NUTS**  
**NOTE: If vehicle is not equipped with factory Sidebars use the included 8mm Hex Nuts 8mm Lock Washers 8mm Flat Washers**

**OFF CENTER HOLES**


## PARTS IDENTIFICATION GUIDE

*Driver Side tube packed using "Green" color foam sheet. Passenger Side tube packed using "White" color foam sheet*

No.	Parts Identification
1	Passenger / Right 'Rear' Bracket marked "PR"
2	Driver / Left 'Rear' Bracket marked "DR"
3	Passenger / Right 'Center' Bracket marked "PC"
4	Driver / Left 'Center' Bracket marked "DC"
5	Passenger / Right 'Front' Bracket marked "PF"
6	Driver / Left 'Front' Bracket marked "DF"

### Note:

- This guide is to identify the parts and not a reference for part count.
- Product / Bracket image is for representative purpose only.
- Actual design may vary based on application.
- Refer Installation Instructions for Hardware Kit detail.

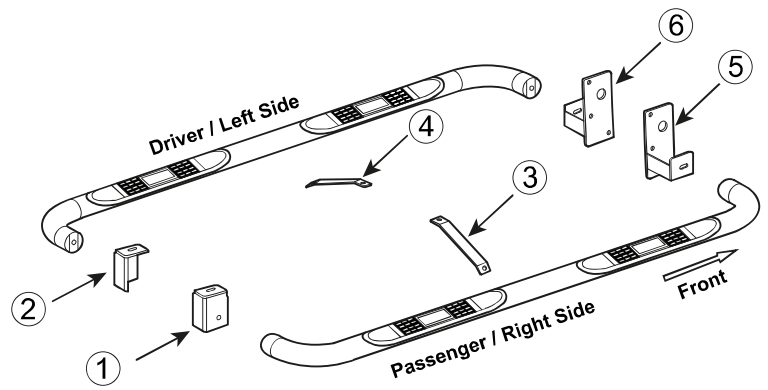

## PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- Regular waxing is recommended to protect the finish of the product.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- Aluminum polish may be used to polish small scratches and scuffs for **Stainless Steel finish.**
- Mild soap may be used to clean the product for both **Stainless Steel and Black finish.**

## FAQ's

1. **Hardware's are not of correct size.**  
In GMC / Chevrolet truck model 2006 & up, customer needs to reuse the factory body bolts to install the bracket. If your vehicle is not GMC / Chevrolet 2006 & up, please ensure that holes are not partially covered with any plastic grommet or rust? If it is, please remove the plastic grommet & rust from the thread holes & re-try the installation.
2. **Mounting Bracket are not getting Installed properly.**  
In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.
3. **Products are thumping / rattling after installation.**  
Please ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.
4. **Side Bar is not aligning with vehicle / Step Pads are not aligning with vehicle doors.**  
Side bar may be interchanged or mounting brackets are not installed at the correct position in the vehicle. Please refer Parts identification guide.
5. **Missing / Excess Hardware.**  
Recheck hardware count as per the part list.
6. **Product not installing properly.**  
Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.