



5" Oval Nerf Bar

Part No. A7031S/B



Fits: 2004 - Current


Nissan Titan Crew Cab



CAN FIT IN DIESEL TRUCKS



60-180 min



Cutting Not Required




Drilling Not Required



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.





READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM 45 TO 65 FOOT POUND.


PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Driver/Left Sidebar	12	8-1.25mm x 25mm Hex Bolts
1	Passenger/Right Sidebar	18	8mm Lock Washers
3	Driver/Left Mounting Brackets	18	8mm x 24mm OD x 2mm STD Flat Washers
3	Passenger/Right Mounting Brackets	6	8mm x 16mm OD x 1.6mm Small Flat Washers
6	8-1.25mm x 30mm Hex Bolts	6	8mm Nylon Lock Nuts

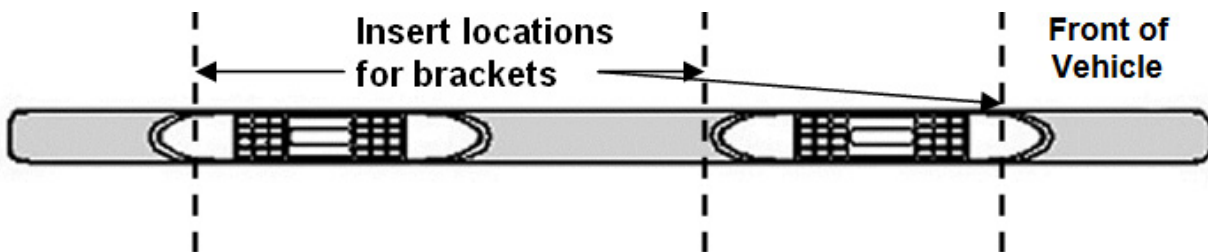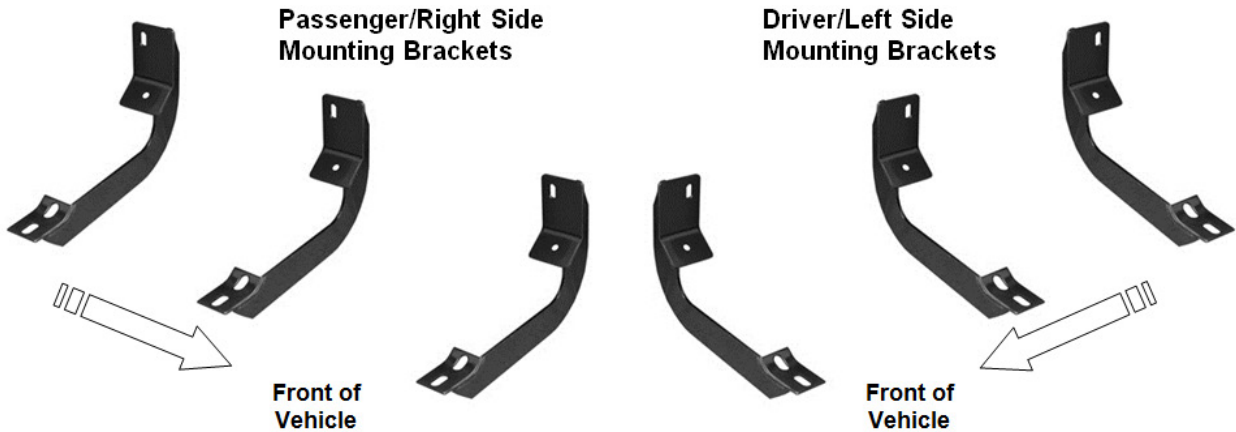

INSTALLATION PROCEDURE:

1. Start installation at the front of the driver side of the vehicle and locate the factory threaded stud and the threaded hole located on the side of the inner body panel, **(Figure 1)**. **NOTE:** Remove the plastic plug or any insulation on the side panel to locate the threaded holes.

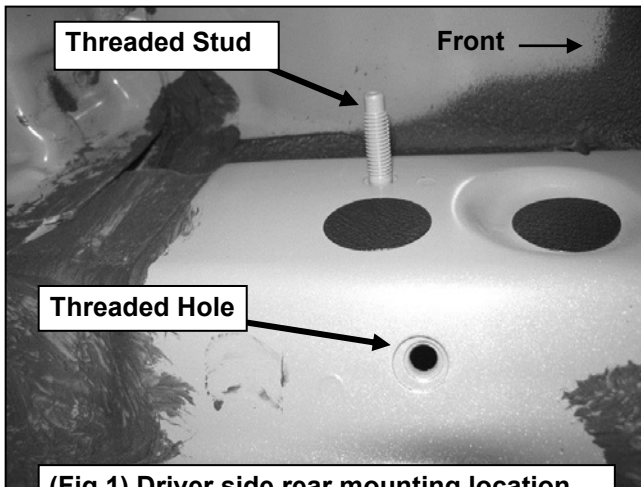


(Fig 1) Driver side rear mounting location pictured. Note: Remove plastic plugs to locate factory threaded holes

2. Select (1) driver side Mounting Bracket. Attach the Bracket to the threaded stud with (1) 8mm x 24mm STD Flat Washer and (1) 8mm Nylon Lock Nut. Next, insert (1) 8mm x 30mm Hex Bolt with (1) 8mm Lock Washer and (1) 8mm x 16mm Small Flat Washer through the remaining lower hole in the Bracket and into the threaded hole, **(Figure 2)**. Snug but do not tighten hardware at this time.


8mm x 30mm Hex Bolt
8mm Lock Washer
8mm x 16mm Small
Flat Washer

8mm Nylon Lock Nut
8mm x 24mm STD
Flat Washer

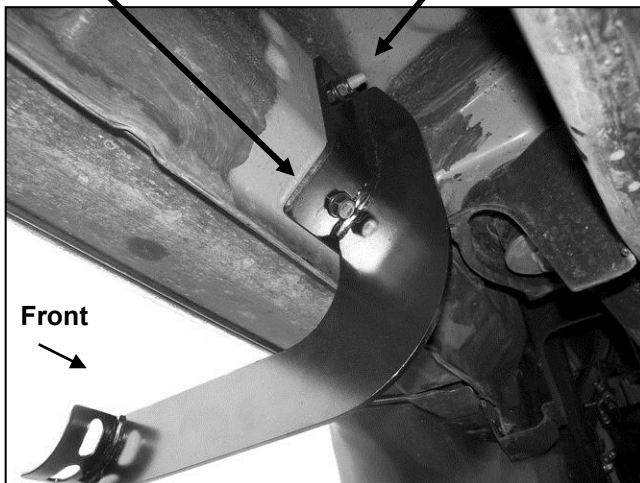


(Fig 2) Driver side front mounting location pictured

3. Repeat **Steps 1 – 2** to install the center and rear Mounting Brackets, (**Figures 2 – 4**). **NOTE:** The cradles on the Mounting Brackets should be facing the rear of the vehicle when properly installed.
4. Once all three Mounting Brackets are partially installed, carefully place the driver Sidebar onto the Mounting Brackets. Use the included (6) 8mm x 25mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm x 24mm STD Flat Washers to bolt the Sidebar to Mounting Brackets, (**Figures 3 & 4**).

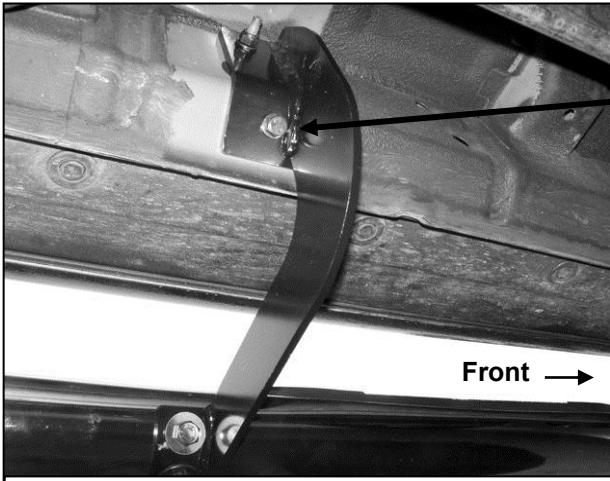

8mm x 30mm Hex Bolt
 8mm Lock Washer
 8mm x 16mm Small Flat Washer

(Fig 3) Driver side center mounting location pictured

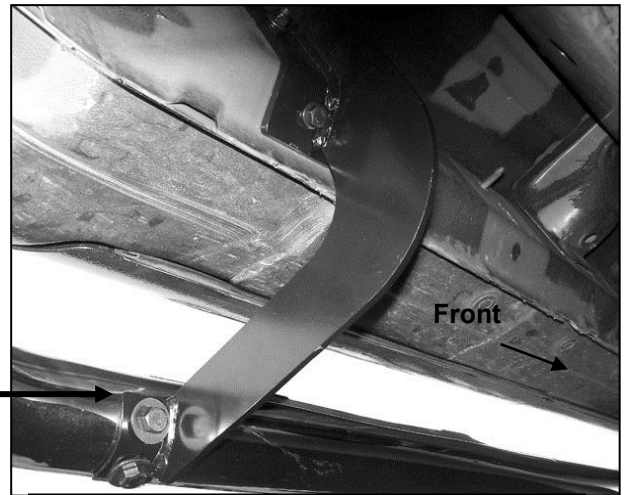

(2) 8mm x 25mm Hex Bolts
 (2) 8mm Lock Washers
 (2) 8mm x 24mm STD Flat Washers

(Fig 4) Driver side rear location pictured

5. Level and adjust the Sidebar and tighten all hardware at this time.
6. Repeat **Steps 1 – 5** for passenger Sidebar installation.



Complete Installation


PARTS IDENTIFICATION GUIDE

Driver Side tube packed using "Green" color foam sheet. Passenger Side tube packed using "White" color foam sheet

No.	Parts Identification
1	Passenger / Right 'Rear' Bracket marked "PR"
2	Driver / Left 'Rear' Bracket marked "DR"
3	Passenger / Right 'Center' Bracket marked "PC"
4	Driver / Left 'Center' Bracket marked "DC"
5	Passenger / Right 'Front' Bracket marked "PF"
6	Driver / Left 'Front' Bracket marked "DF"

Note:

- This guide is to identify the parts and not a reference for part count.
- For part count, refer Parts List.
- Product / Bracket image is representative and actual design may vary.

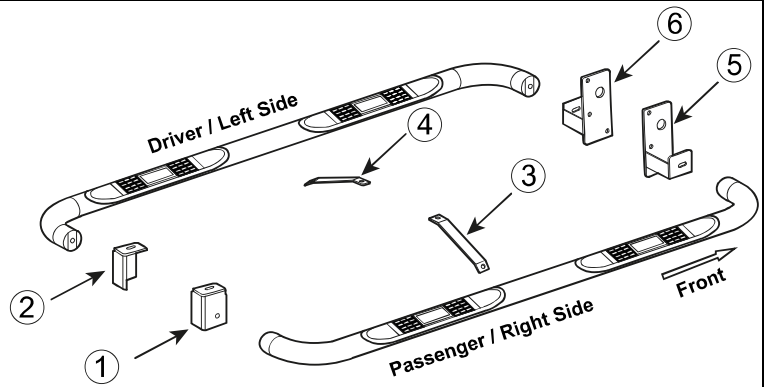

PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- Regular waxing is recommended to protect the finish of the product.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- Aluminum polish may be used to polish small scratches and scuffs for **Stainless Steel finish.**
- Mild soap may be used to clean the product for both **Stainless Steel and Black finish.**

FAQ's

1. Hardware's are not of correct size.

In GMC / Chevrolet truck model 2006 & up, customer needs to reuse the factory body bolts to install the bracket. If your vehicle is not GMC / Chevrolet 2006 & up, ensure that holes are not partially covered with any plastic grommet or rust? If it is, remove the plastic grommet & rust from the thread holes & re-try the installation.

2. Mounting Bracket are not getting Installed properly.

In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.

3. Products are thumping / rattling after installation.

Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.

4. Side Bar is not aligning with vehicle / Step Pads are not aligning with vehicle doors.

Side bar may be interchanged or mounting brackets are not installed at the correct position in the vehicle. Refer Parts identification guide.

5. Missing / Excess Hardware.

Recheck hardware count as per the part list.

6. Product not installing properly.

Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.