

HARDWARE PARTS LIST			
Qty	Part Description	Qty	Part Description
16	M8x20 Hexagon flange bolts	16	M8 Hexagon flange nuts



INSTRUCTION PROCEDURE

1. Please check the hardware count as listed above.



Install Front fender flare


- 8xM8x110 Hexagon flange bolts
- 8xM8 Hexagon flange bolts nuts



Install bolts and nuts on the corresponding hole.



Install bolts and nuts on the corresponding holes.

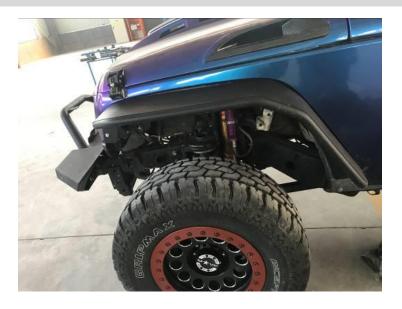

Installation completed

PRODUCT CARE

- 1. Periodically check the product to ensure all fasteners are tight and components are intact.
- 2. Regular waxing is recommended to protect the finish of the product.
- 3. Use ONLY Non-Abrasive automotive wax. Use of any soap, polish or wax that contains an abrasive is detrimental and Can scratch

the finish leading to corrosion.

FAQ's

- Products are thumping / rattling after installation.
 Please ensure that all required mounting brackets / hardware's are installed & tighten correctly.
- 2. Missing / Excess Hardware.

Recheck hardware count as per the part list.

Check out these other TrailFX Products!!

