



Rear Fender Flare J052RF



2007 - Current:

Jeep Wrangler JK



TO AVOID BEING SCRATCHED, PLEASE PROTECT THE SURFACE OF THE FENDER FLARE CAREFULLY.



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



PLEASE USE SAFETY GLASSES & ENSURE TO BLOCK VEHICLE MOVEMENT DURING INSTALLATION PROCESS



60-180 min



Cutting Not Required



Drilling Not Required

HARDWARE PARTS LIST

Qty	Part Description	Qty	Part Description
4	M8x50 Outer Hex Bolts	10	M6x50 Outer Hex Bolts
10	M6x20x2 Flat Washer	4	M8x24x2 Flat Washer
10	M6 Rivet nuts	4	M8 Hexagon flange nuts



INSTRUCTION PROCEDURE

1. Please check the Hardware counts as per the list above.




Use the below hardware parts to install fender flare

- 5xM6 Rivet nuts
- M6 Rivet nuts into the hole in the car.
- 5xM6x5 Outer Hex Bolts
- 5xM6x20x2 Flat Washer.



Use the below hardware parts to install fender flare

- 2xM8x50 Outer Hex Bolts
- 2xM8x24x2 Flat Washer
- 2xM8 Hexagon flange nuts

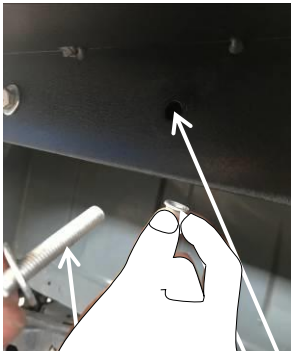

Install bolts and nuts on the corresponding hole.



Install bolts and nuts on the corresponding hole.



Installation completed

PRODUCT CARE

1. Periodically check the product to ensure all fasteners are tight and components are intact.
2. Regular waxing is recommended to protect the finish of the product.
3. **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and Can scratch the finish leading to corrosion.

FAQ's

1. **Products are thumping / rattling after installation.**
Please ensure that all required mounting brackets / hardware's are installed & tighten correctly.
2. **Missing / Excess Hardware.**
Recheck hardware count as per the part list.