




# 54" DOUBLE ROW CURVED LIGHT MOUNTS

Part No. MBC04B



Fits: 2014 - Current  
2014 - Current

Chevrolet Silverado 1500/2500/3500 HD  
GMC Sierra 1500/2500/3500 HD



35-45 min

Cutting Not Required


Drilling Required



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM 45 TO 65 FOOT POUND.

### PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Light Bar Driver Side Bracket	7	40 mm x 2.5 mm Rivets
1	Light Bar Passenger Side Bracket	2	Gaskets

### TOOLS NEEDED


Part Description	Part Description
3/16" Drill Bit	Tape Measure
Pop Rivet Gun	




## INSTALLATION INSTRUCTIONS

1. Install the gaskets on the back side of the light brackets. Open the driver door and measure 18 1/8" from the front of the A-pillar to the edge of the light bracket. Mark the position of the light bracket. See Image 1.
2. Next hold the light bracket in position and drill the three holes through the sheet metal with a 3/16" drill bit as shown in Image 2

**NOTICE:** *May want to place a piece of tape on the drill bit 1/2" from the end for a depth gage. Drilling to far will damage the outside painted surface of the A-pillar.*

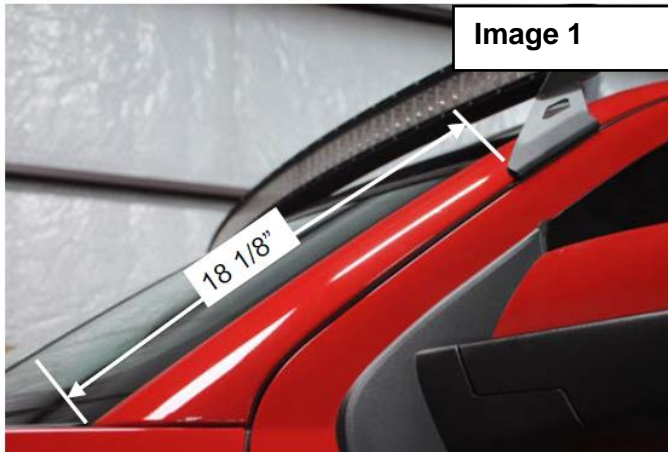

3. Use the supplied 3/16" rivets to secure the light brackets. See Image 3. Repeat steps on the passenger side.
4. Install the Led Light with the supplied instructions. See Image 4.

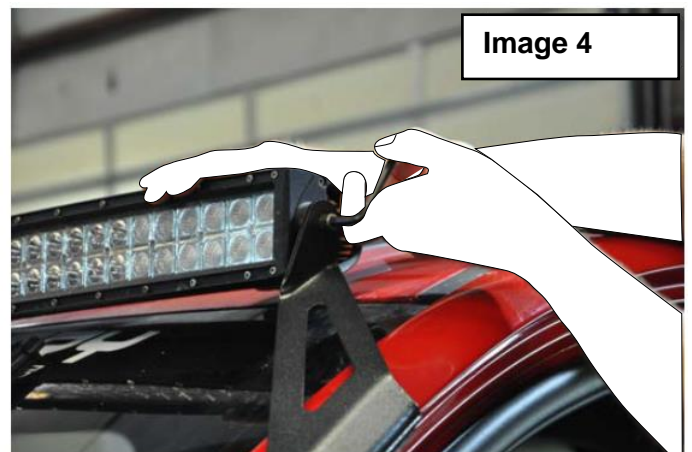

## PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- Regular waxing is recommended to protect the finish of the product.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.

## FAQ's

**1. Mounting Bracket are not getting Installed properly.**

*In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.*

**2. Products are thumping / rattling after installation.**

*Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.*

**3. Missing / Excess Hardware.**

*Recheck hardware count as per the part list.*

**4. Product not installing properly.**

*Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.*

## Check out these other FX-Products Products!!



**BULL BAR**



**GRILLE GUARDS**



**BED RAILS**



**RUNNING BOARDS**

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.