




Installation Instructions for


Billet Aluminum Throttle Cable Bracket

TFS-20000

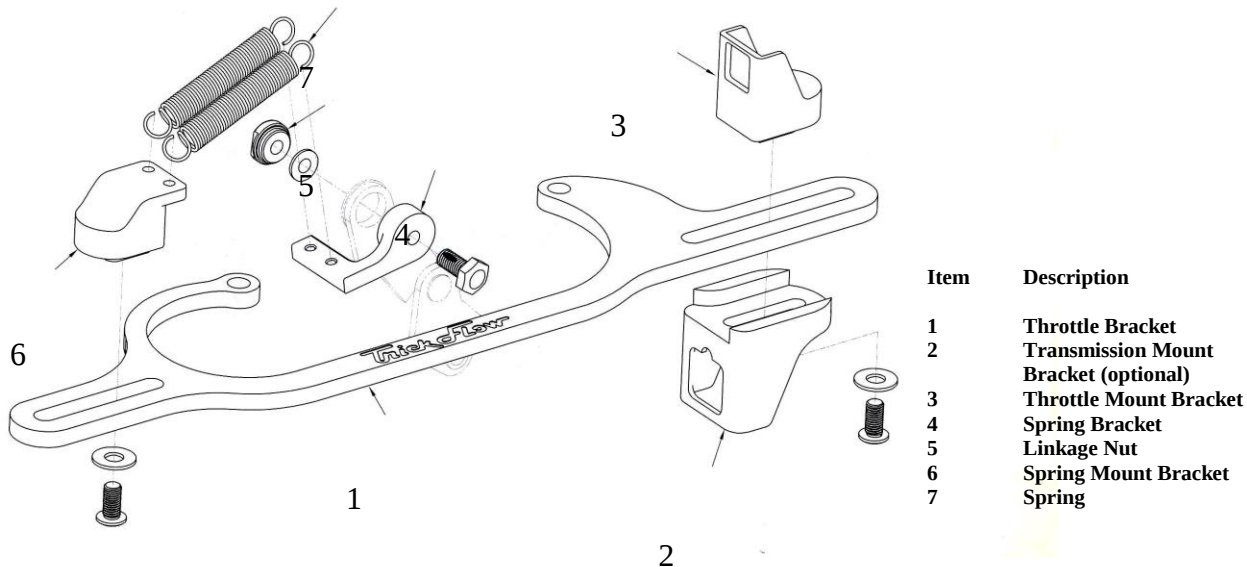


Installation Instructions

- 1.) Loosen and remove the nuts on the driver's side of the carburetor (front and rear) which connects it to the intake manifold.
- 2.) Remove any existing throttle brackets.
- 3.) Install the Trick Flow Bracket (1) and tighten the carburetor mounting nuts to your carburetor manufacturer's recommend torque specifications.
- 4.) Install the Spring Mount Bracket (6). Do not tighten the bracket down at this time; you will need to adjust the tension later.
- 5.) Install the Spring Bracket (4) according to the following diagrams:
 - Holley and Edelbrock carburetor applications

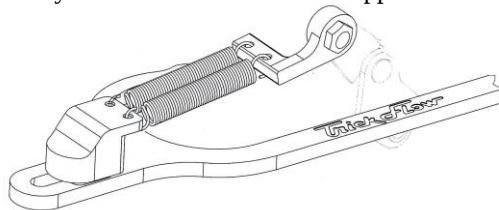

- Summit Racing Equipment carburetor applications

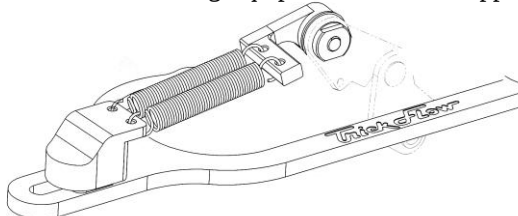

- For any other application, adjust the Spring Bracket (4) so that the holes line up with the Spring Mount Bracket (6), keeping the springs in-line and parallel.

- 6.) Place a drop of Red Locktite on the threads and tighten the Linkage Nut (5).
- 7.) Install the Springs (7) and set the tension to the Spring Mount (6). A drop of Red Locktite is also recommended on the Spring Mount bolt as well.
- 8.) Install the Throttle Mount Bracket (3) and Transmission Kick-Down Bracket (2) (purchased separately, if applicable) and position the cable for full throttle. Red Locktite is recommended.
- 9.) Double check that all bolts are tight and anything that you removed for installation has been reinstalled.

BE SURE TO CHECK FOR ANY CABLE BIND BEFORE STARTING THE VEHICLE.