



# **INSTALLATION INSTRUCTIONS**

## **BULL BAR**

**08-10 FORD F250/350/450/550 HD SUPERDUTY**


**PART NUMBER 2-0632 2-5632 2-55632**

**PARTS LIST:**


1	Bull Bar
1	Driver/Left side Mounting Bracket
1	Passenger/Right Mounting Bracket
4	10-1.50mm x 30mm Hex Head Bolts
4	10mm Nylock Nuts
8	10mm ID x 20mm OD x2mm Flat Washers

**PROCEDURE:**


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- 2. NOTE:** It may be necessary to remove/relocate front license plate and license plate bracket. It is not required, but strongly recommended. If local/state law requires a license plate, license plate relocation kit is available.
- 3.** From front of vehicle remove the driver side bumper mount bolts (Figure 2).  
**WARNING!** Do not remove passenger and driver bumper mount bolts at the same time. Remove one side at a time.
- 4.** Place Mounting Bracket onto vehicle and line it up against the outer gusset bend on the frame. Leave about 1/8" clearance between bottom of Mounting Bracket and bumper. Secure Mounting Bracket to vehicle using the factory bolts (Figure 3). Fully tighten these bolts at this time.
- 5.** Once the driver side Mounting Bracket is fully tightened, repeat steps 2 - 4 for passenger side Mounting Bracket.
- 6.** With help position Bull Bar on the outer side of Mounting Brackets. Attach Bull Bar to Mounting Brackets using the included (4) 10mm x 30mm Hex Head Bolts, (4) 10mm Nylock Nuts, and (8) Flat Washers (Figure 4). Do not tighten at this time.
- 7.** Level and adjust Bull Bar as desired, then tighten all hardware at this time.
- 8.** Do periodic inspections to the installation to make sure that all hardware is secure and tight.

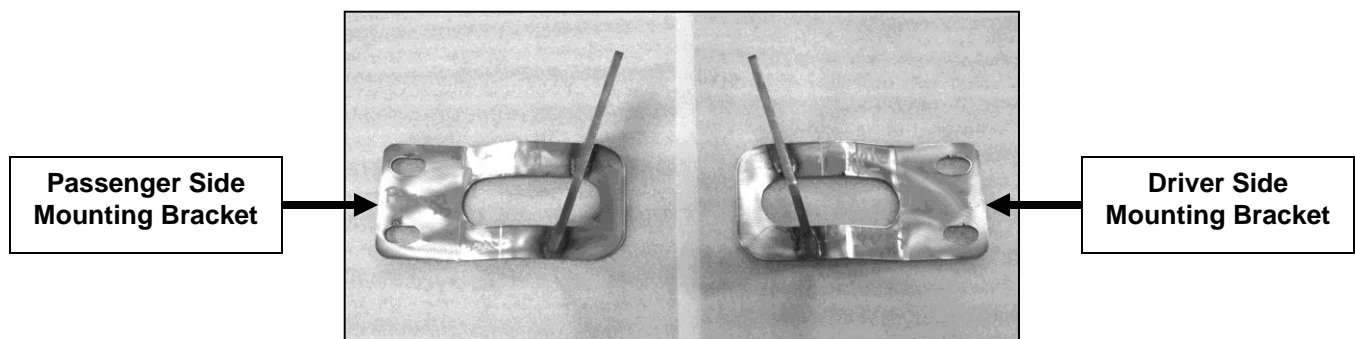


**Figure 1**

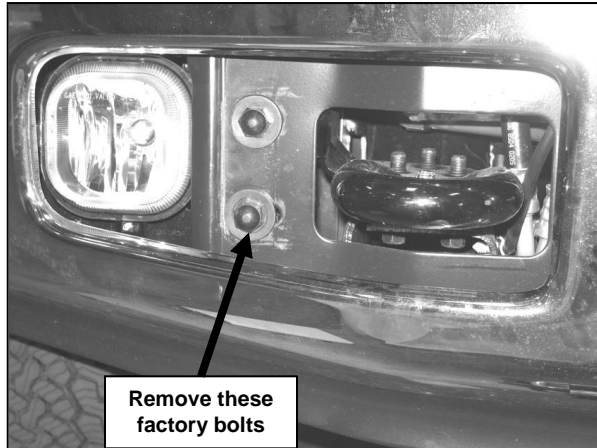

**Figure 2**

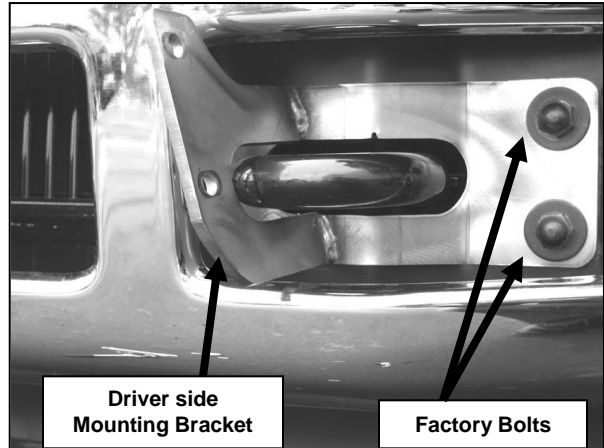

**Figure 3**

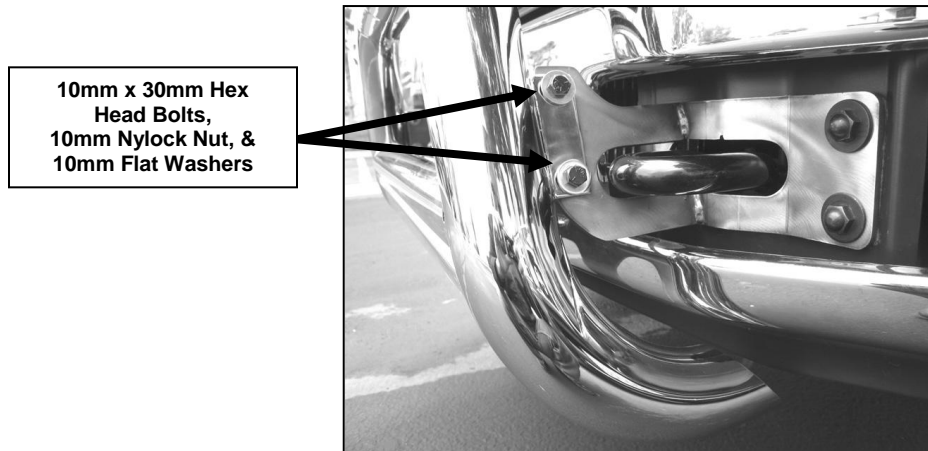

**Figure 4**

