



INSTALLATION INSTRUCTION

GRILLE GUARD

**99-02 CHEVROLET SILVERADO 1/2 TON /
00-06 SUBURBAN 1/2 TON/00-06 TAHOE 1/2 TON/
05 CHEVY TAHOE Z71
PART #3-5810**



99-02 Chevrolet Silverado 1/2 ton / 00-06 Suburban 1/2 Ton/00-06 Tahoe 1/2 Ton/ 05 Chevy Tahoe Z71

- 1 Set Front Guard
- 1 Set Lower Support Brackets (LEFT & RIGHT, WHEN SITTING IN THE CAR)
- 10 pc M12 x 30 Hex Bolt-zinc plated
- 10 pc M12 Lock Nut-zinc plated
- 20 pc M12 Flat washer-zinc plated

NOTE: Please read this information before attempting to install this product. The manufacturer is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product. Check components received with components listed below. **NO DRILLING REQUIRED.**

Step One: Remove the factory tow hooks from the vehicle if so equipped. If the vehicle did not come with the factory tow hooks it is necessary cut out the area of the lower valance where the hooks would have been.

Step Two: Locate Left Lower Support Bracket, Two M12 x 30 Bolts, Two Lock Nuts, and Four Flat washers. Position bracket under the frame. Loosely attach the Left Lower Support Bracket to frame using the hardware listed in this step (Figure 1). Repeat this procedure on the opposite side of vehicle.

Step Three: Locate the remaining M12 hardware and position the Front Guard to the inside of the Support Brackets. Attach the Guard to the Support Brackets using the hardware listed in this step (Figure 2). Maintain a 3/16" gap between the guard and the vehicle's bumper.

Step Four: After checking for proper clearance and alignment of the Front Guard on the vehicle fully tighten all hardware.

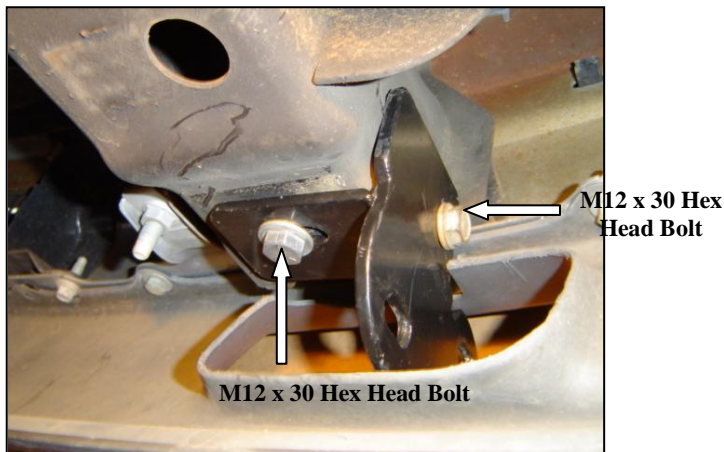


Figure 1



Figure 2