



INSTALLATION INSTRUCTIONS

3," 4" and 4-1/2" CRADLE MOUNT SIDEBAR


06-10 HUMMER H3

PART NUMBER 1-0682 1-5682

3," 4" and 4-1/2" CRADLE MOUNT SIDEBAR
06-10 HUMMER H3

PARTS LIST:

1	Driver/Left Sidebar	8	10-1.5mm x 30mm Hex Head Bolts
1	Passenger/Right Sidebar	8	10mm Lock Washers
1	Driver/Left front Mounting Bracket	8	10mm ID x 27mm OD x 3mm Flat Washers
1	Passenger/Right front Mounting Bracket	8	8-1.25mm x 25mm Hex Bolts
1	Driver/Left rear Mounting Bracket	8	8mm Lock Washers
1	Passenger/Right rear Mounting Bracket	8	8mm ID x 24mm OD x 2mm Flat Washers

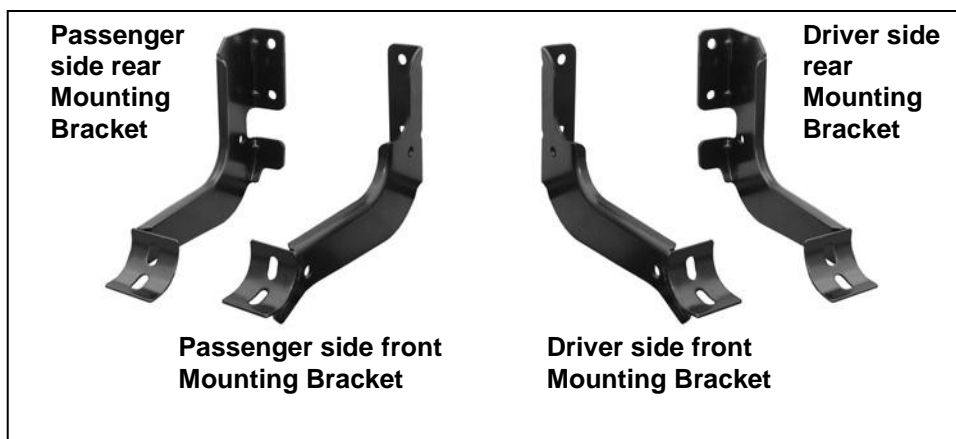

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Starting on the driver side of the vehicle, locate the two threaded holes toward the front of the frame. Select the driver side Front Mounting Bracket and bolt it to the threaded holes with (2) 10-1.5mm x 30mm Hex Bolts, (2) 10mm Flat Washers and (2) 10mm Lock Washers, **(Figure 1)**. Snug but do not tighten hardware at this time. Repeat this step for the rear Mounting Bracket installation, **(Figure 2)**.
3. Carefully place the passenger Sidebar up to the Mounting Brackets and use the included (4) 8mm x 25mm Hex Bolts, (4) 8mm Flat Washers and (4) 8mm Lock Washers, **(Figure 1)**. Do not tighten at this time.
4. Level and adjust Sidebar properly and then tighten all hardware.
5. Repeat steps 2 – 4 for passenger Sidebar installation.
6. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

3," 4" and 4-1/2" CRADLE MOUNT SIDEBAR
06-10 HUMMER H3

Driver Side Installation Pictured

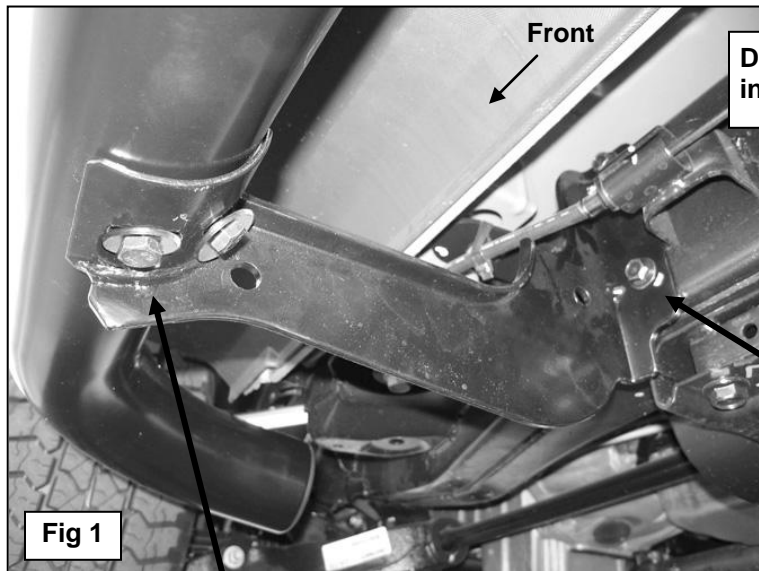

Driver side front
installation pictured

10-1.5mm x 30mm Hex Bolts
10mm Flat Washers
10mm Lock Washers

8-1.25mm x 25mm Hex Bolts
8mm Flat Washers
8mm Lock Washers

Driver side rear
installation pictured

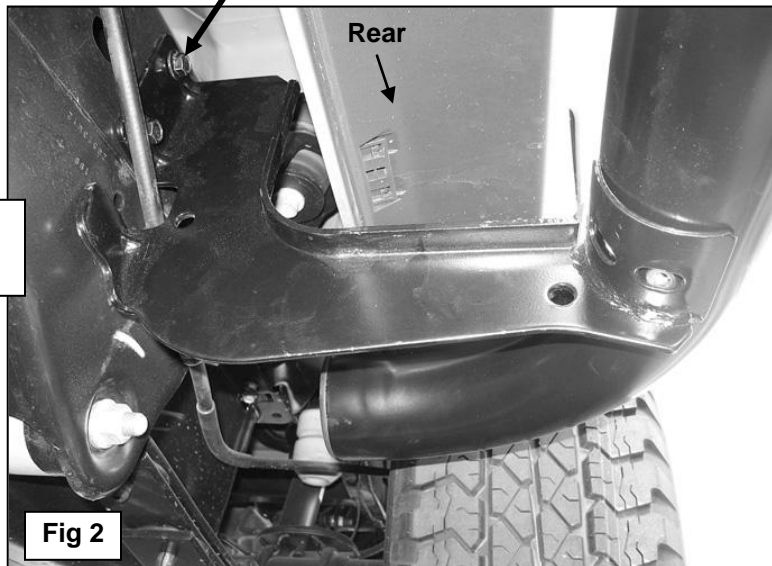


Fig 2



Complete installation