
## **ALTERNATOR INSTALLATION INSTRUCTIONS**






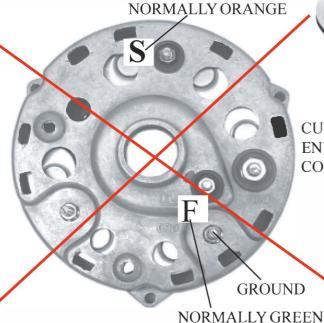

CUT THE EYELETS OFF THE ORIGINAL HARNESS WIRE ENDS FROM "S" & "F" TERMINALS. CRIMP ON NEW CONNECTORS PROVIDED





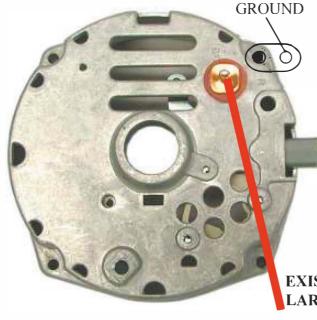

YELLOW TO "S" ON REGULATOR THROUGH HARNESS

CRIMP CRIMP

GREEN TO "F" ON REGULATOR THROUGH HARNESS

EXISTING LARGE RED