

INSTALLATION INSTRUCTIONS

2007-2018 JK Wrangler Tailgate Lockbox #359

PARTS CHECKLIST

QC CHECK

SHIP PACK CONTENTS
VISUAL INSPECTION
RUBBER SEALS
LOCK FUNCTION TEST
SHIPPING/KEY PACK







SHIPPING PACKAGE CHECKLIST



#11.1 (4) PLASTIC INSERT(IN KEY BAG)



#11.2 (2) 29 ½" "DOUBLE" D-SEAL



#11.3 (4) #10 x 5/8" SCREW



#11.4 (4) #10 FLAT WASHER



#11.5 (6) #10-32 x 3/16" SCREW

Tools needed for standard installation


Panel Removal Tool


Phillips Head Screwdriver

PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

1. Remove all the contents from the shipping box and confirm that you have all the items listed above.

2. Open the tailgate and remove the trim panel from the inner surface, by lifting at the bottom of the panel. See Figure 1

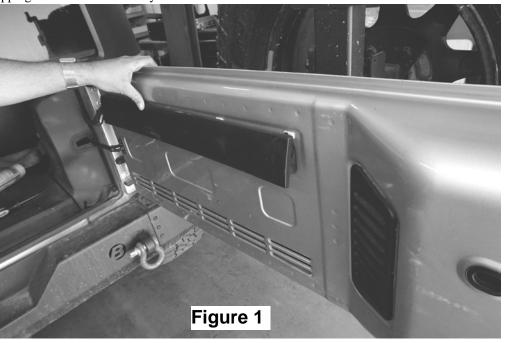

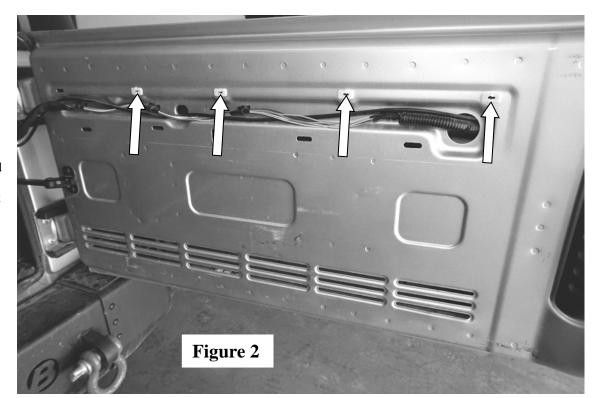


3. Install (4) #11.1
Plastic Inserts(found in the key bag) into the upper-right most holes, as shown in Figure 2.

4. Separate the #11.2 Double D-Seal into two pieces (lengthwise) and apply them to the back of the 359 Lockbox as shown in Figure 3.


NOTE: The D-seal should be placed as close to the top and bottom of the Lockbox as practical.


NOTE: 1 3/4" rise/drop along the angled edge matches the contour of the tailgate surface.

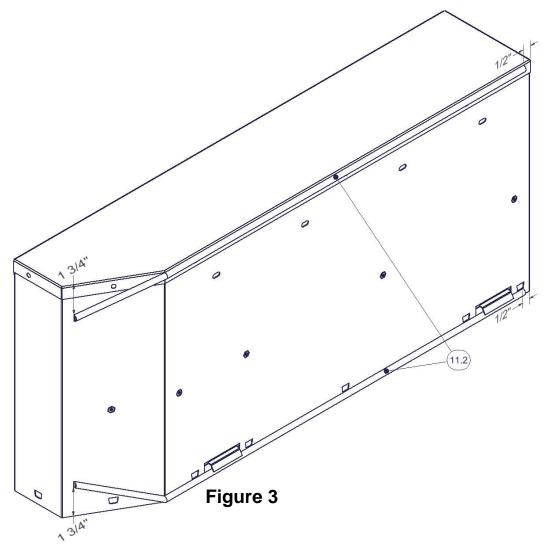


5. Insert the metal tabs at the bottom of the #359 Lockbox into the indicated slots at the bottom of the tailgate and rotate into place. See Figures 4 and 5.

NOTE: Arrows indicate metal tabs and correct tailgate slots.

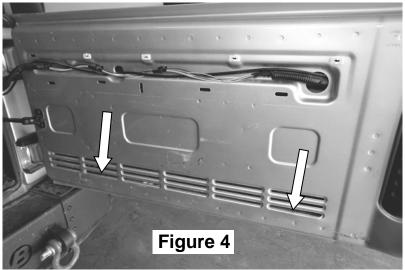

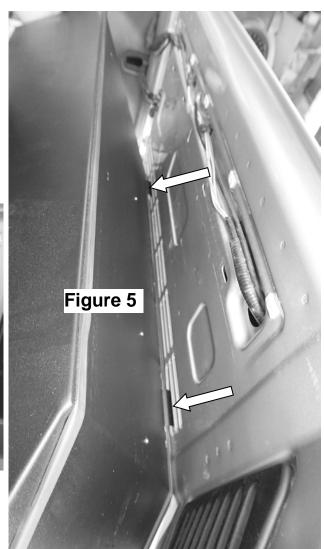

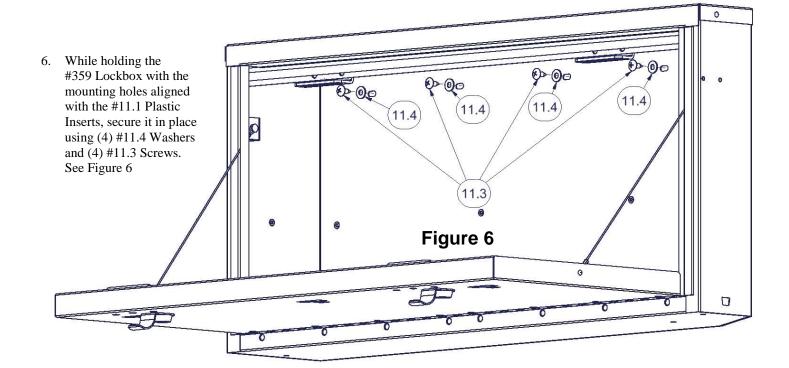

7. Install the removable shelves (#8 and #9) using the (6) #11.5 Machine Screws. See Figure 7

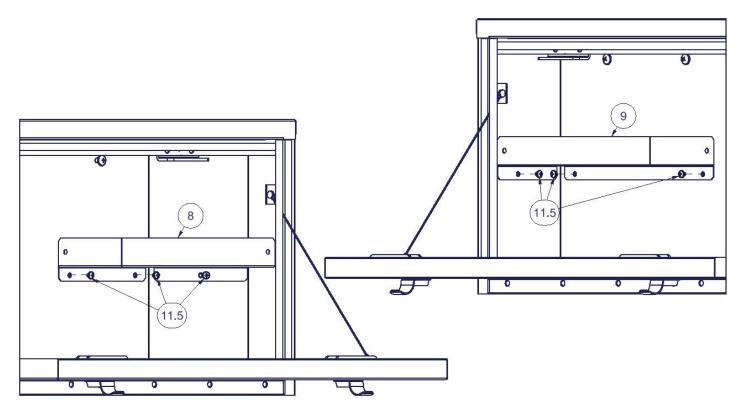


Figure 7

CAUTION: Lid may be used as a table but should not be loaded beyond 40lbs (18 kg), replacement cables are available from Tuffy Security Products.