

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit


TYC #: 800015C

Estimated Time : 5 min.

Replacement for OEM
1K1 819 653 A (OLD)
1K1 819 653 B (NEW)

06-10 Audi A3
07-10 Volkswagen EOS
06-10 Volkswagen GTI Gen 5


05-10 Volkswagen Jetta Gen 5
06-10 Volkswagen Passat
06-10 Volkswagen Rabbit
09-10 Volkswagen Wagon

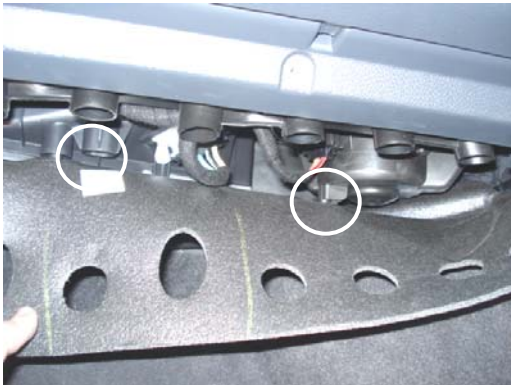

1. The filter is located below the glove compartment. Pull down the foam cover sheet to expose 2 plastic screws that secure it in place. Using a flat-head screwdriver, remove the screws and pull off foam cover.



3. Remove the old filter by sliding it downwards. Insert new TYC filter by sliding it up into the old filter's position. Ensure that Air Flow arrow is pointing to the vehicle's cabin.

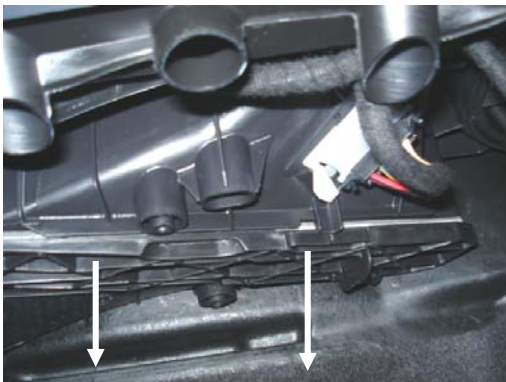

2. The filter is housed within the plastic filter access door shown. Pull down on the door to remove it. Set door aside.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Discover other A/C and heating parts on our website.