

# TYC™

## CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit


**TYC #: 800026P**

Estimated Time : 5 min.

Replacement for OEM  
97133 3K000

06-10 Hyundai Azera  
06-10 Hyundai Santa Fe  
**06-10 Hyundai Sonata**

06-10 Kia Optima

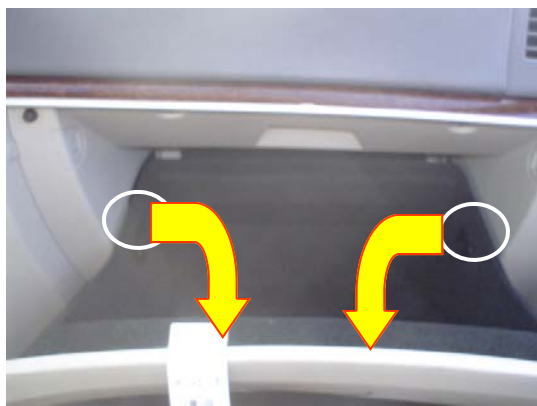

1. The filters are located behind the glove compartment. Open glove box and push in on the sides while pulling down to disengage the latches.



2. Locate retaining arm on the bottom right of glove box. Pull arm towards the right to disconnect. Allow glove box to swing down on its hinges.



3. Push on the retaining latches to release the filter frame, and slide it out. Replace old filter with new TYC filter into the filter frame, making sure that the Air flow arrow is pointing down.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Discover other A/C and heating parts on our website.