

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800031C


Estimated Time : 10 min.

Replacement for OEM
64 31 8 409 044

00-05 BMW X5

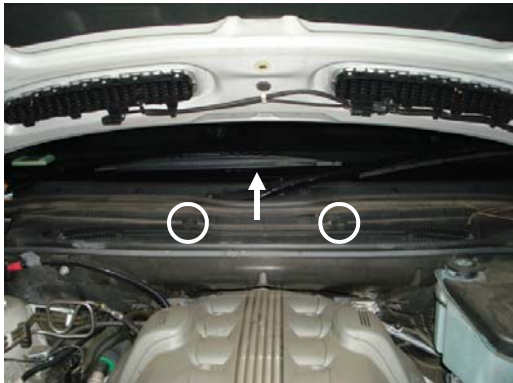

1. The filter is located under the hood, under the windshield. Locate and loosen the 2 screws securing the filter cover, lift up the cover to expose the filter under it.

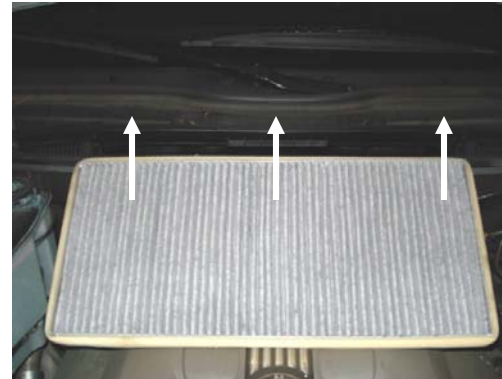

3. Slide new TYC filter into cavity. Ensure that Air Flow arrow is pointing down.

4. Reinstall in reverse order.



2. Slide out the old filter towards the front of the car.