

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800037P

Estimated Time : 5 min.

Replacement for OEM
YL8Z 19N619 AB

01-07 Ford Escape
01-06 Mazda Tribute (OP)
05-07 Mercury Mariner

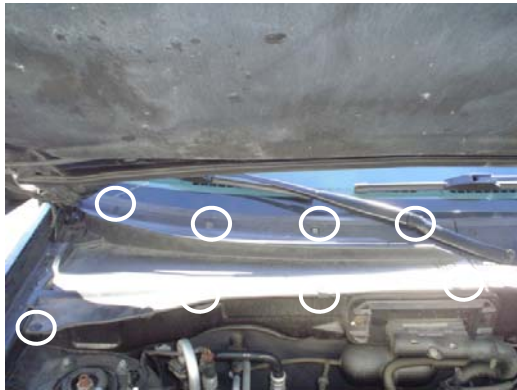

1. The filter is located under the hood, below the windshield on the passenger side. Remove the 4 plastic retainers and 4 screws to loosen the cover.



3. Remove old filter from the tray, insert new TYC filter in its place. Ensure that the Air Flow arrow is pointing down.

4. Reinstall in reverse order.



2. Lift up the plastic cover to expose the filter cover. Lift up filter cover and slide it out.

*OP = Cabin Air Filter is an OPTION on this application. Some vehicles may not come equipped with a Cabin Air Filter.

Installation guide pictures are from the **BOLD** vehicle model.