

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800041P

Estimated Time : 5 min.

Replacement for OEM
1H0 819 644 B

00-06 Audi TT Coupe/Roadster (Up to Car#14000)
99-05 Volkswagen Golf/GTI GEN 4
01-05 Volkswagen Passat

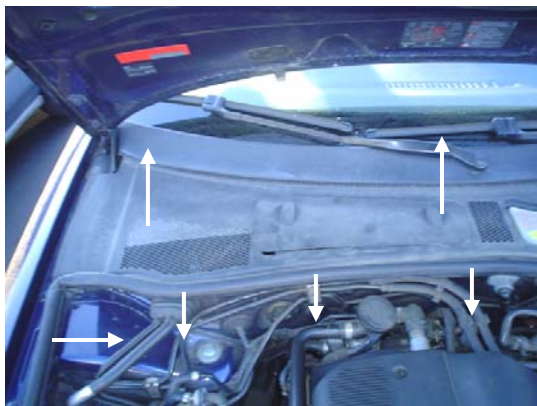

1. The filter is located under the hood at the passenger side. Pull away the rubber lining found at the end of the cowl cover, and lift it up. Filter is located under the cowl cover.



3. Pull up filter and slide it out. Replace with new TYC filter. Ensure that Air Flow arrow is pointing down.
4. Reinstall in reverse order.



2. Pull up on the plastic hook that secures the old filter in place and set hook aside.

Installation guide pictures are from the **BOLD** vehicle model.

Discover other A/C and heating parts on our website.