



- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

**TYC #: 800055C**


Estimated Time : 10 min.

Replacement for OEM  
64 31 1 496 710 (Particle)  
64 31 1 496 711 (Combination)

02-06 Mini Cooper / Cooper S




1. The filter is located below the glove compartment, at the passenger side kick panel. Remove the plastic cover by pulling it downwards.

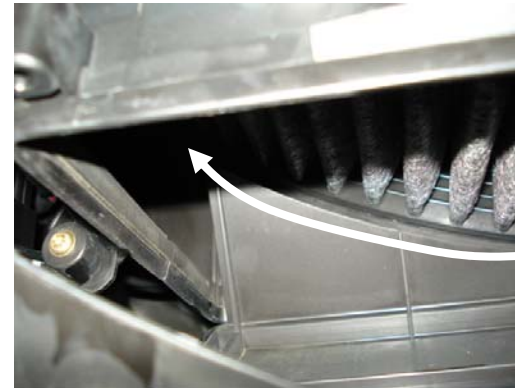

3. Install new TYC filter by sliding filter up into the cavity of the vehicle, in a similar curved position. Ensure that Air Flow arrow is pointing down.

4. Reinstall in reverse order.

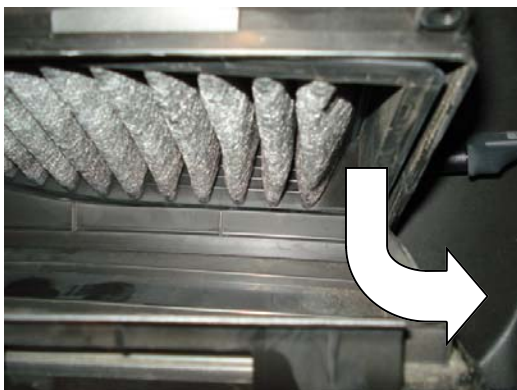

2. The filter will be visible once the cover is pulled down. Pull down old filter and slide to the right to remove.  
Note: Filter is installed in a curved position in the vehicle.